

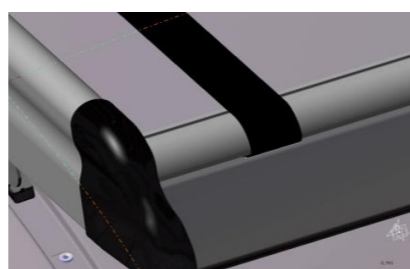


Feet Kit

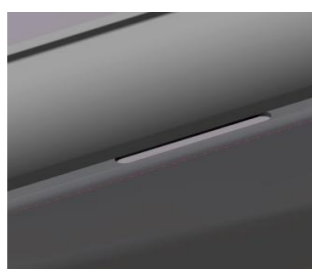

2000Km

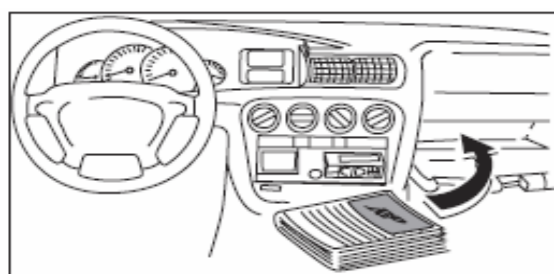


Fitting instructions

Type: 9078555

Make: Peugeot/Citr en

Partner L1/L2 2008->

Berlingo L1/L2 2008->

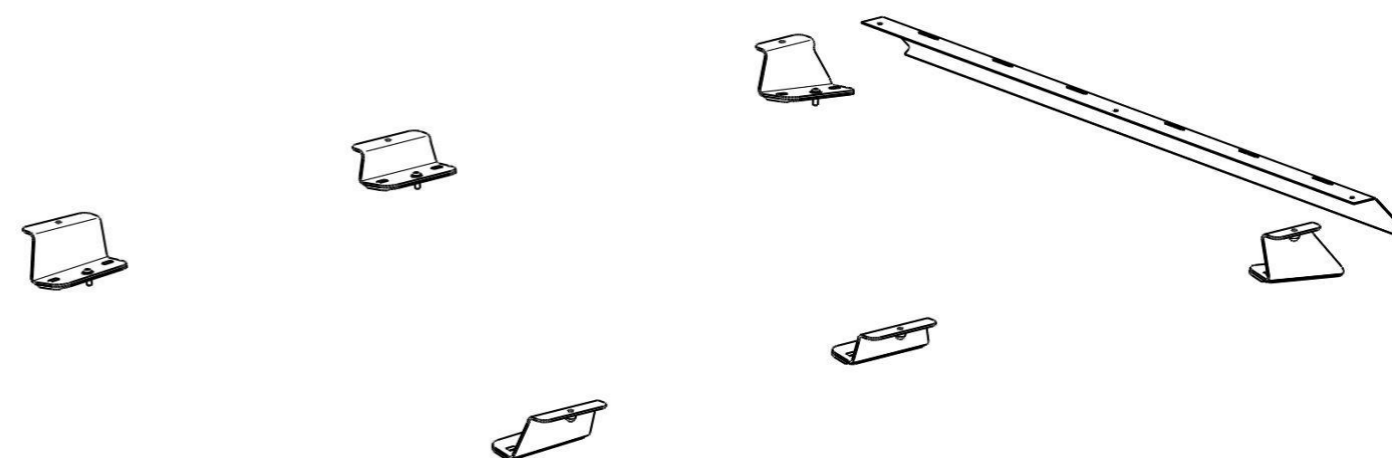

- NL Montagehandleiding
- GB Fitting instruction
- D Montageanleitung
- F Instruction de montage
- S Monteringsanvisningar
- DK Montagevejledning
- E Instrucciones de montaje
- I Istruzioni per il montaggio
- PL Instrukcja montau
- SF Asennusohjeet
- CZ Pokyny k monti
- H Szerelési útmutat 
- RUS Рукoвoдствo для мoнтaжa



Your perfect fit
brink.eu

