

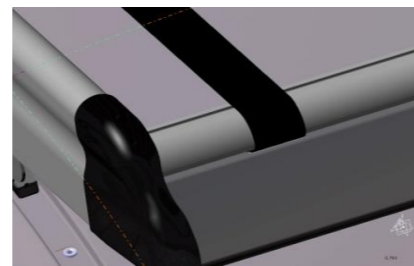
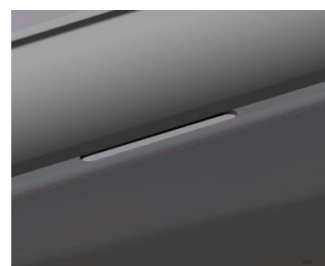
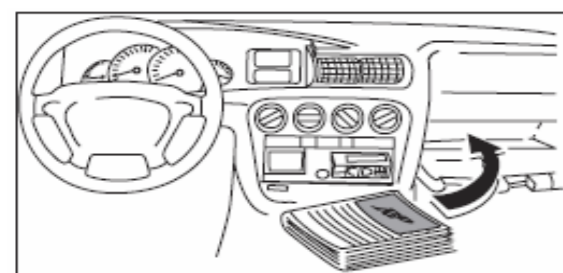



Feet Kit

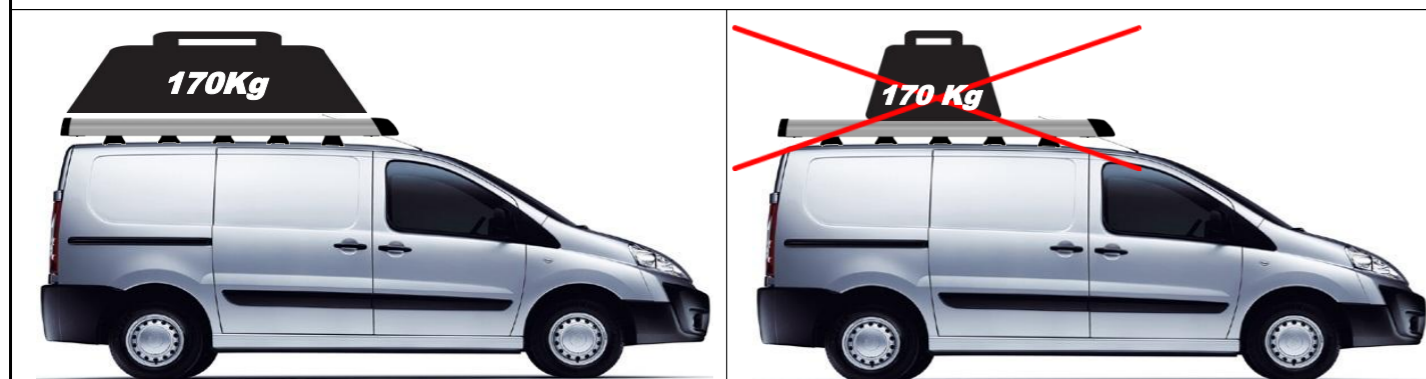

Fitting instructions	
Type:	9078560
Make:	Peugeot/Citrôen/Fiat
	Expert L1 2007 ->
	Jumpy L1/2007->
	Scudo L1/2007->

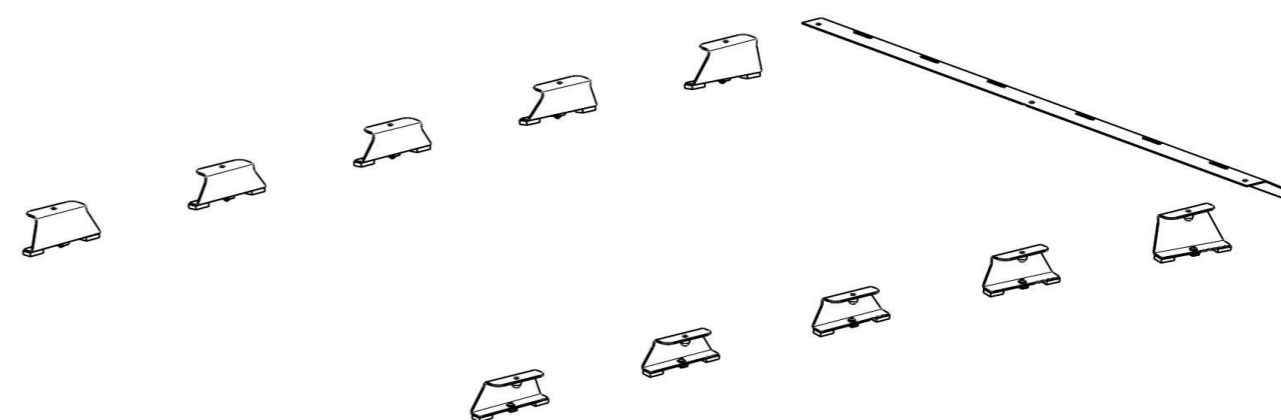

- NL Montagehandleiding
- GB Fitting instruction
- D Montageanleitung
- F Instruction de montage
- S Monteringsanvisningar
- DK Montagevejledning
- E Instrucciones de montaje
- I Istruzioni per il montaggio
- PL Instrukcja montażu
- SF Asennusohjeet
- CZ Pokyny k montáži
- H Szerelési útmutató
- RUS Руководство для монтажа



Your perfect fit
brink.eu

