


# Feet Kit

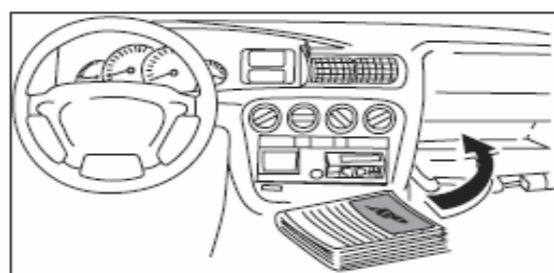


Fitting instructions

Type: 9078565

Make: Ford

Transit Custom L1 2015 ->

Transit Custom L2 2015 ->

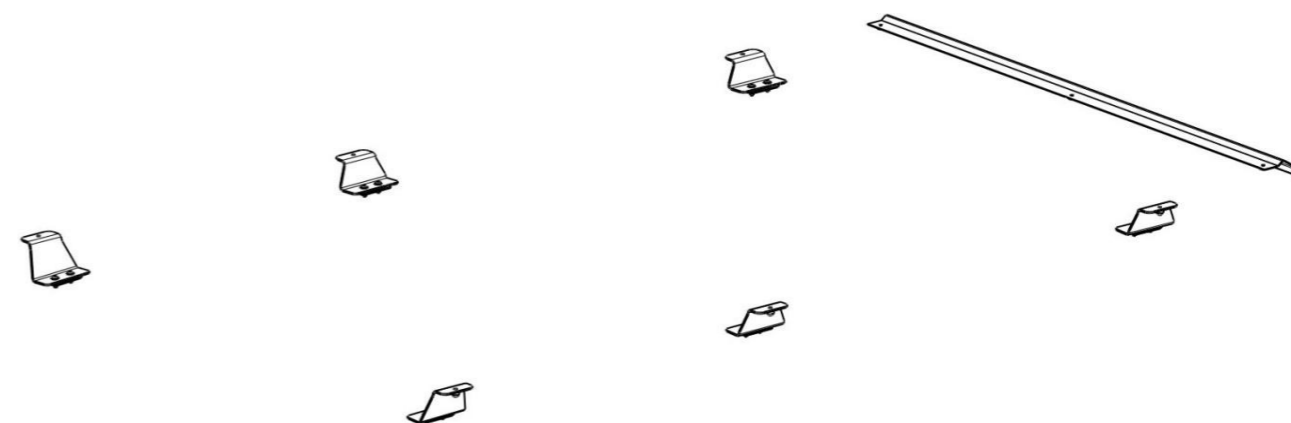

- NL Montagehandleiding
- GB Fitting instruction
- D Montageanleitung
- F Instruction de montage
- S Monteringsanvisningar
- DK Montagevejledning
- E Instrucciones de montaje
- I Istruzioni per il montaggio
- PL Instrukcja montażu
- SF Asennusohjeet
- CZ Pokyny k montáži
- H Szerelési útmutató
- RUS Руководство для монтажа

**BRiNK**

Your perfect fit  
brink.eu

