


ISSUE:	DRAWN BY:	CHECKED BY:	CRF No:	DATE:	DESCRIPTION:
a	SJ	KB	2758	02/08/22	First Issue
b					
c					
d					
e					
f					
g					
h					
i					
j					
k					
l					
m					

KB3PR/FL





KammBar

Instructions


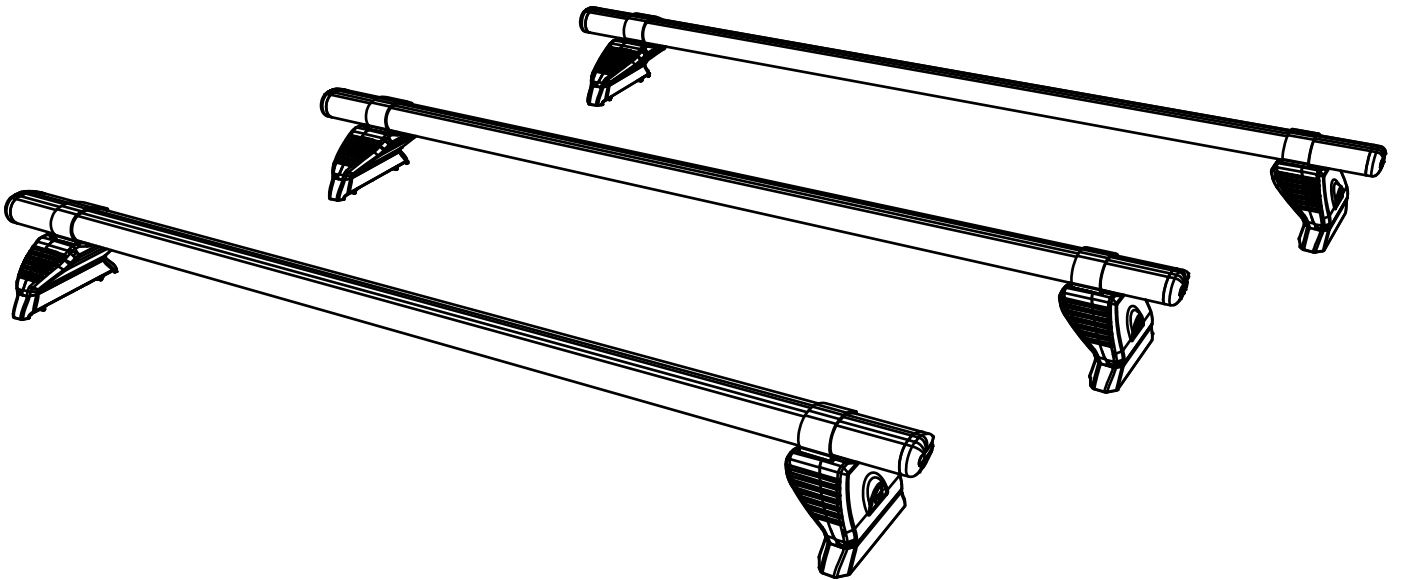


CITY CRASH (✓)



According to ISO/ PAS 11154:2006

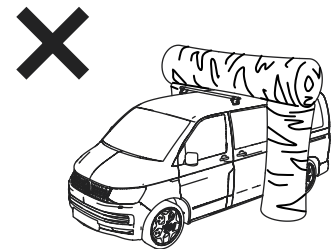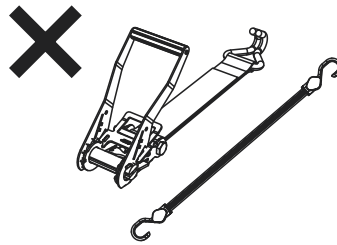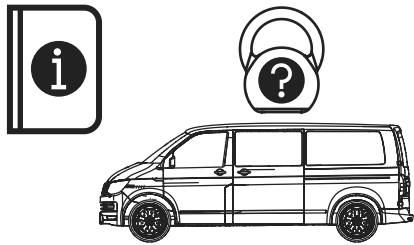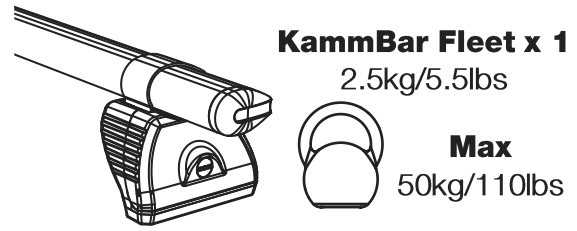











KammBar Pro

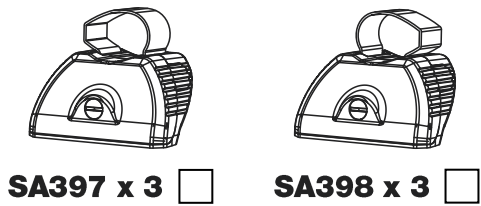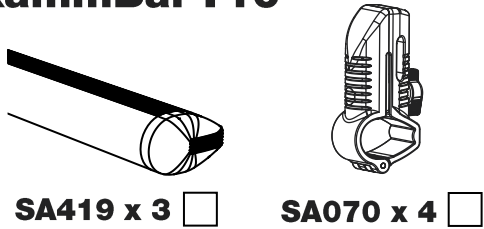


KammBar Fleet

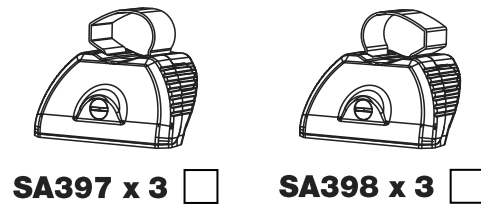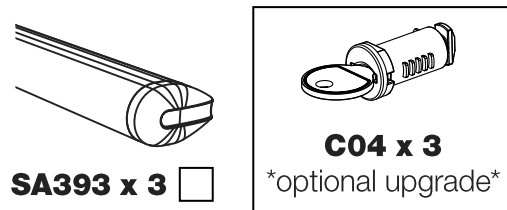


Fitting Kit

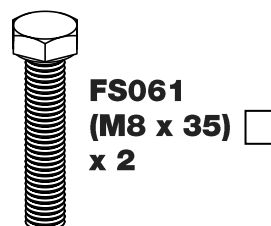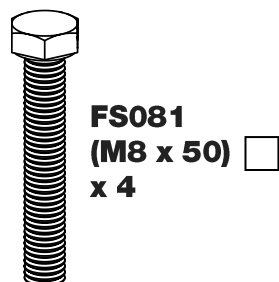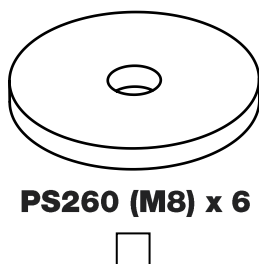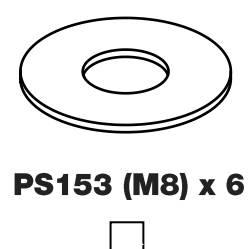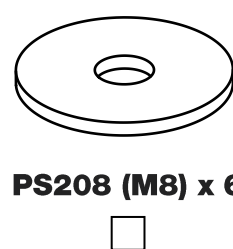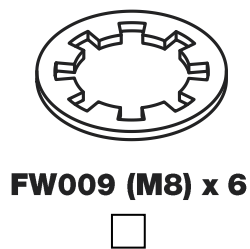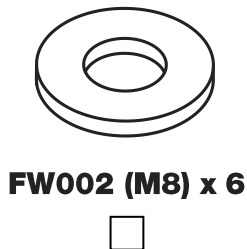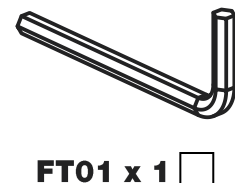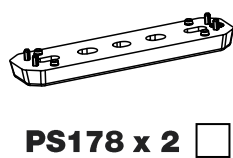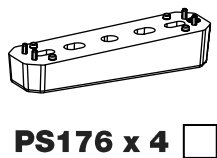


1.

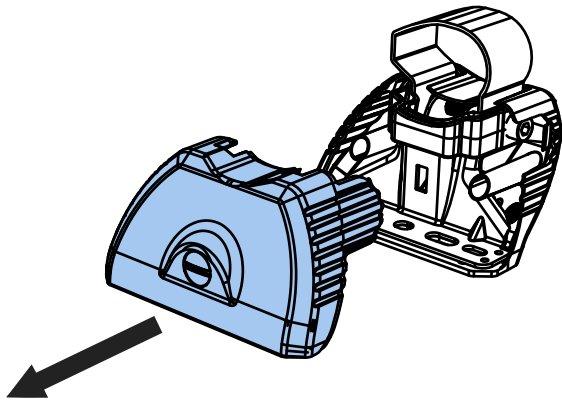

2.

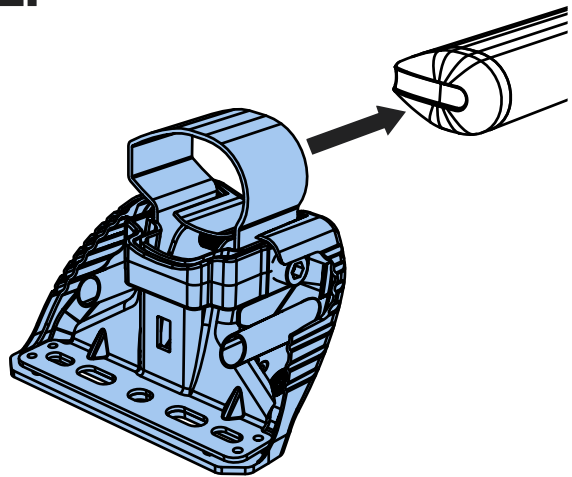


3.




SA397

PS176




SA397

PS178




SA397

PS176

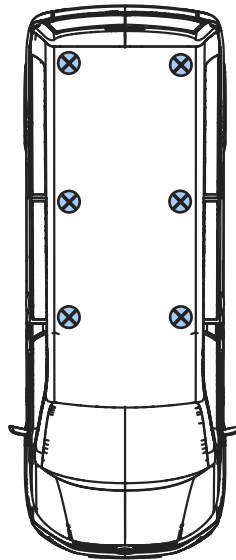


SA398




PS176

SA398



PS178

SA398










PS176

4.


MODEL	PS153	PS260
Kangoo	✓	✗
NV200	✗	✗
Citan	✓	✗
Caddy Maxi	✗	✓

5.

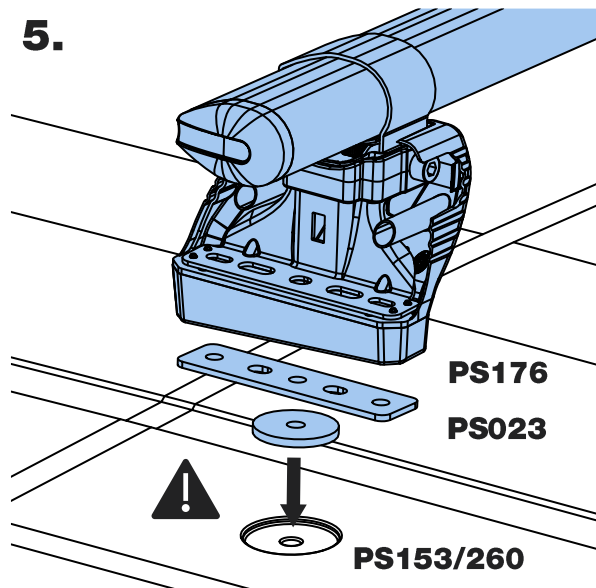


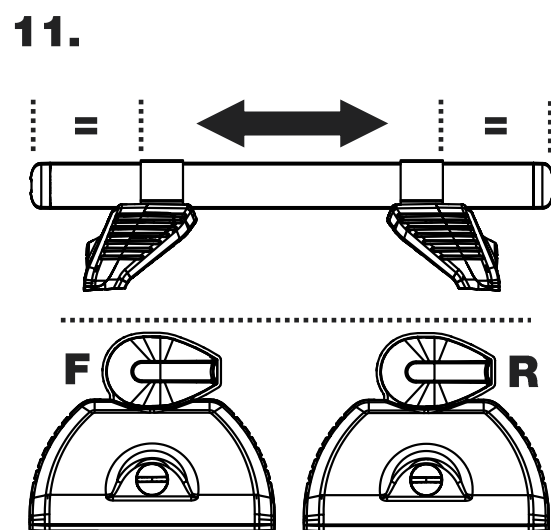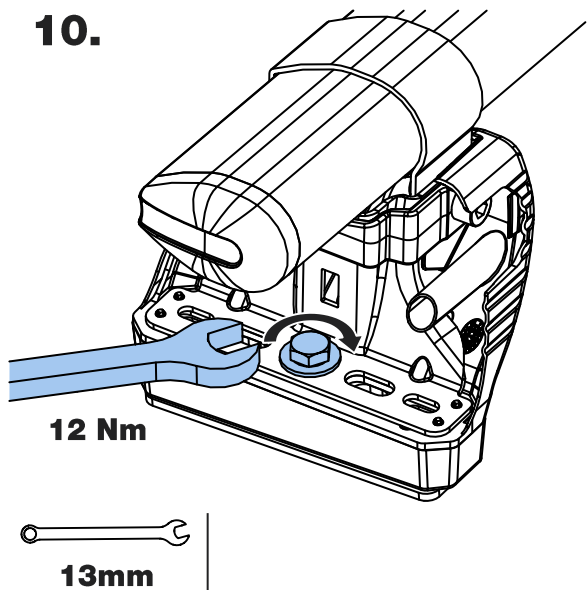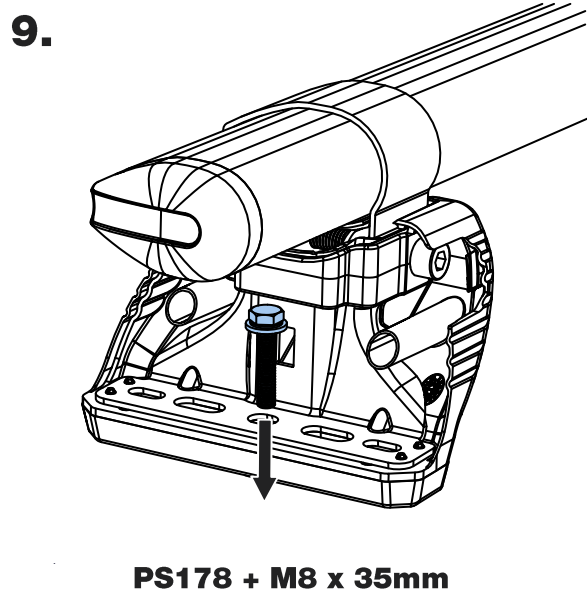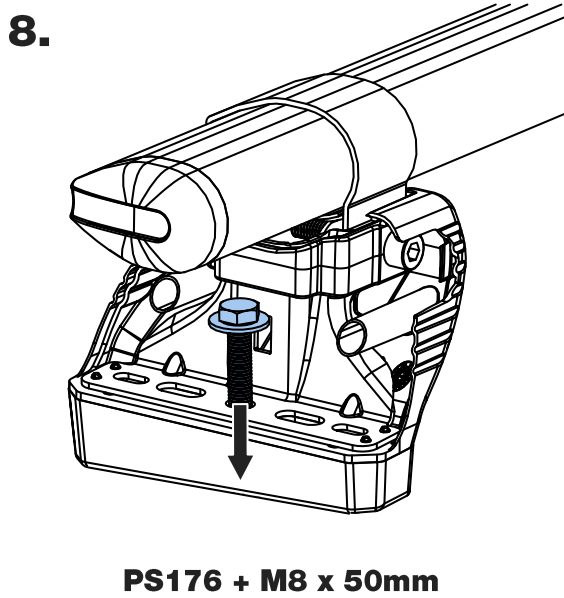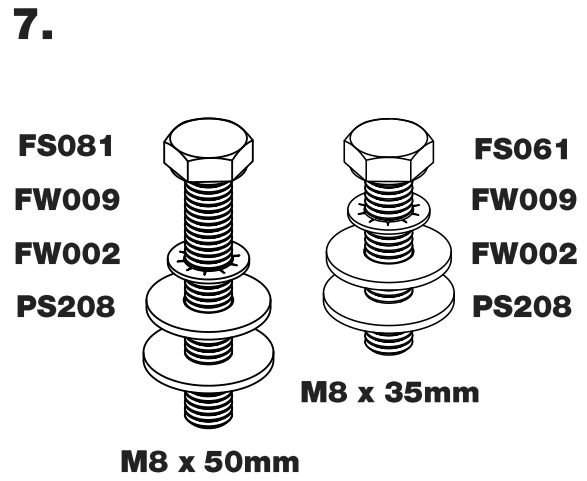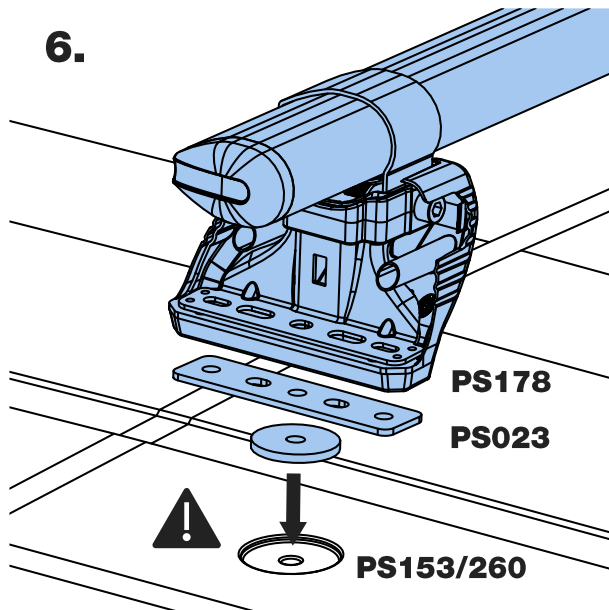


12.

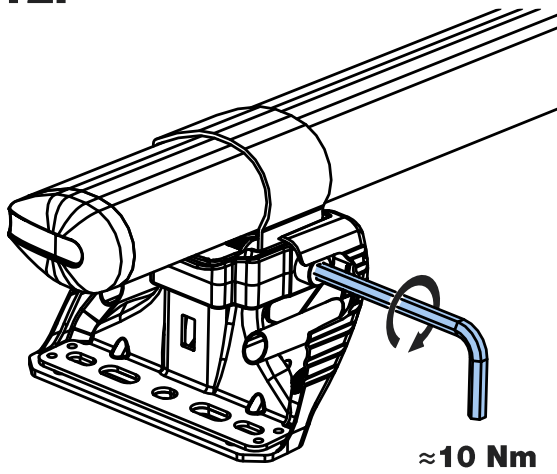

13.

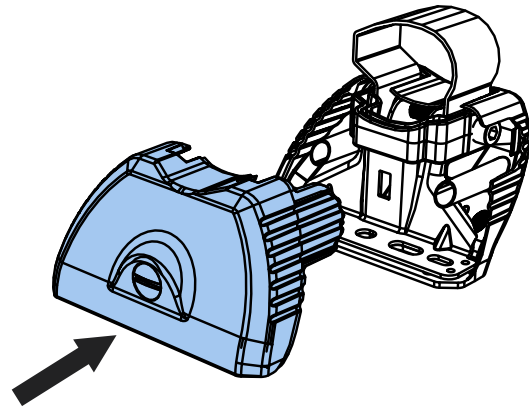

14.

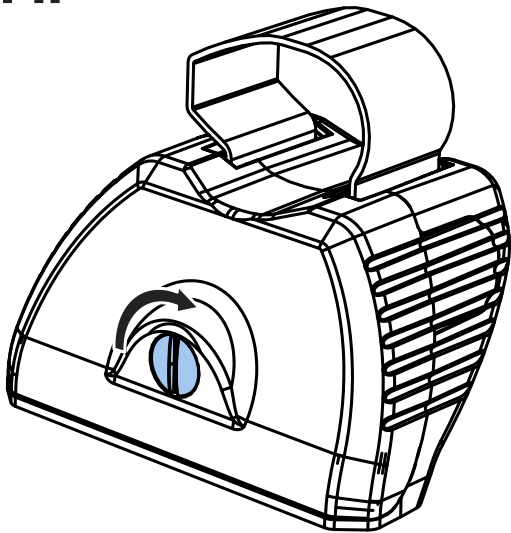

15.

