






MC2PR/FLR

KammBar


Instructions

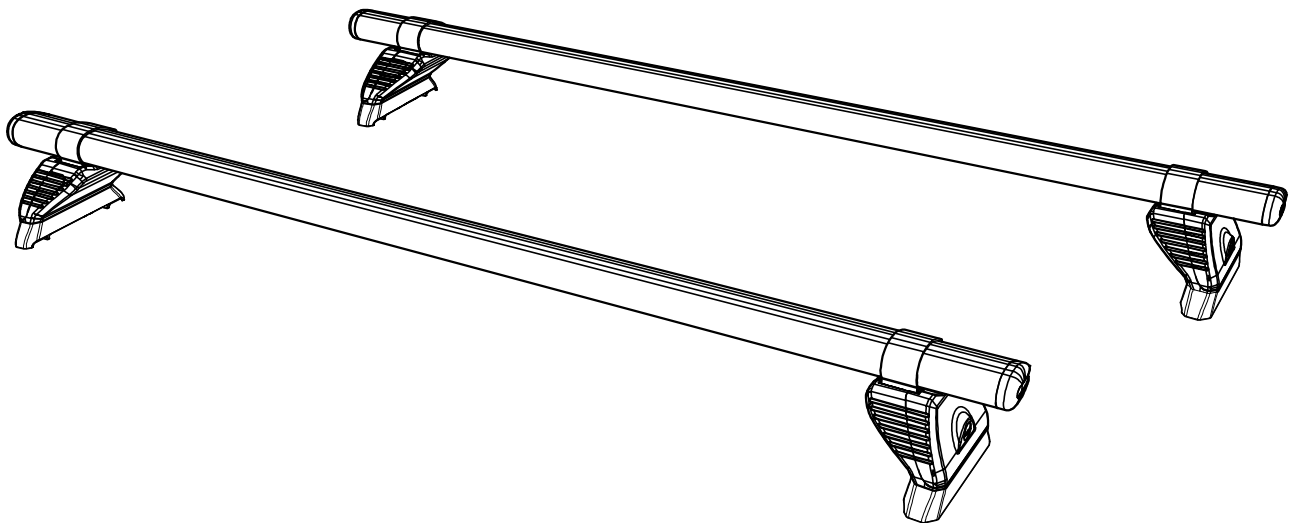


CITY CRASH (✓)
According to ISO/ PAS 11154:2006

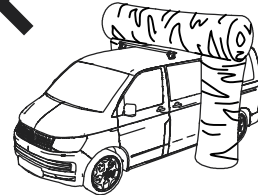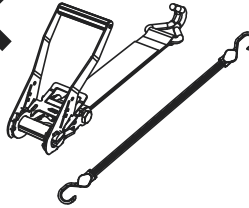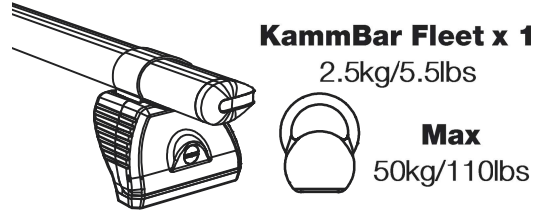

KammBar Pro

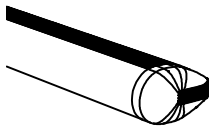

SA421 x 2



SA070 x 4




SA397 x 2




SA398 x 2


KammBar Fleet

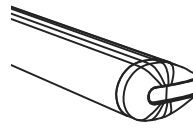

SA395 x 2



C04 x 2
optional upgrade

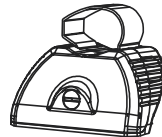


SA397 x 2




SA398 x 2

Fitting Kit




PS325 x 4




PS023 x 4



FT01 x 1

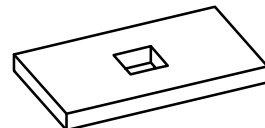


MS209 x 8




PS020 x 4




FN006 (M8) x 8



FW002 (M8) x 8




FS107
(M8 x 75)
x 4




FS293
(M8 x 65)
x 8


1.

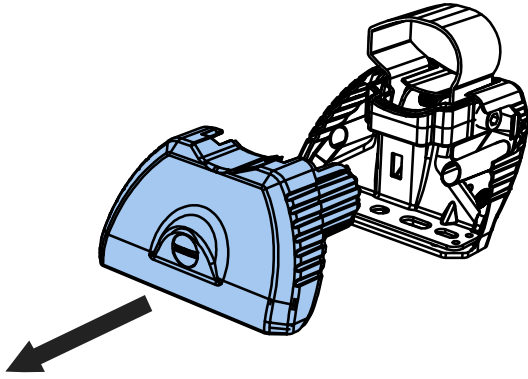


2.

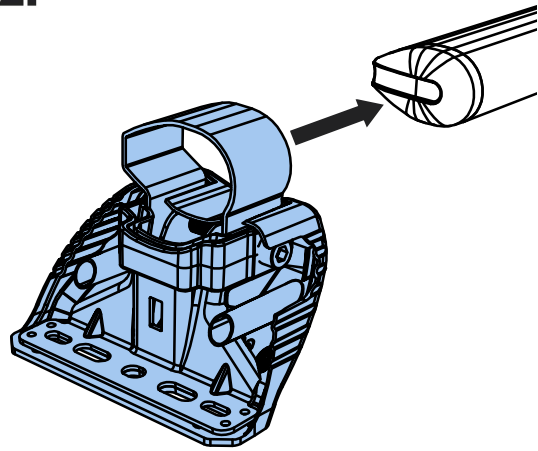



3.

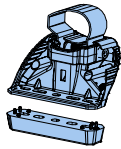


SA397
PS325

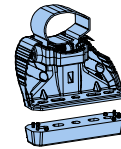

SA398
PS325

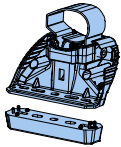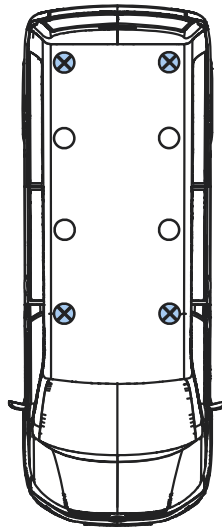


SA397
PS325

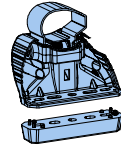


SA398
PS325

4.

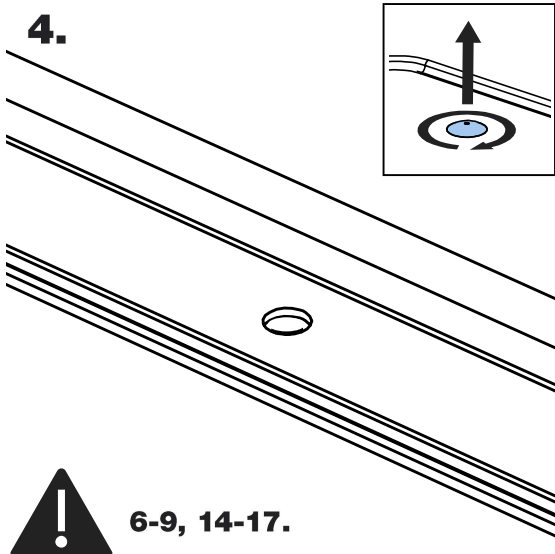

6-9, 14-17.

5.

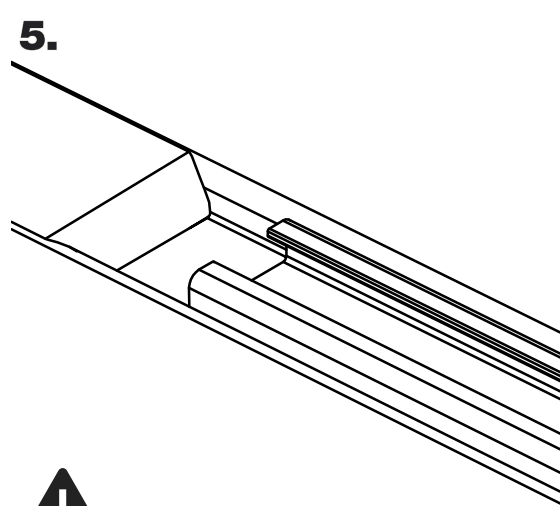

10-17.

