


GA3PR/FL




KammBar

Instructions


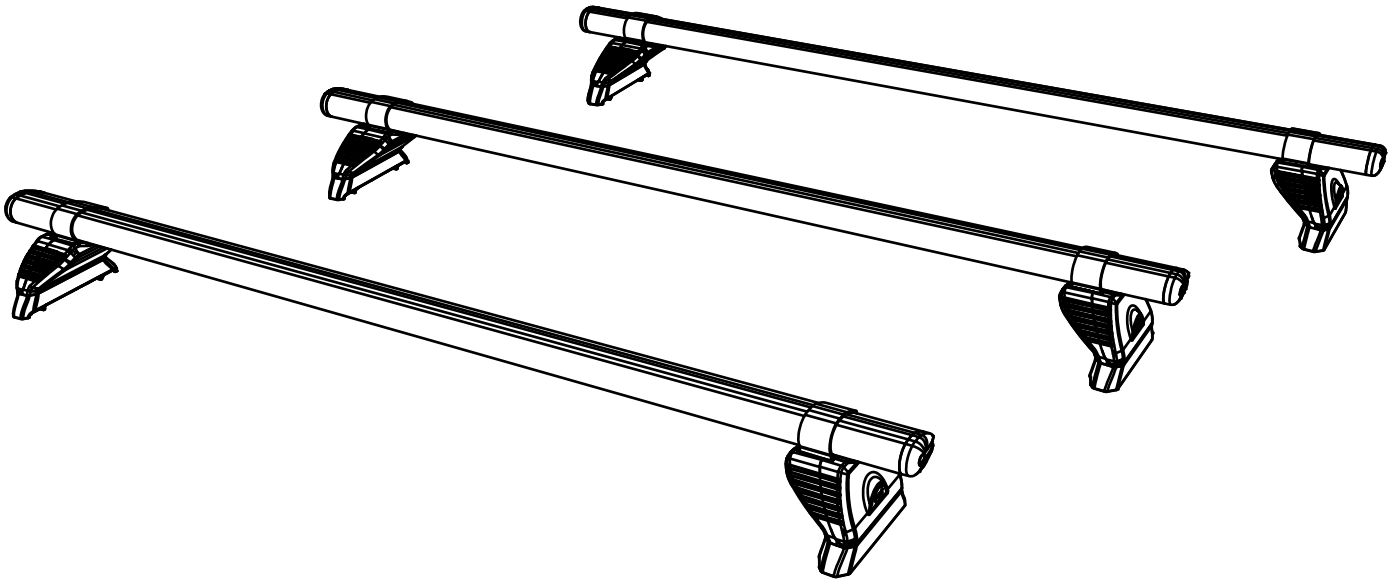


CITY CRASH (✓)



According to ISO/ PAS 11154:2006

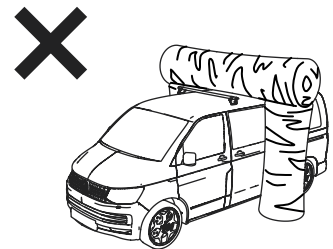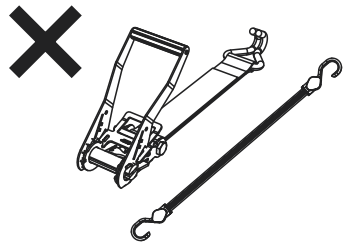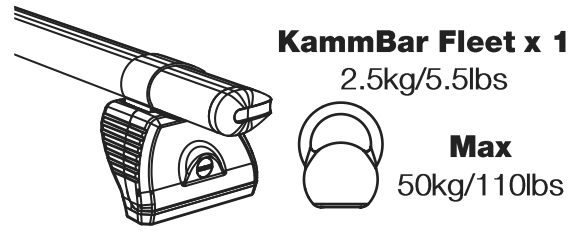





KammBar Pro

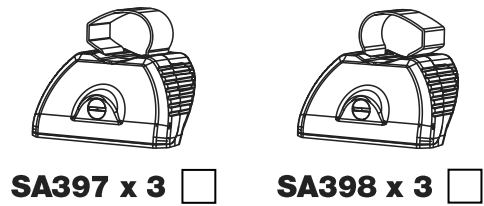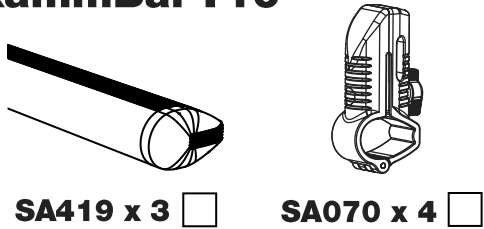


KammBar Fleet

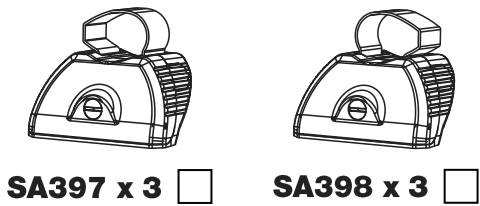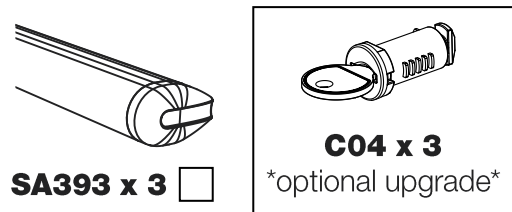


Fitting Kit

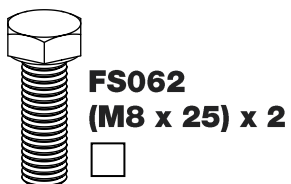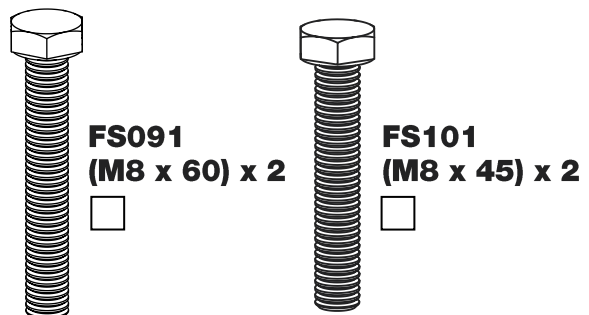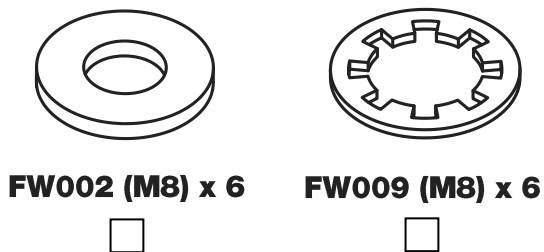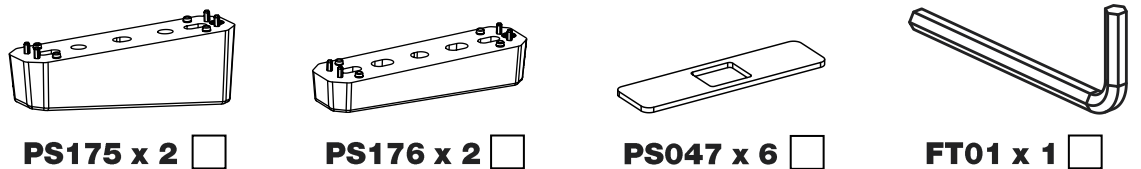

1.

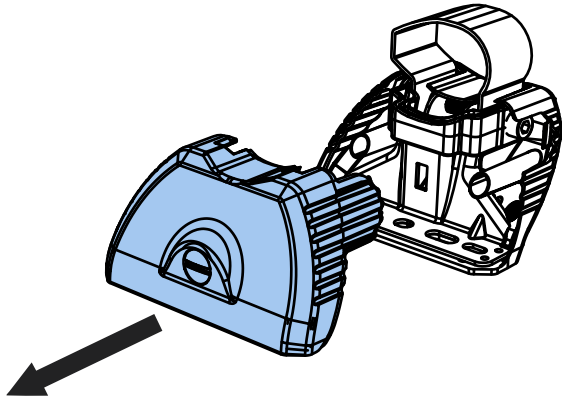

2.

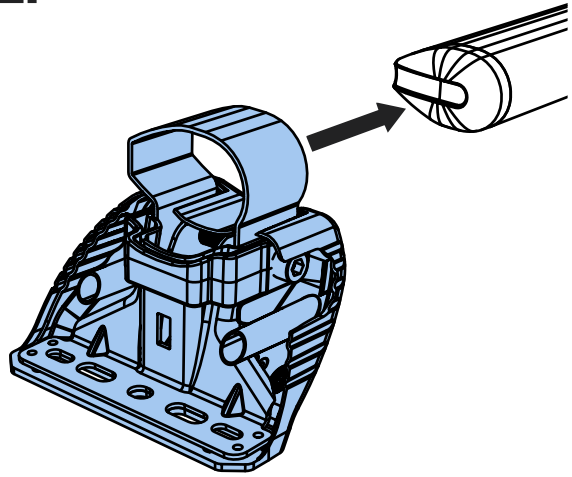

3.




SA397
PS176



SA397



SA397
PS175

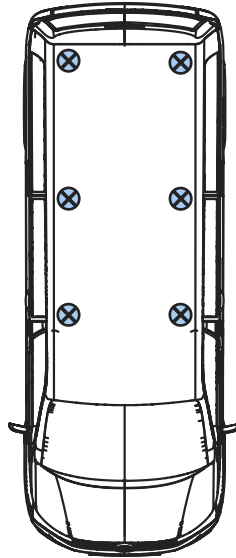


SA398
PS176




SA398




SA398
PS175









4.

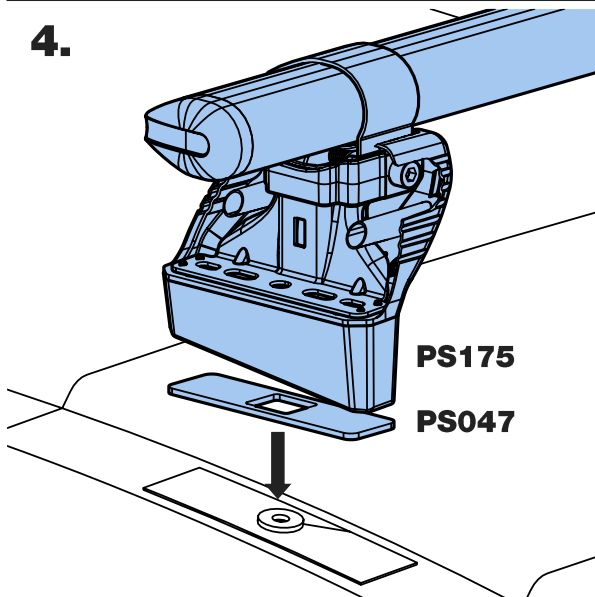


5.

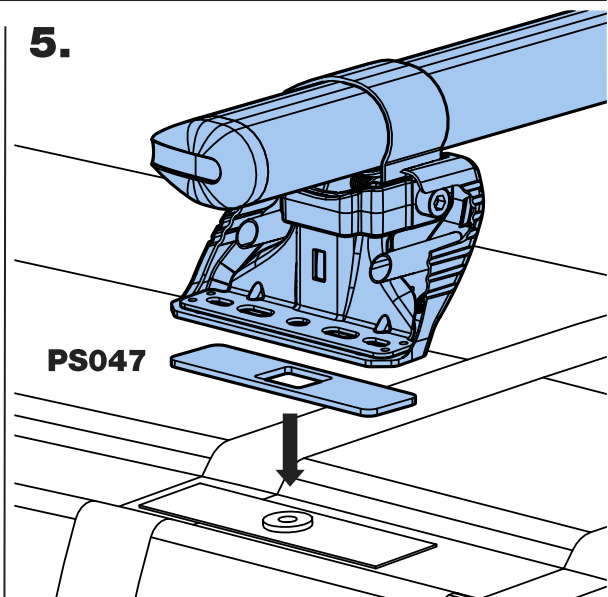


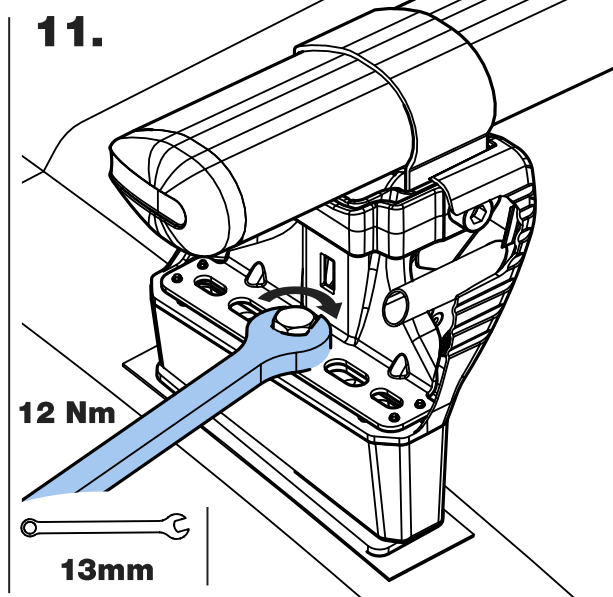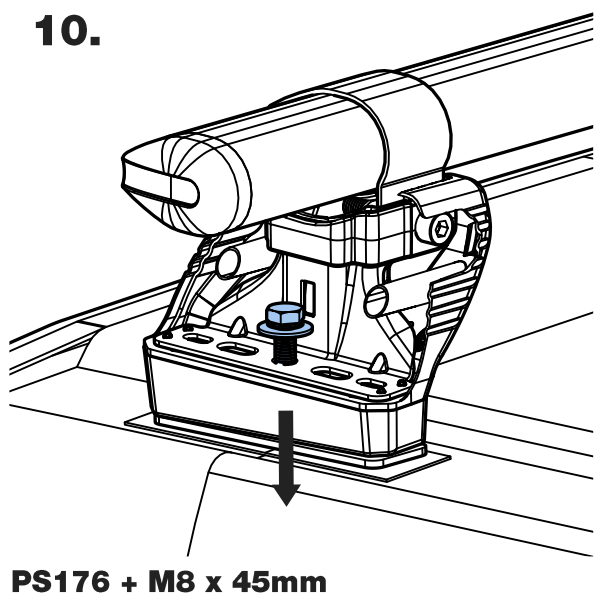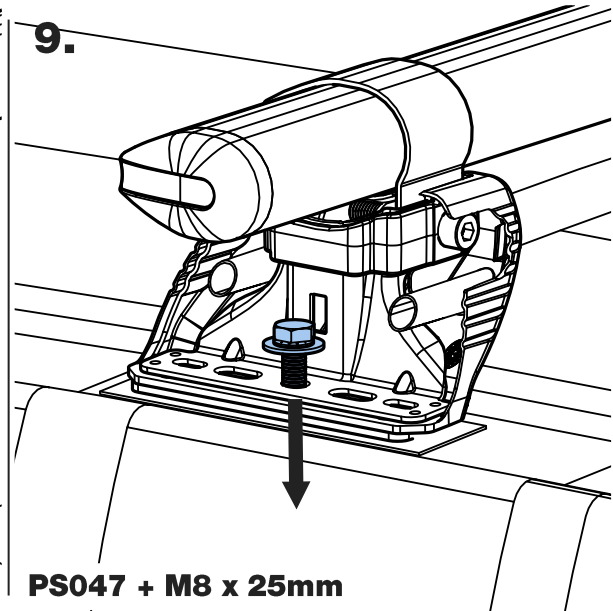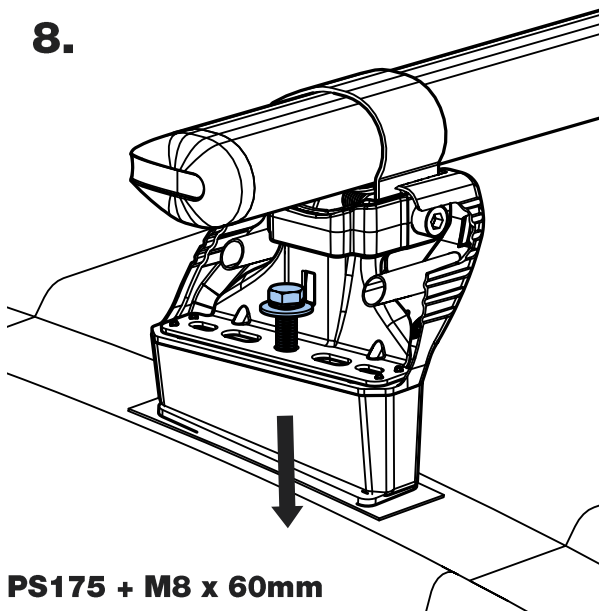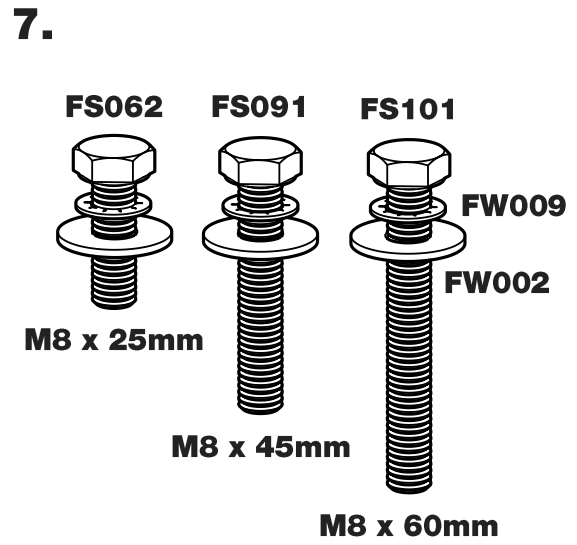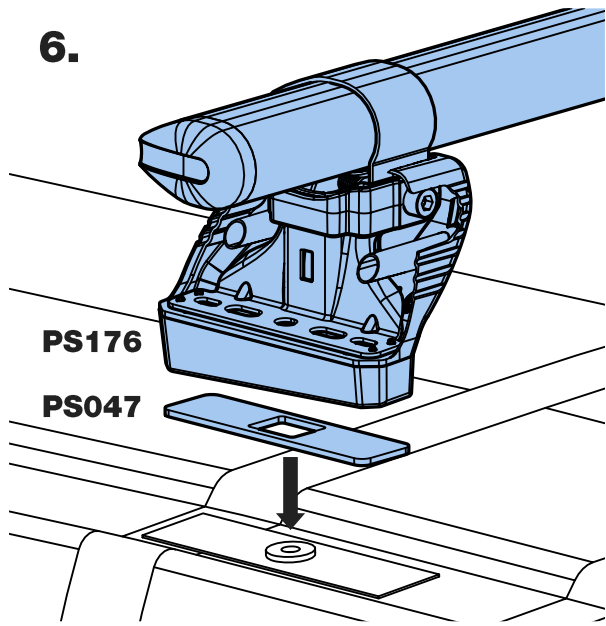


12.

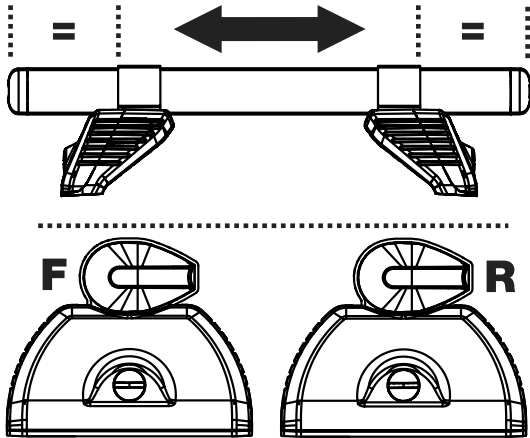

13.

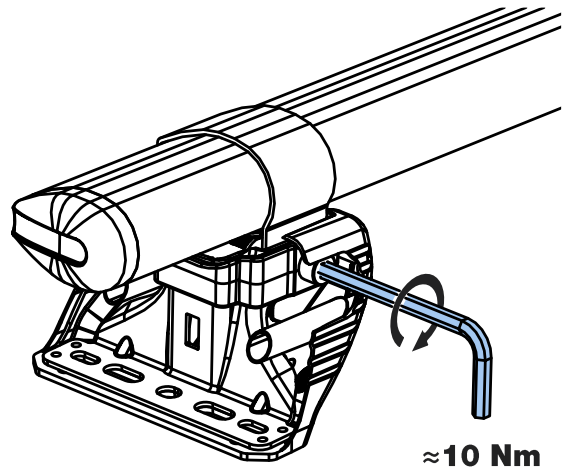

14.

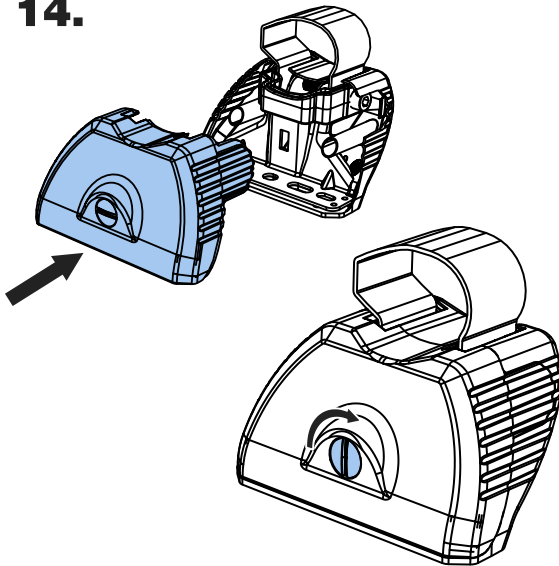

15.

