


GC3PR/FL






KammBar

Instructions

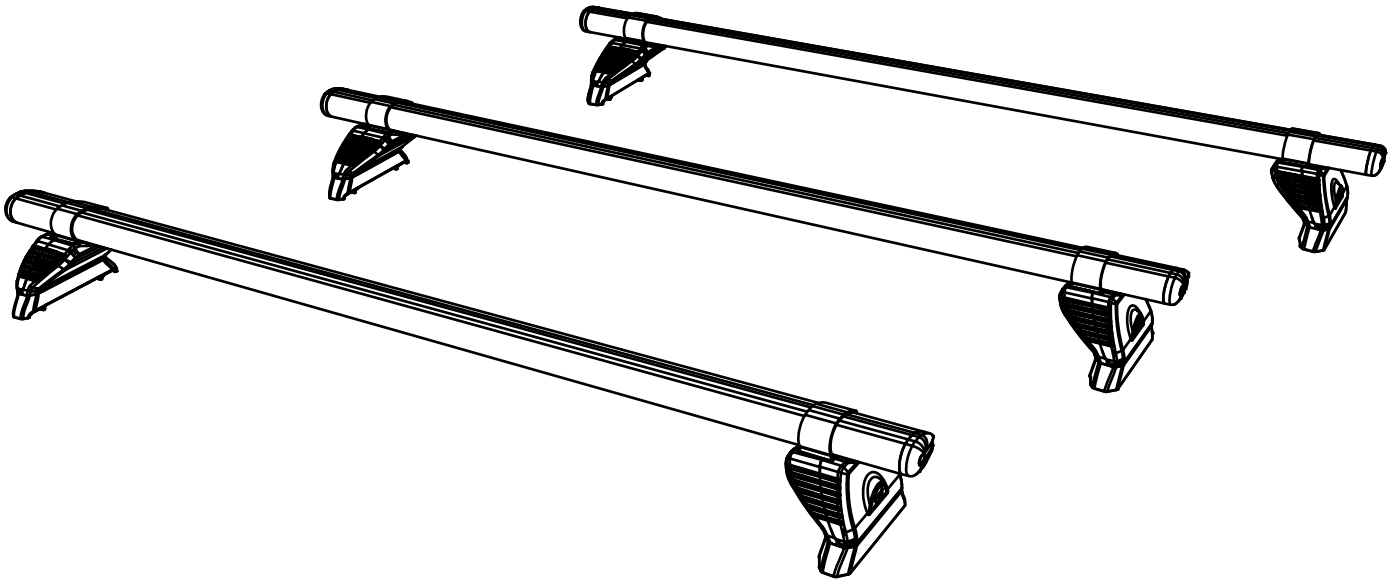


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

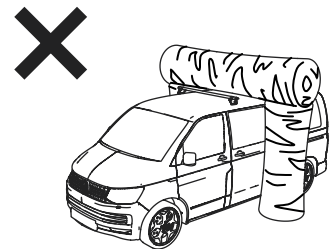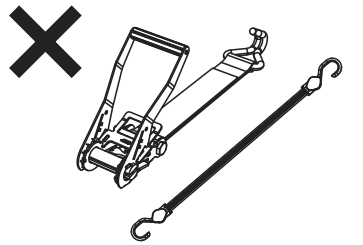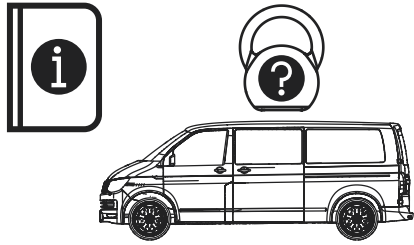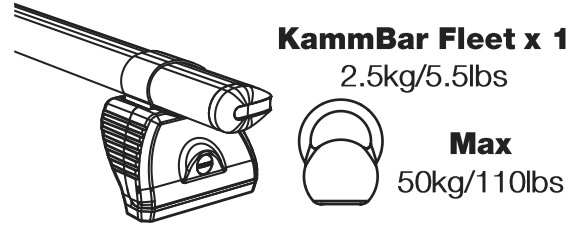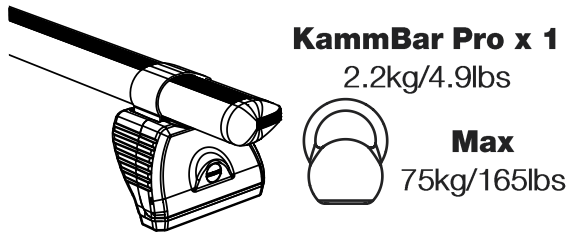


KammBar Pro

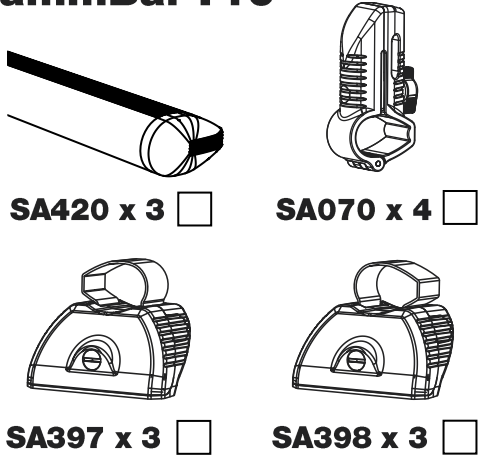


KammBar Fleet

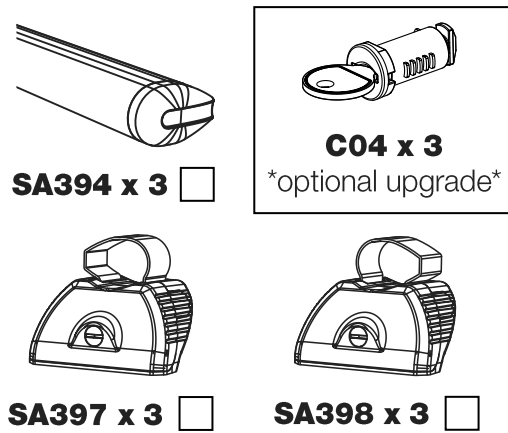


Fitting Kit

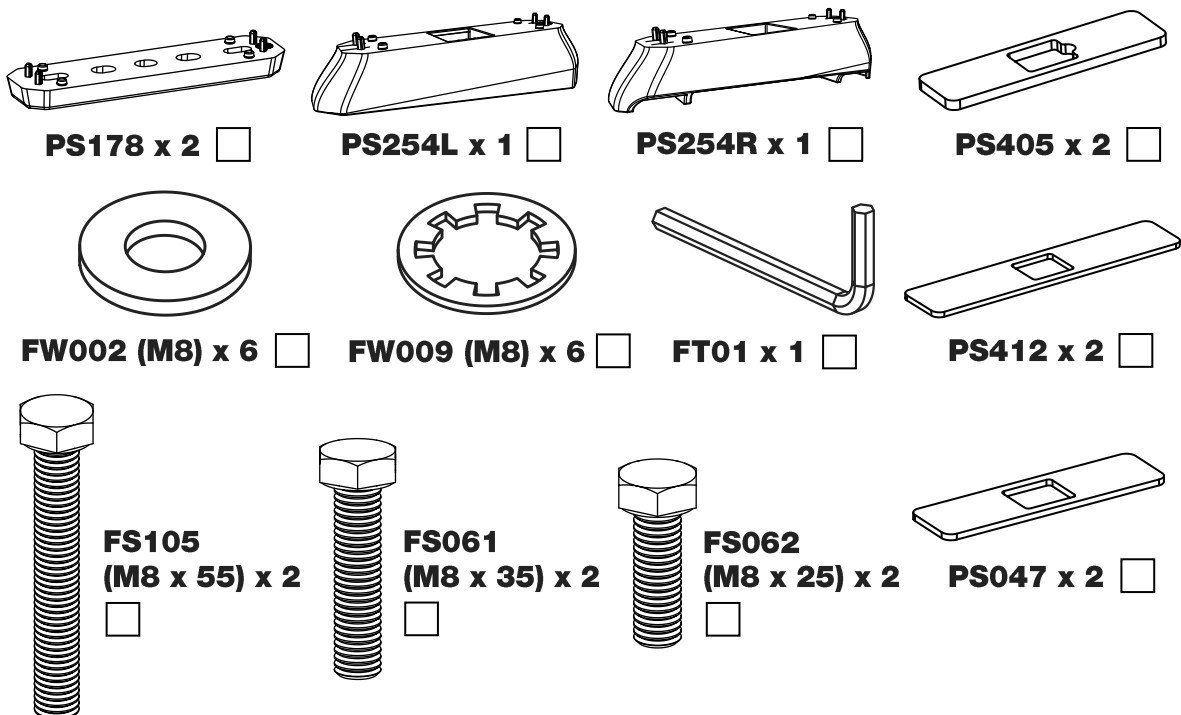


1.

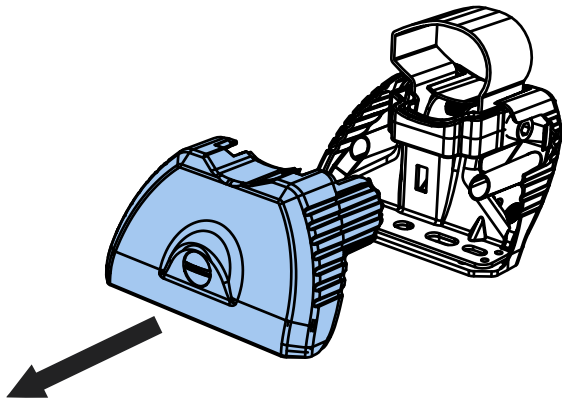

2.

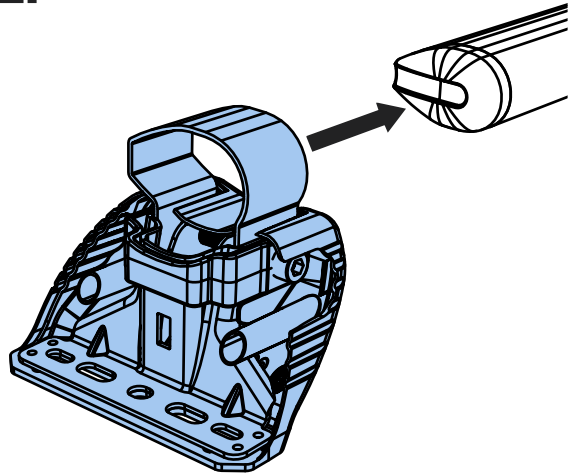

3.




SA397
PS178




SA397



SA397
PS254L

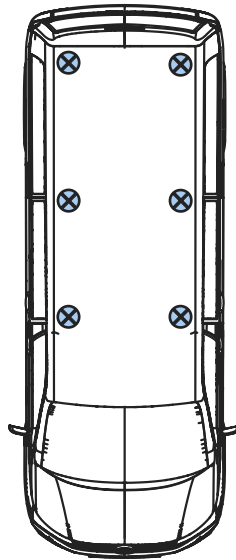


SA398
PS178




SA398




SA398
PS254R









4.

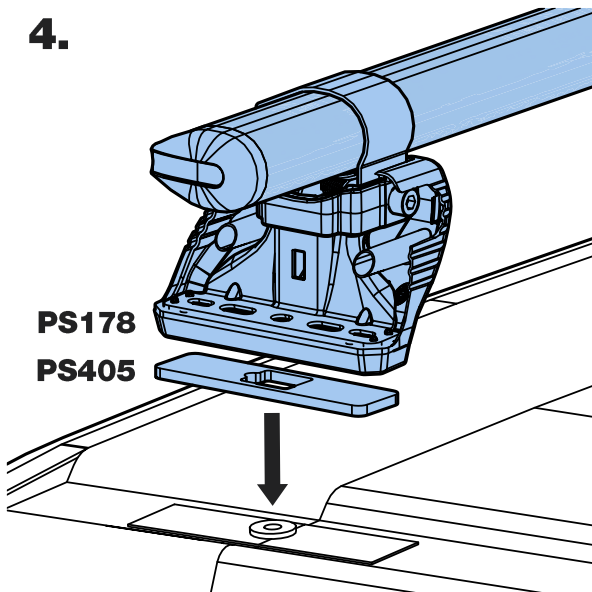


5.

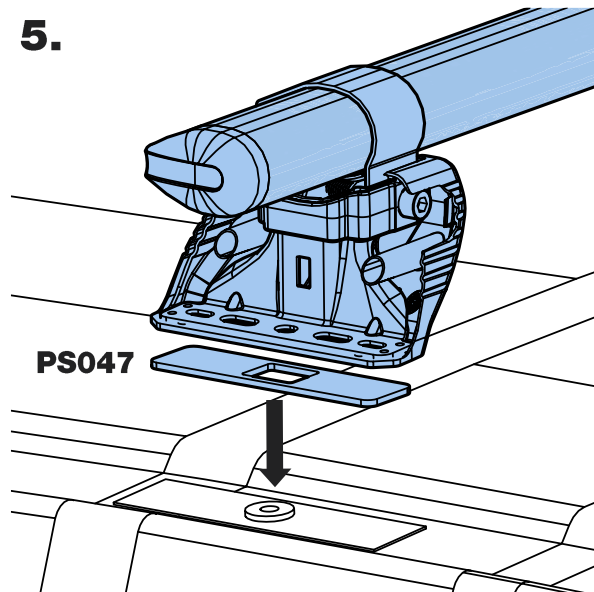


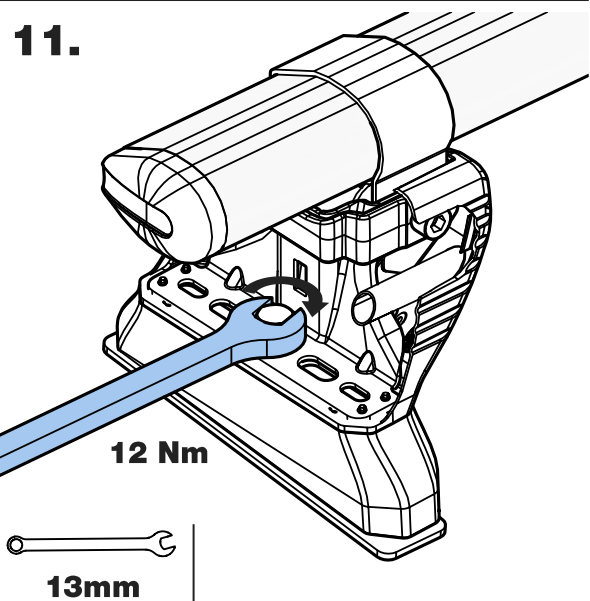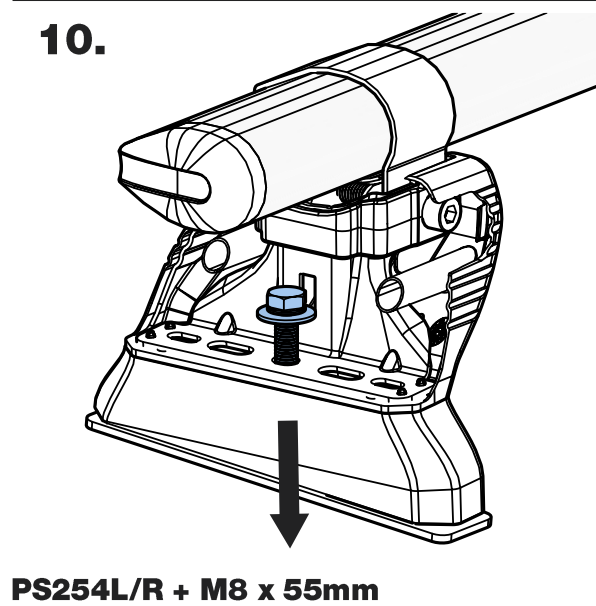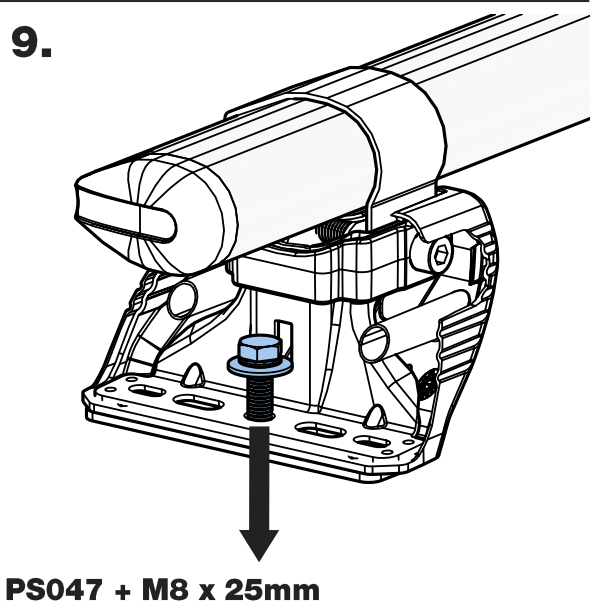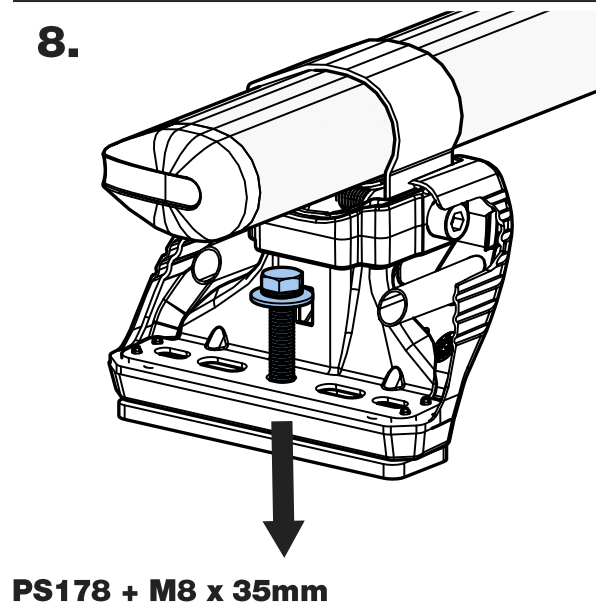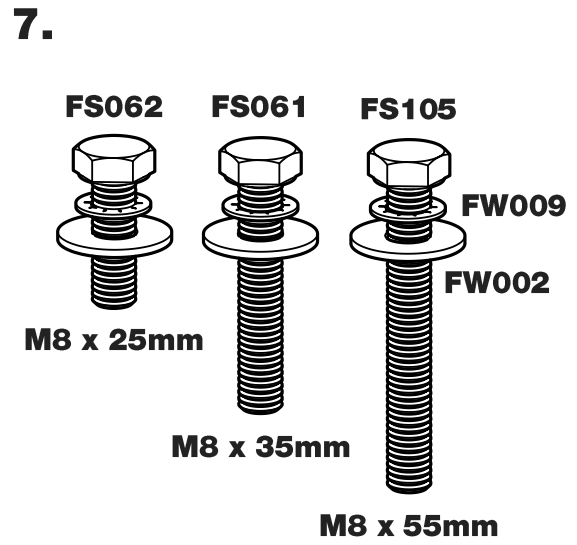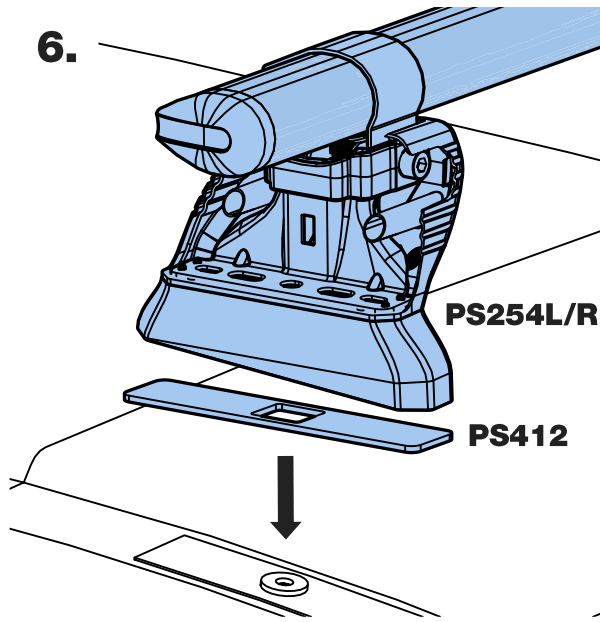


12.

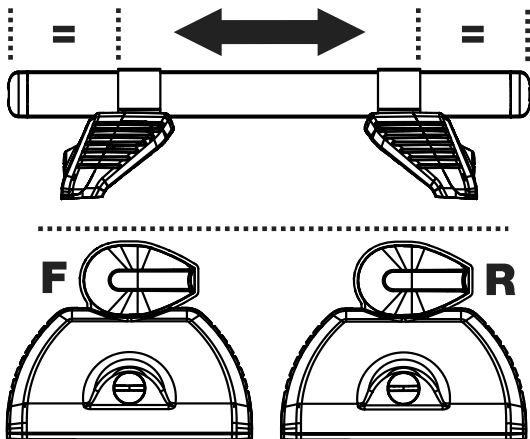

13.

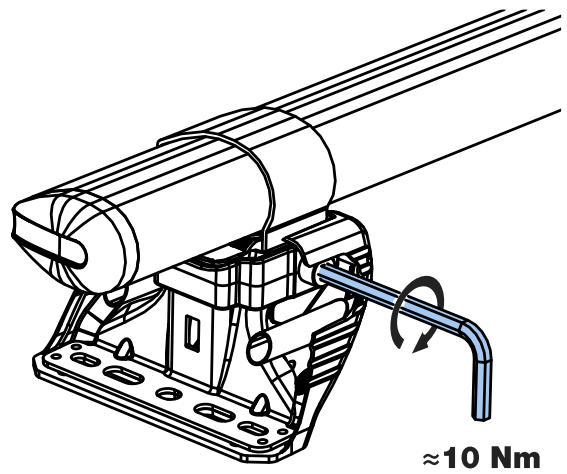

14.

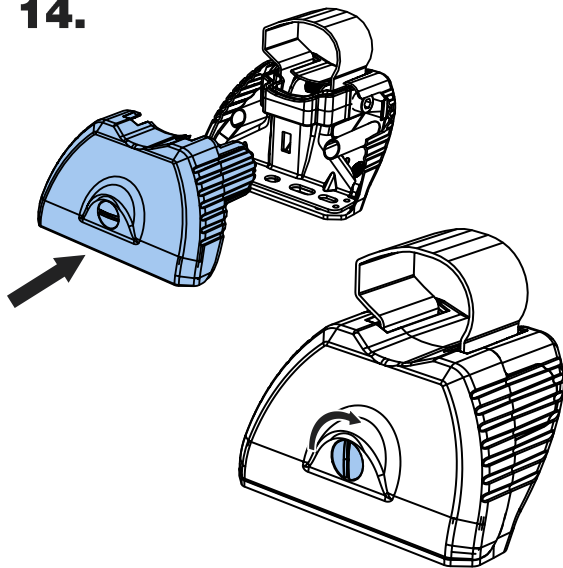

15.

