


WD2PR/FL

KammBar

Instructions

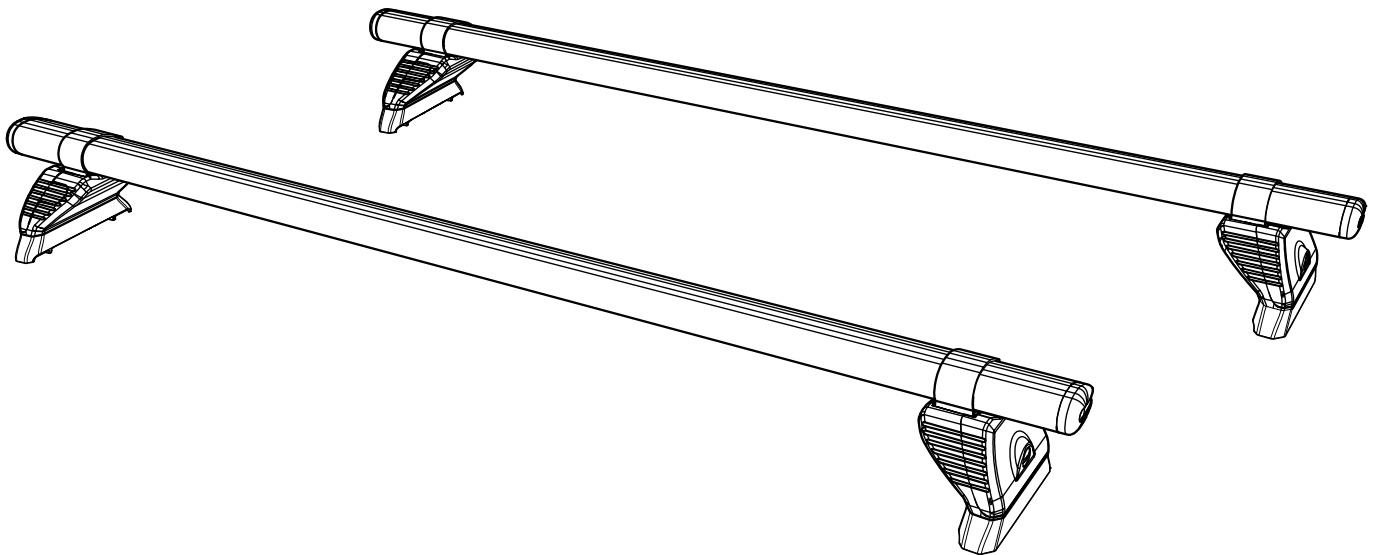


CITY CRASH (✓)


According to ISO/ PAS 11154:2006






KammBar Pro

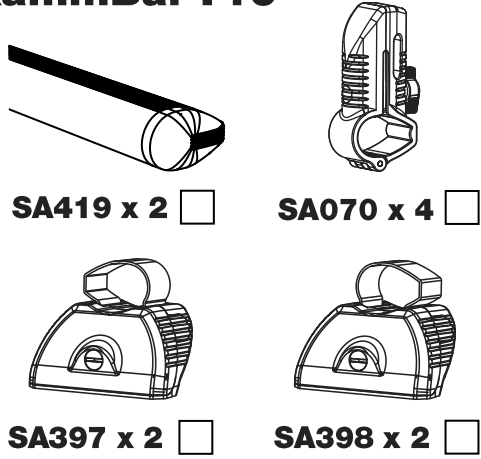

KammBar Fleet

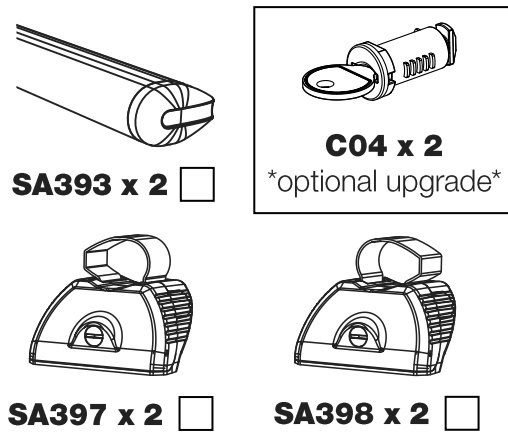

Fitting Kit

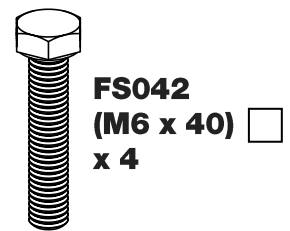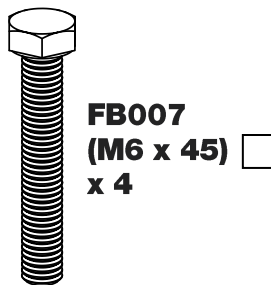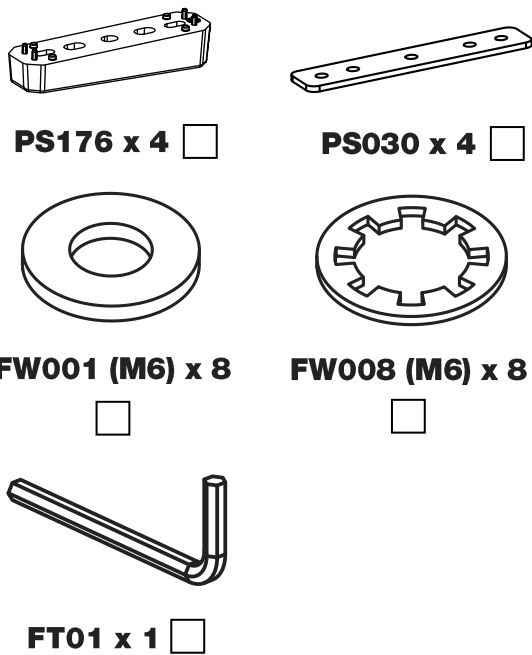


1.



2.




3.




SA397


PS176

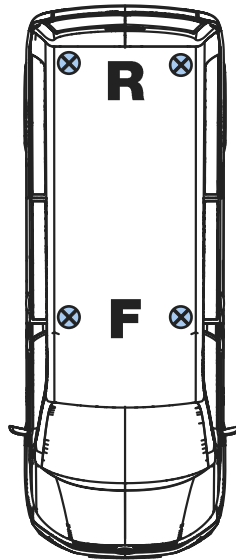

SA398



PS176



SA397


PS176

SA398




PS176

4.

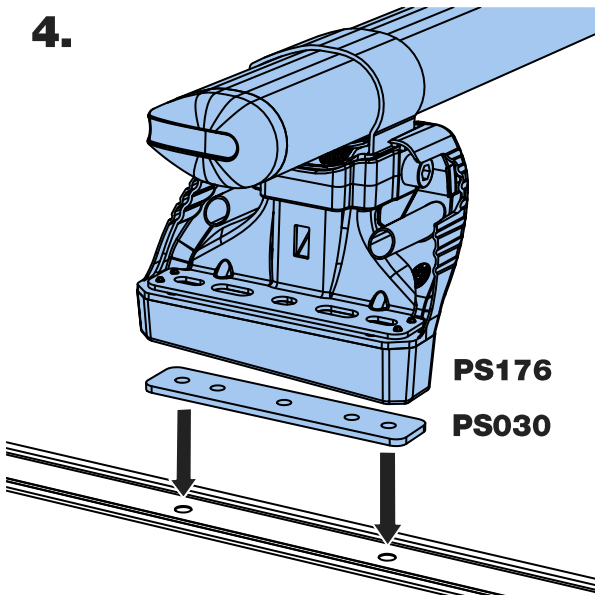

5.

FB007




FW008

FW001

M6 x 45mm







FS042




FW008

FW001

M6 x 40mm

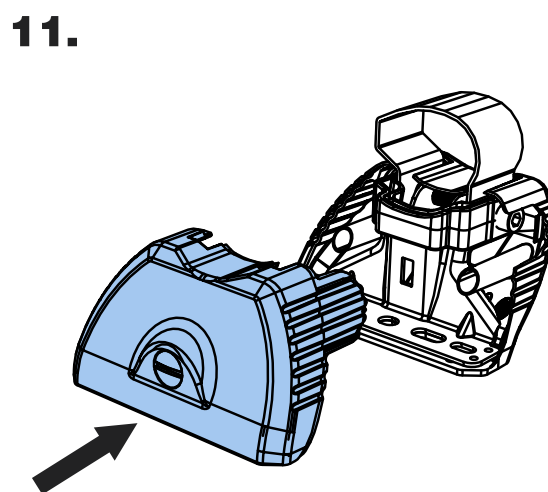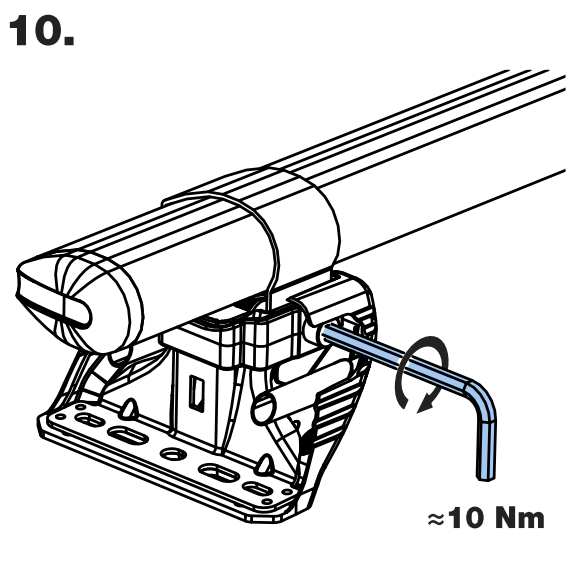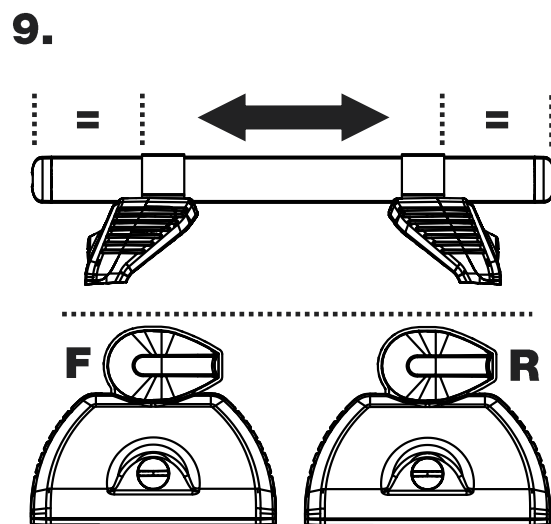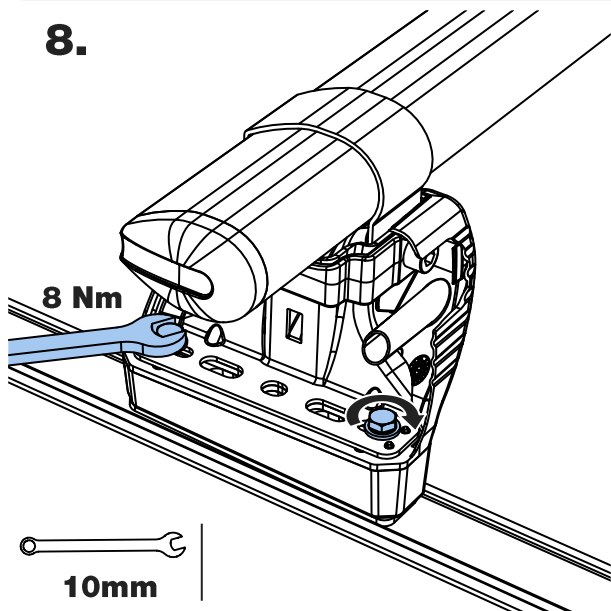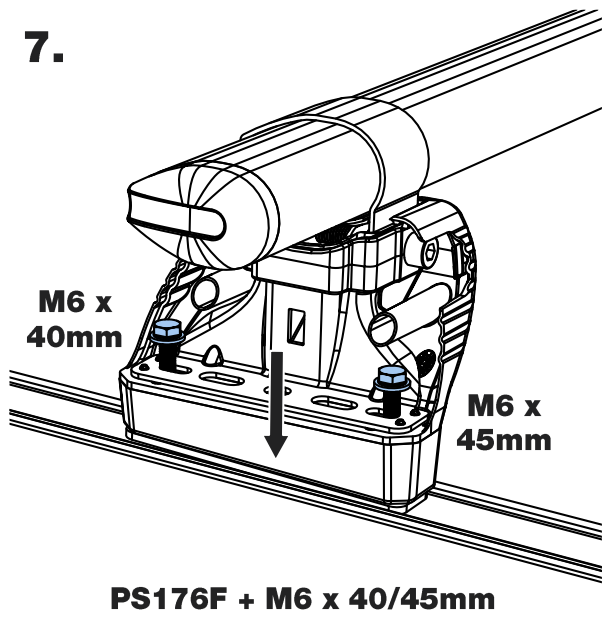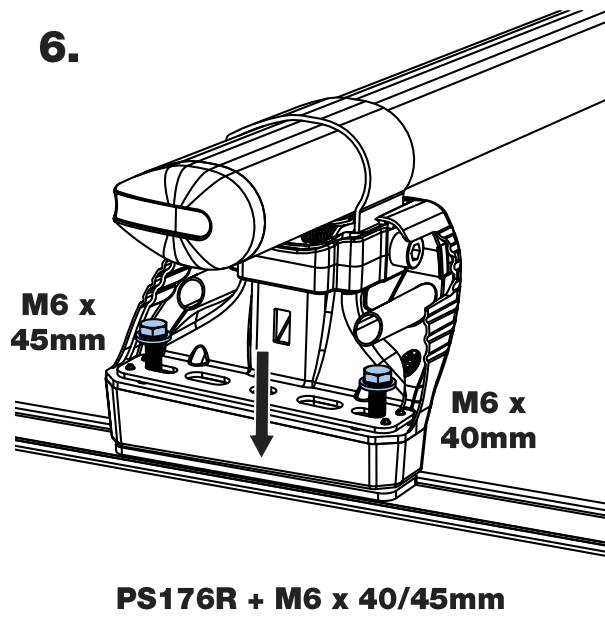

12.

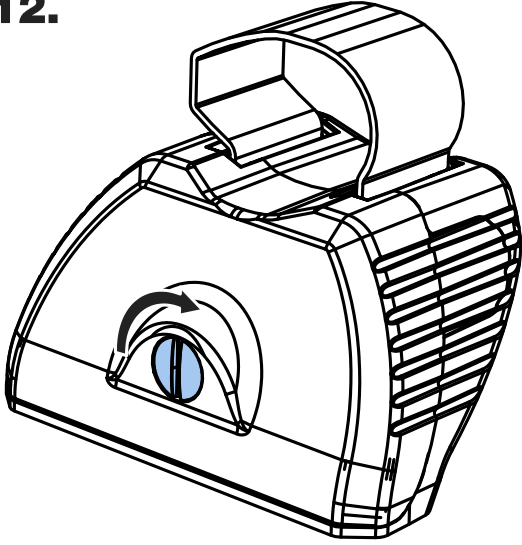

13.

