






# TC2PR/FL KammBar

## Instructions

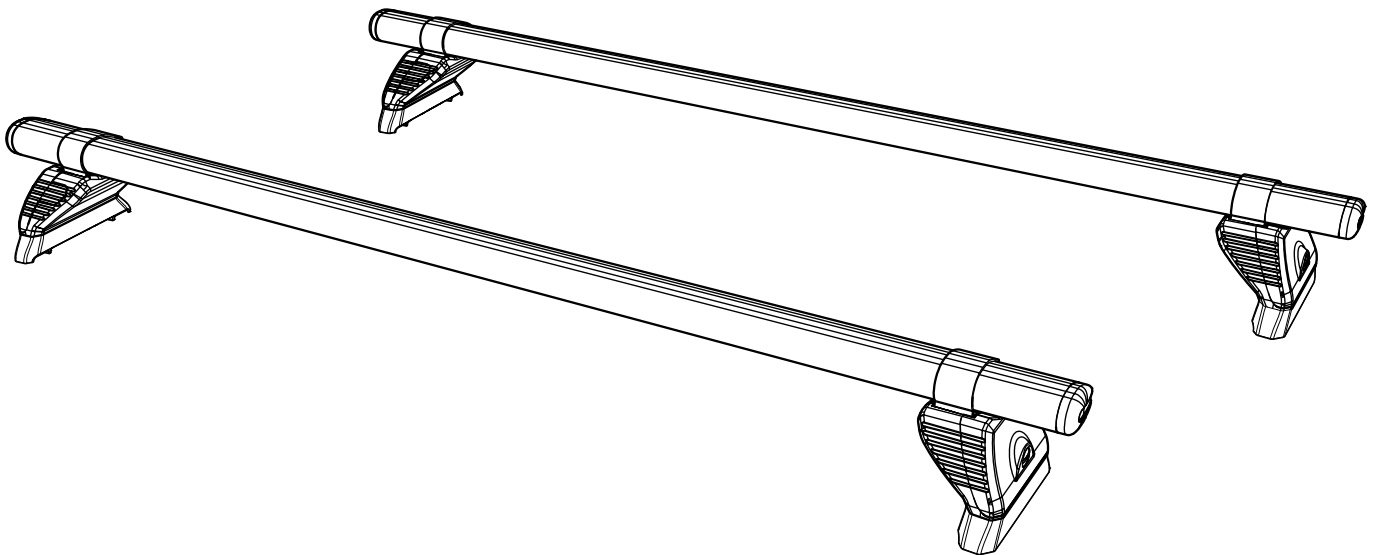


**CITY CRASH** (✓)


According to ISO/ PAS 11154:2006

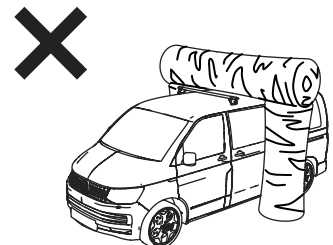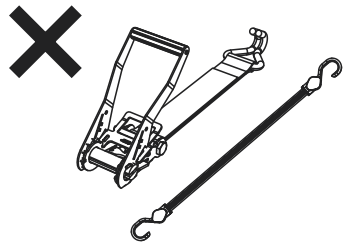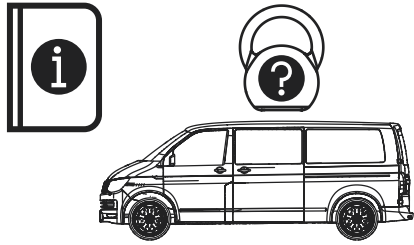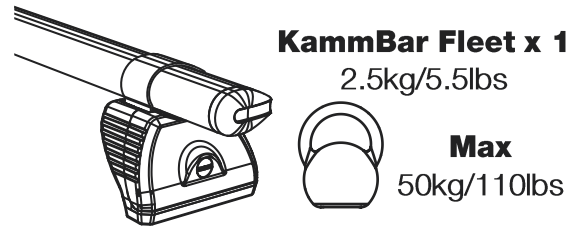


### KammBar Pro

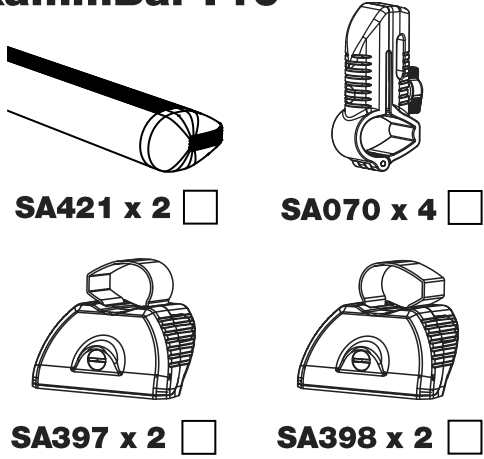


### KammBar Fleet

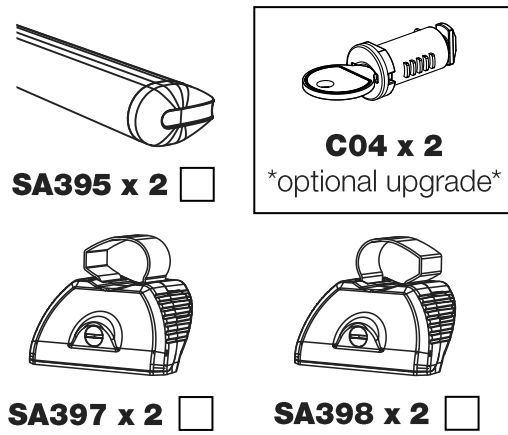


### Fitting Kit

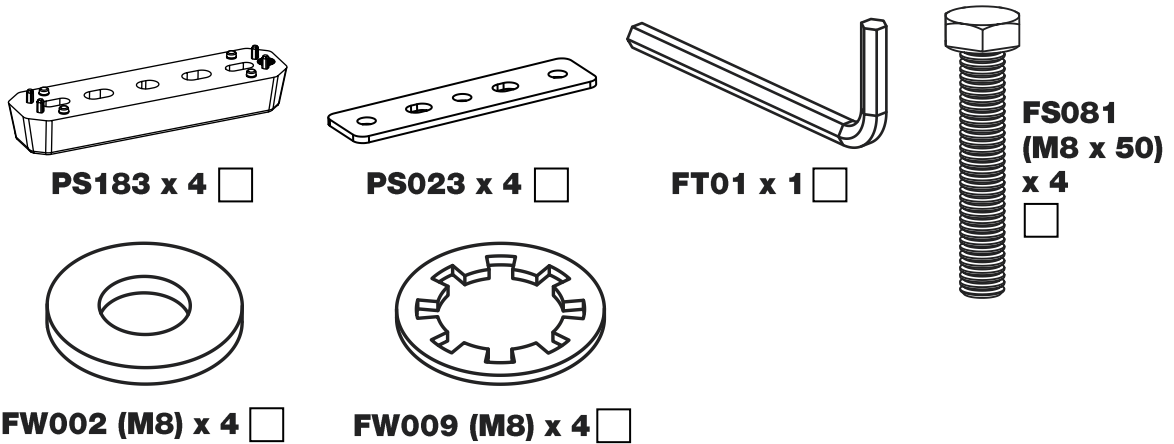


1.

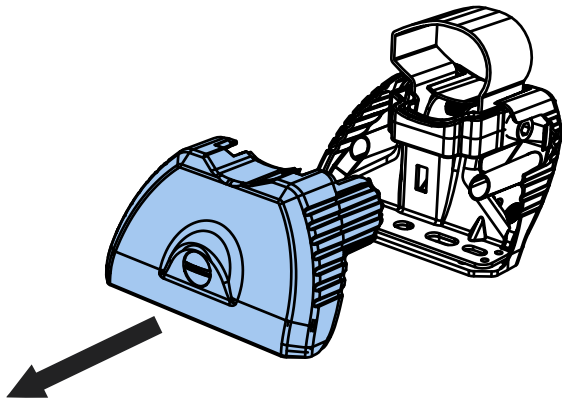


2.

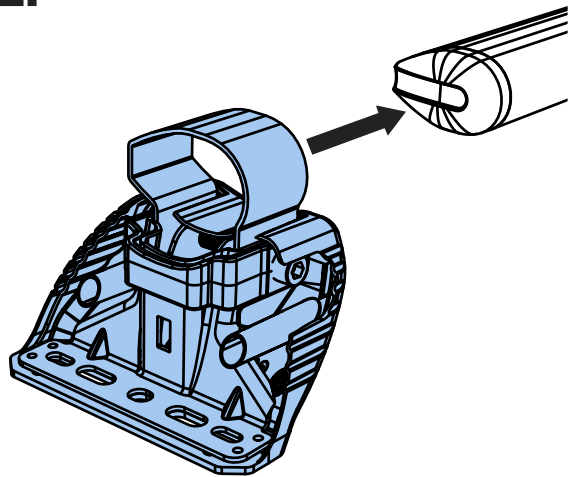



3.



**SA397**  
**PS183**

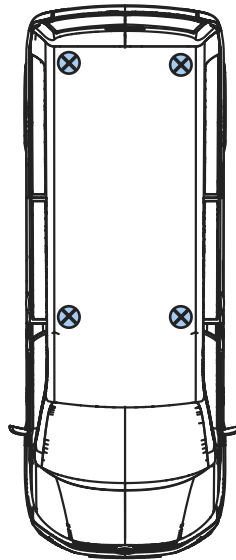


**SA398**  
**PS183**




**SA397**  
**PS183**


**SA398**  
**PS183**



4.

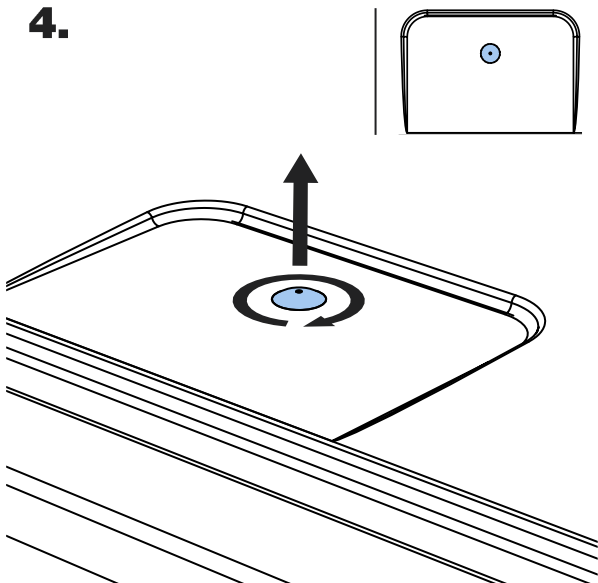


5.

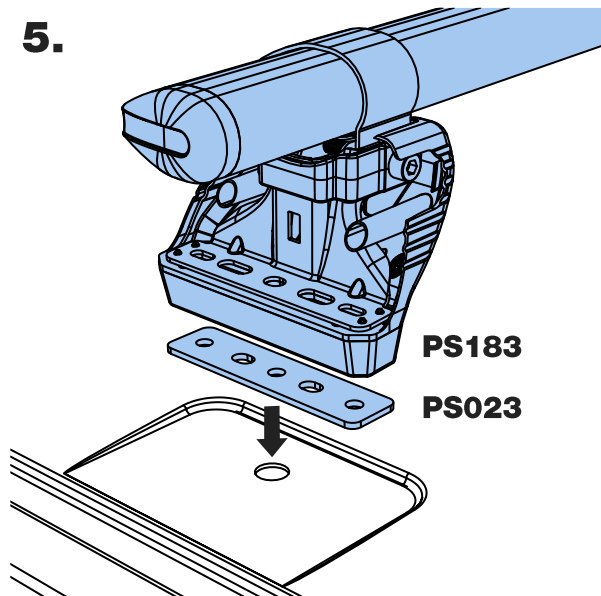



**PS183**

**PS023**

6.

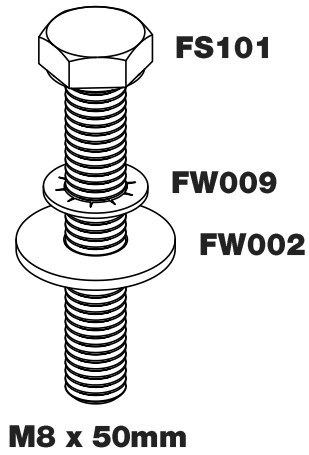


7.

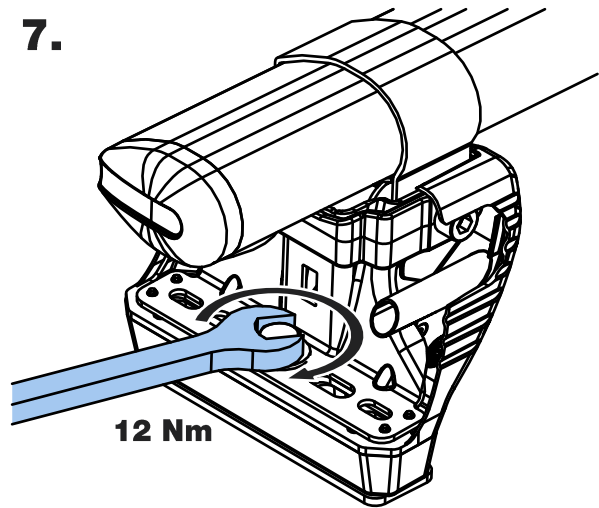


13mm

M8 x 50mm + PS183


8.

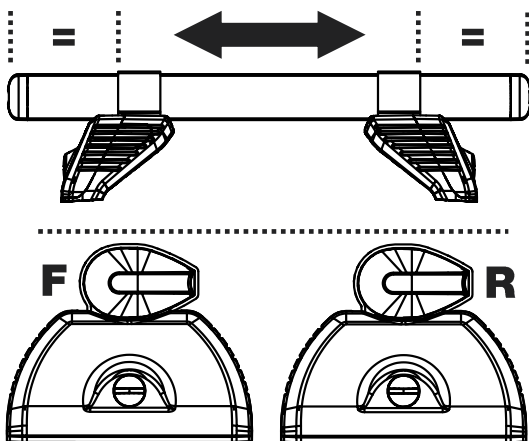

9.

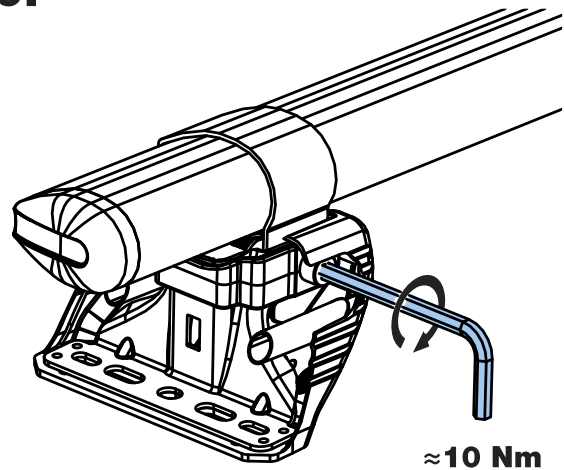

10.

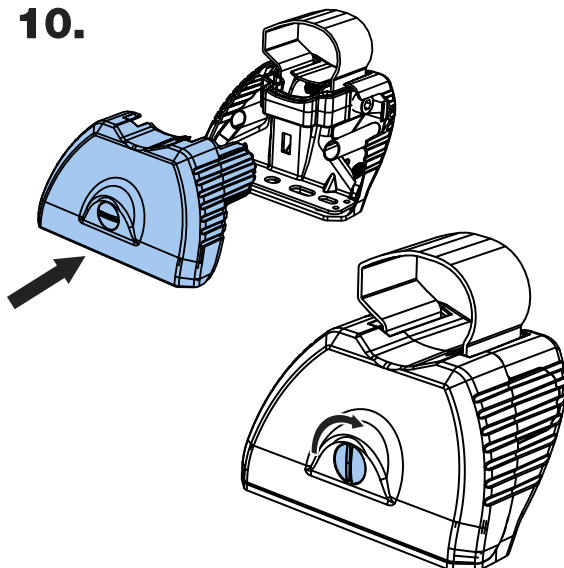

11.

