



# TC3PR/FL KammBar

## Instructions

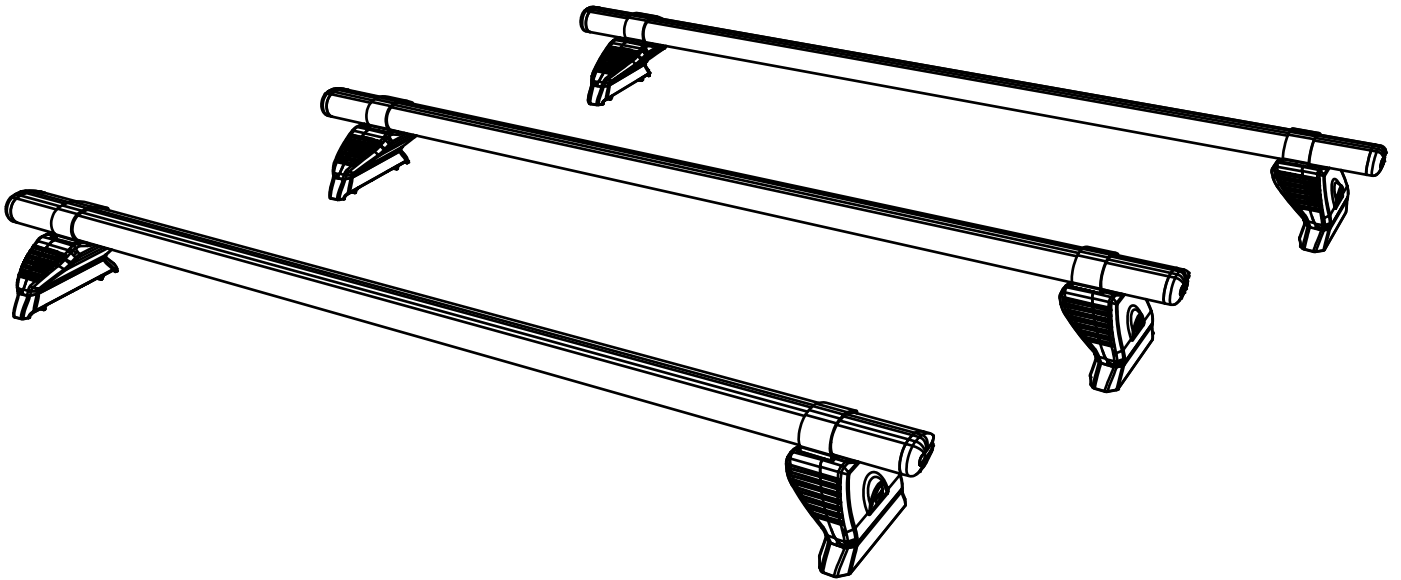


**CITY CRASH** (✓)


According to ISO/ PAS 11154:2006

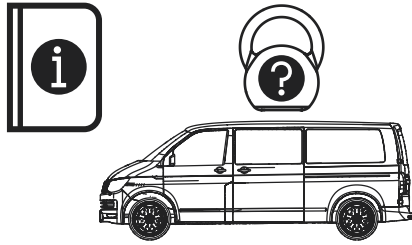


### KammBar Pro

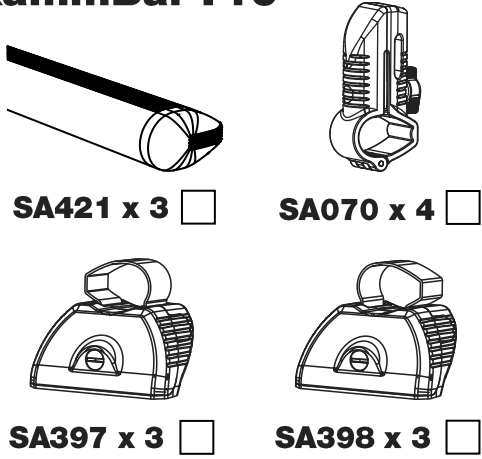

### KammBar Fleet

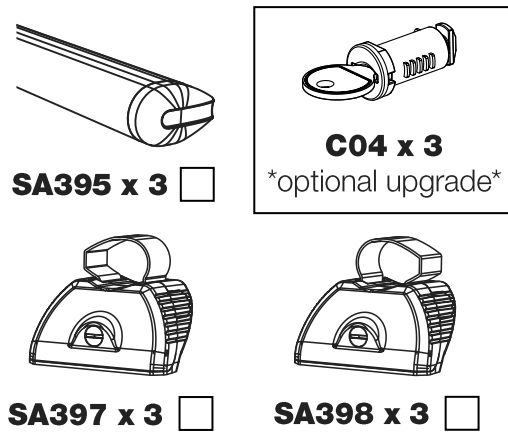


### Fitting Kit

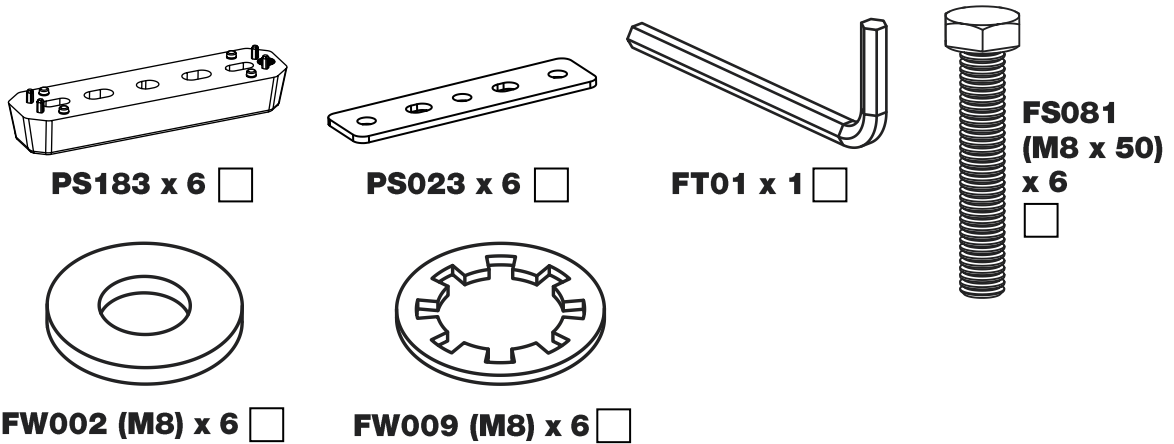


1.




2.

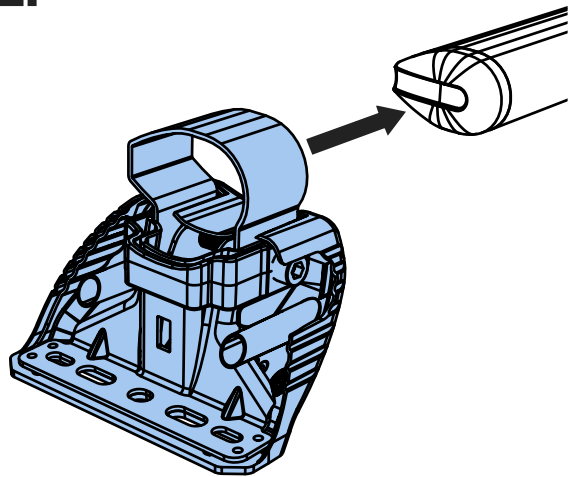


3.




**SA397**  
**PS183**




**SA397**  
**PS183**




**SA397**  
**PS183**

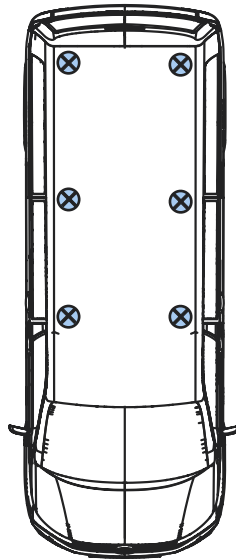


**SA398**  
**PS183**




**SA398**  
**PS183**




**SA398**  
**PS183**




4.

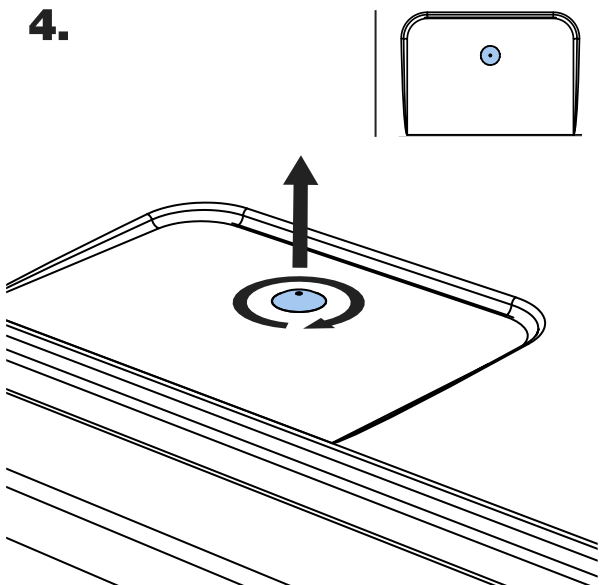



5.

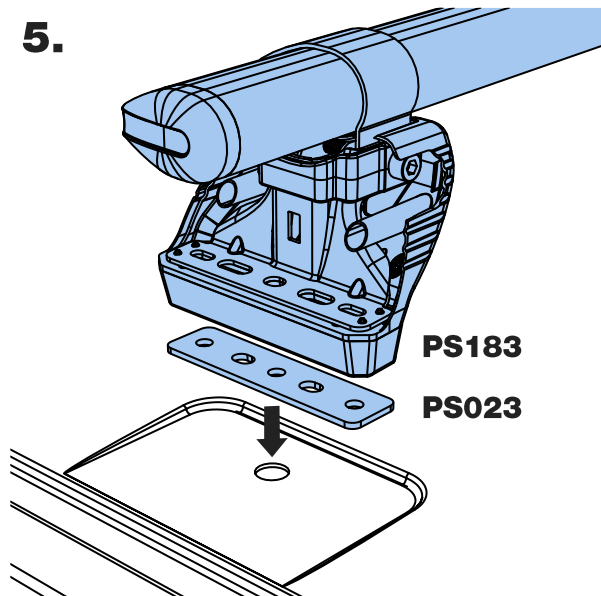

6.

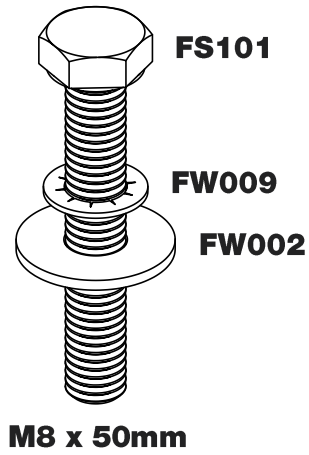


7.

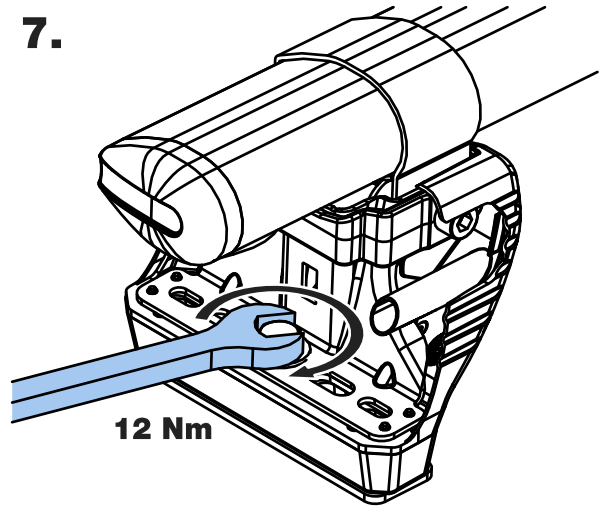


13mm

M8 x 50mm + PS183


8.

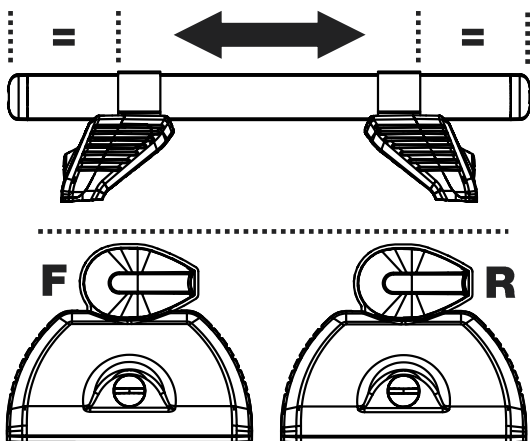

9.

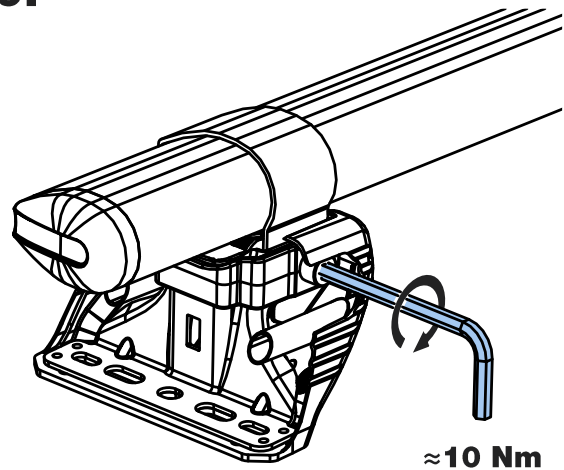

10.

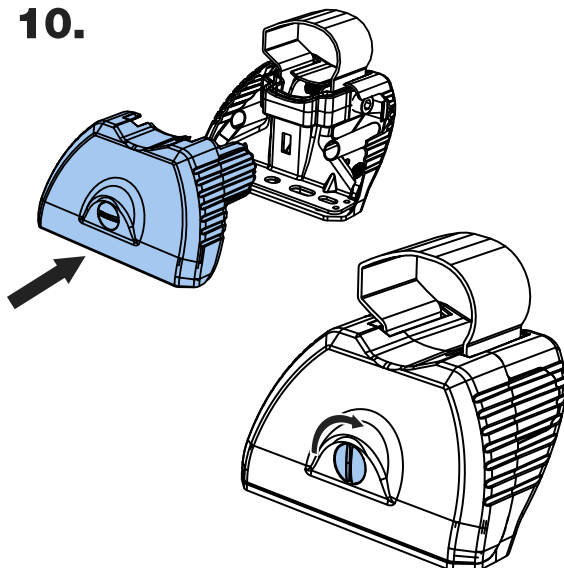

11.

