


TA2PR/FL






KammBar

Instructions

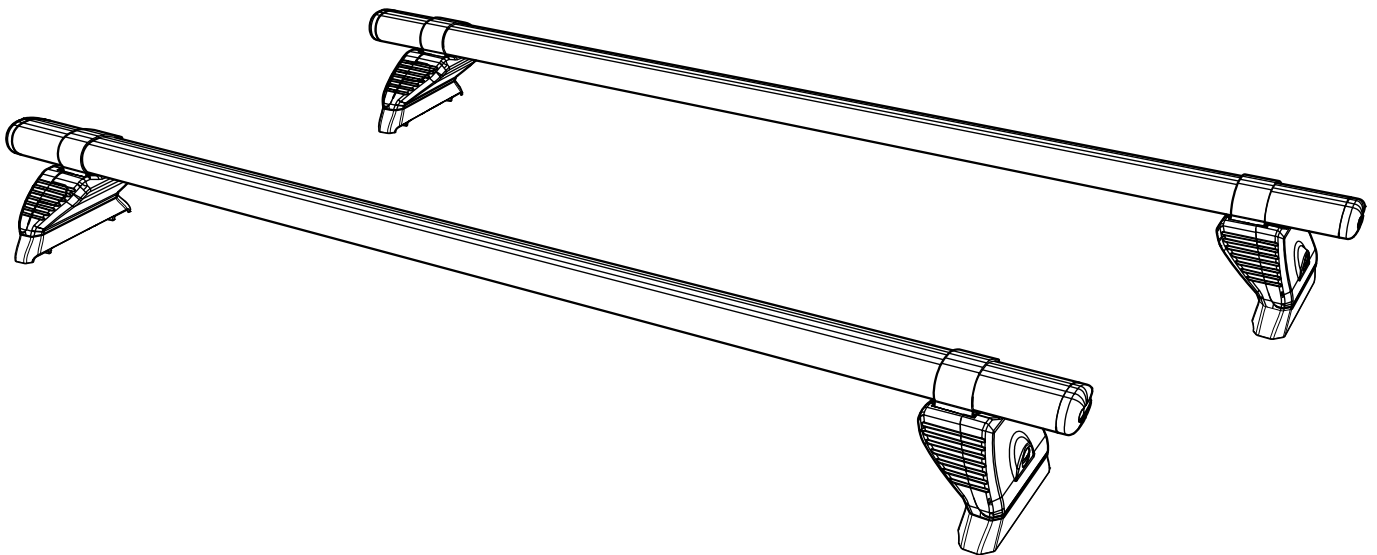


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

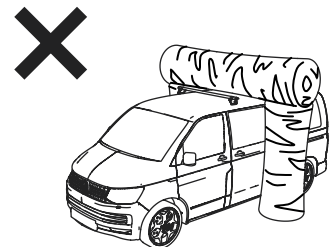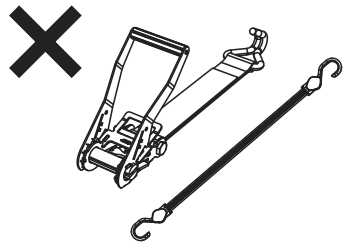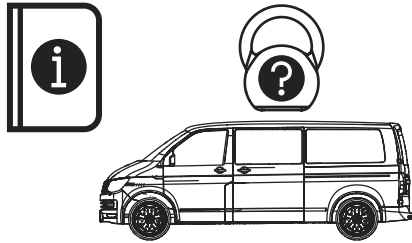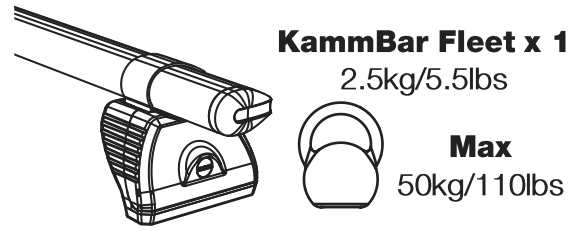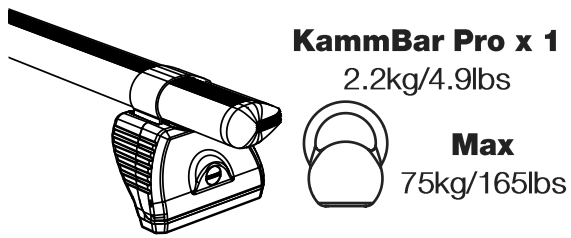


KammBar Pro

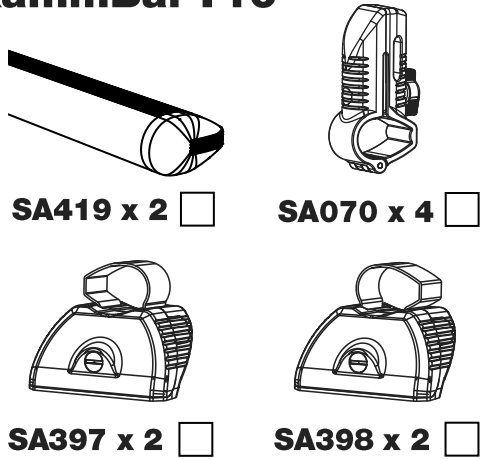

KammBar Fleet

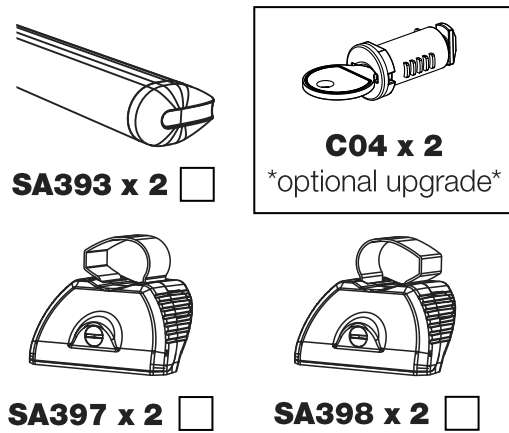

Fitting Kit

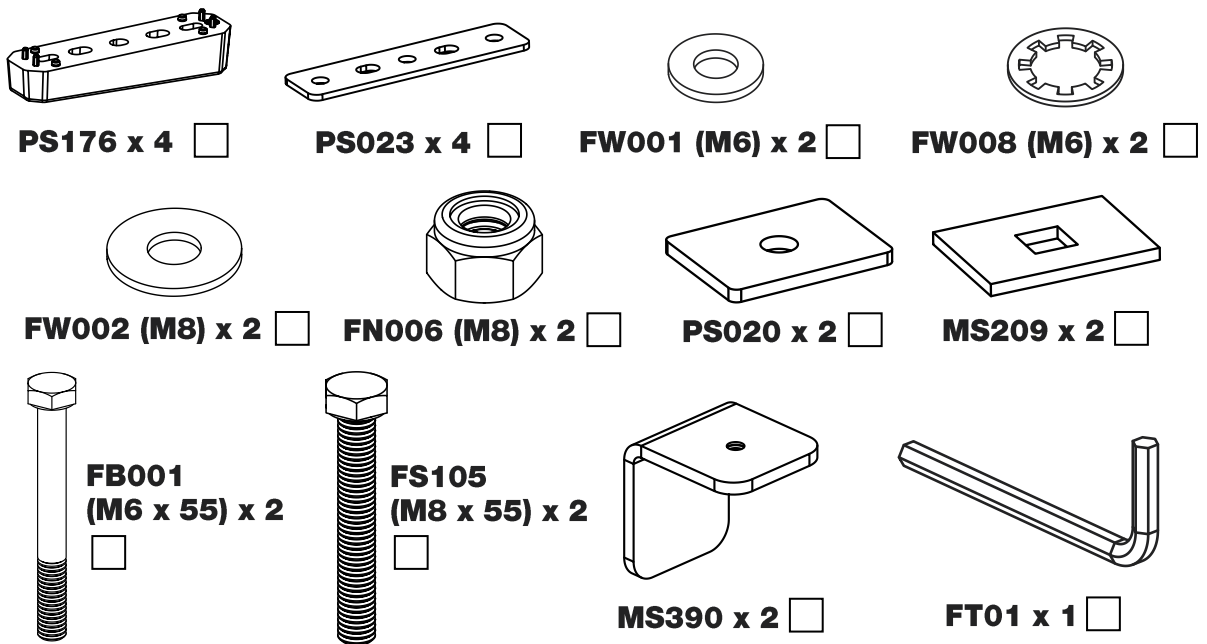


1.



2.



3.





SA397

PS176

SA398

PS176





SA397


PS176

SA398

PS176

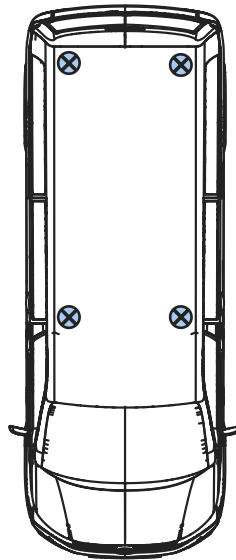


4.

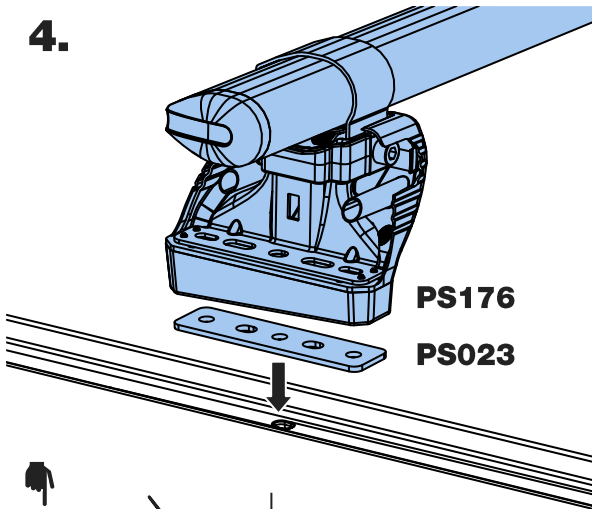

PS176

PS023


5.

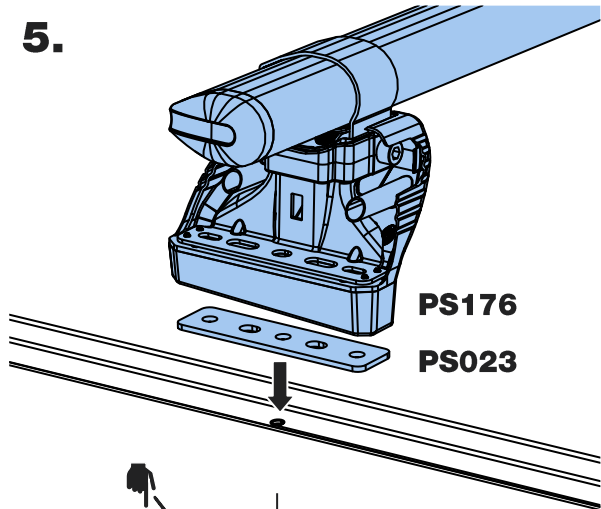


PS176

PS023


6.

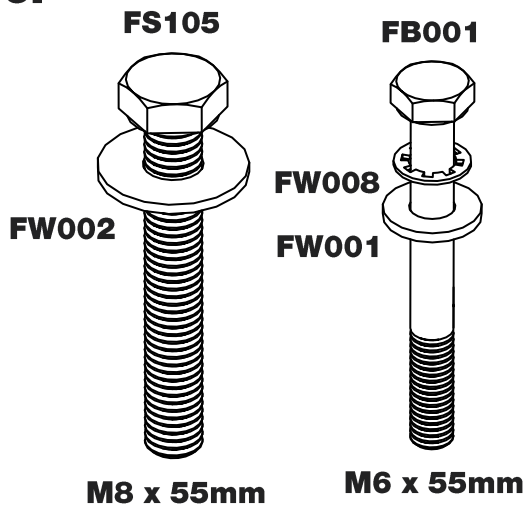


7.

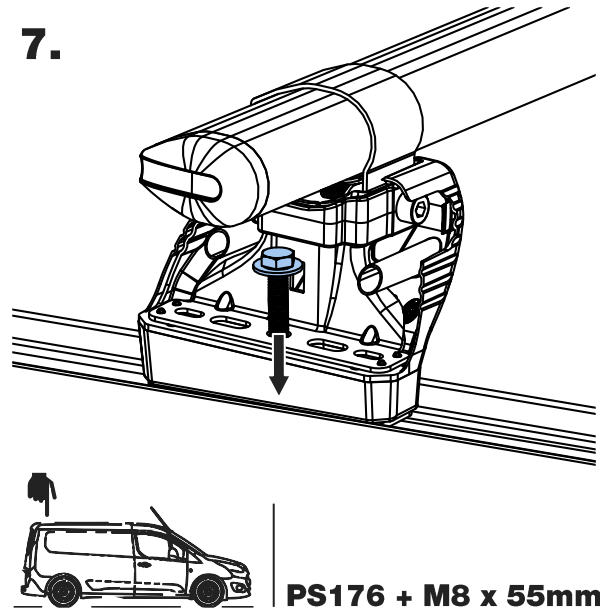


8.

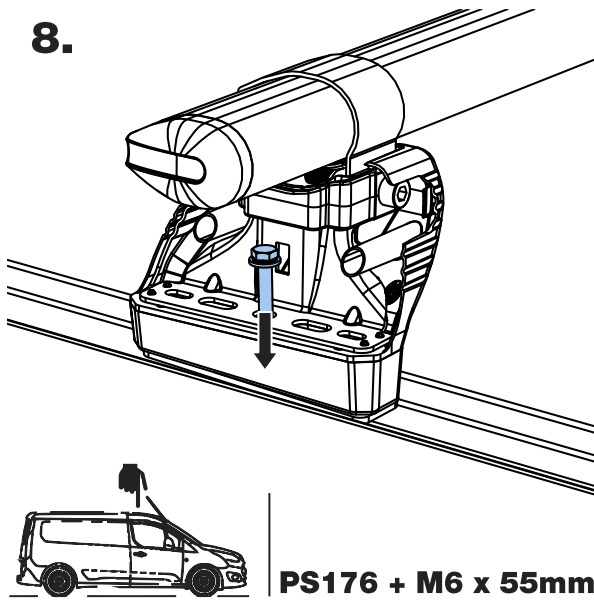


9.

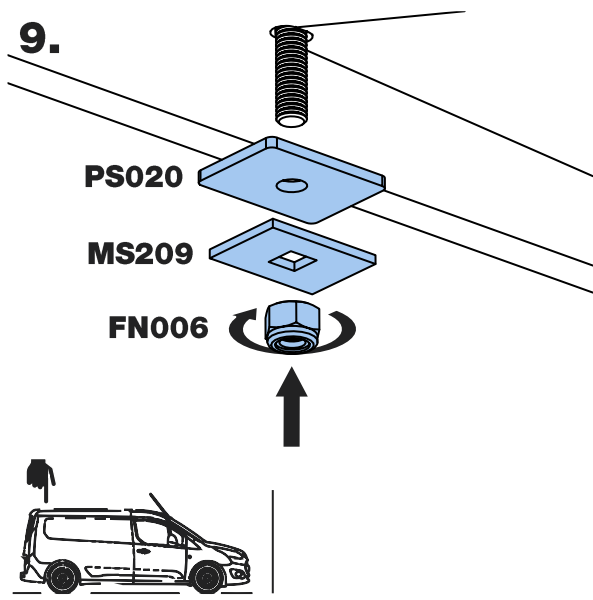


10.

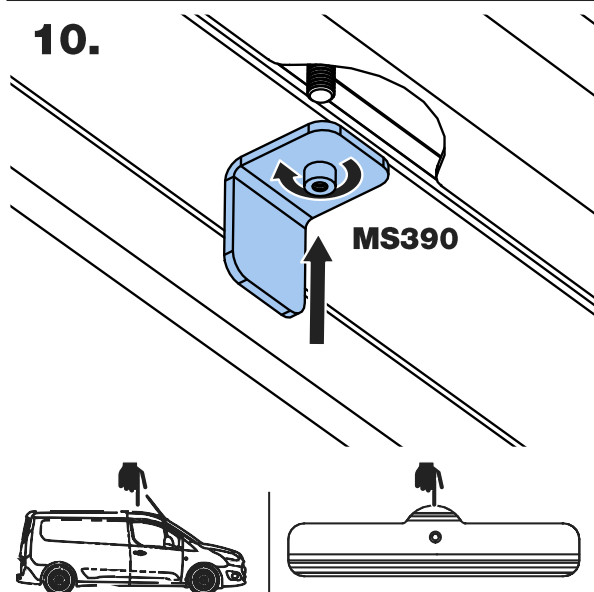


11.

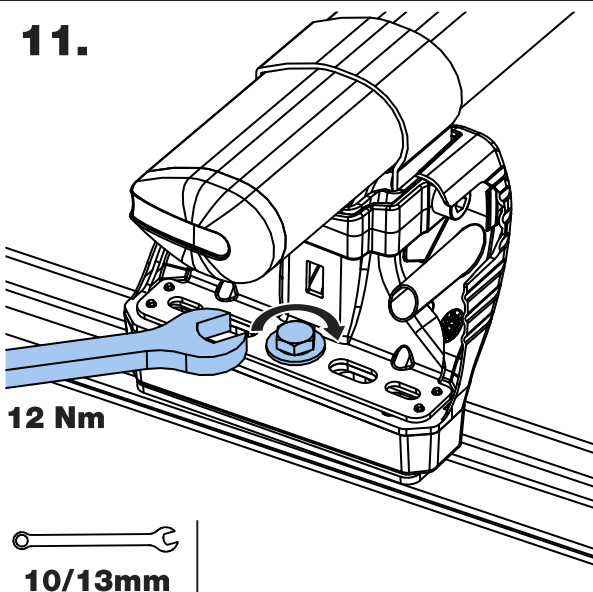


12.

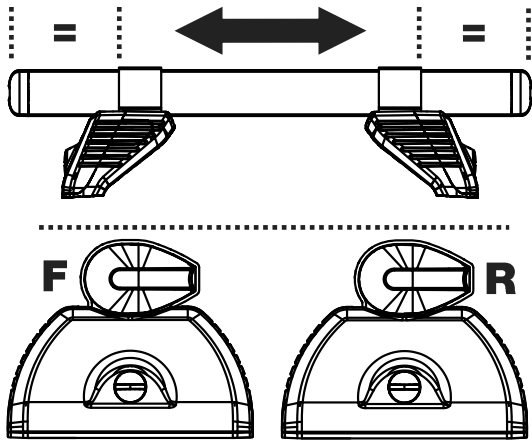

13.

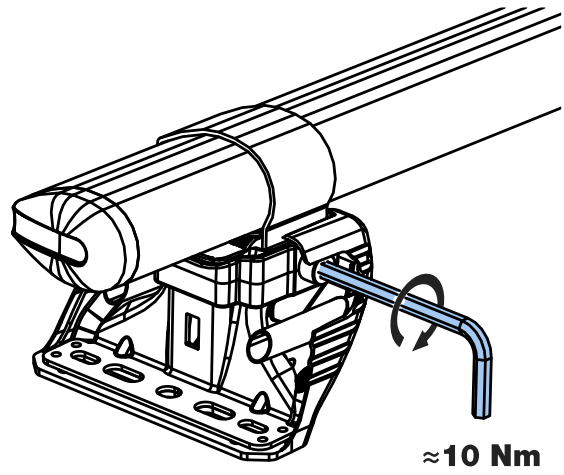

14.

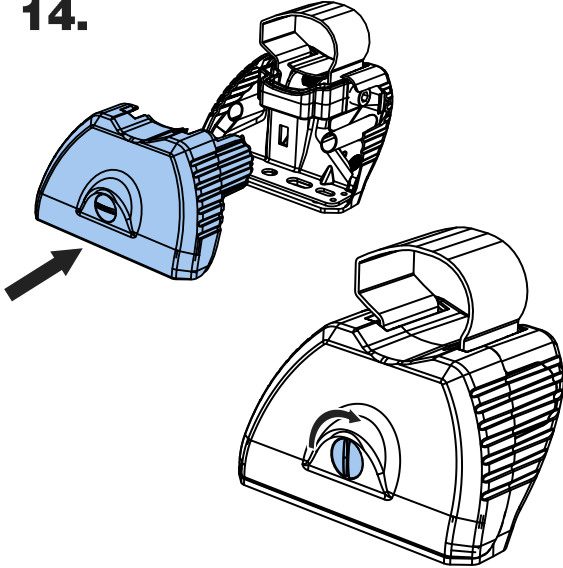

15.

