


TA3PR/FL


KammBar

Instructions

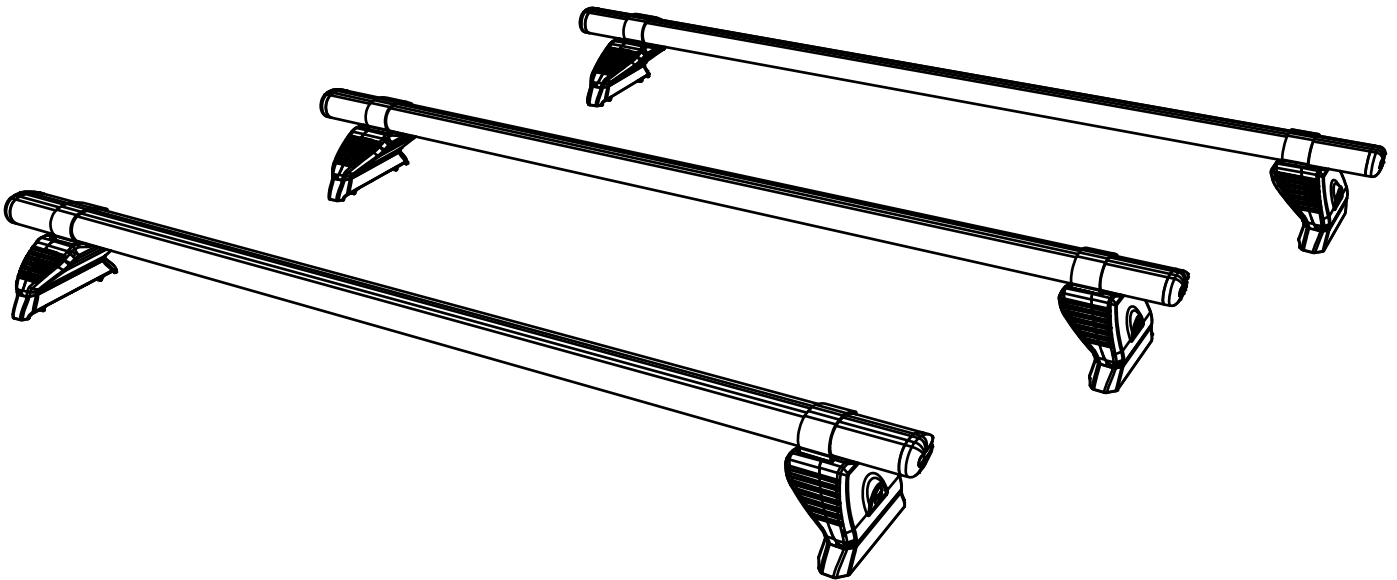


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

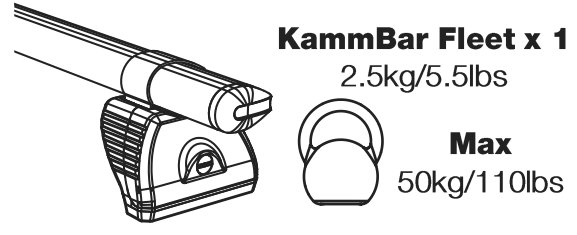


KammBar Pro

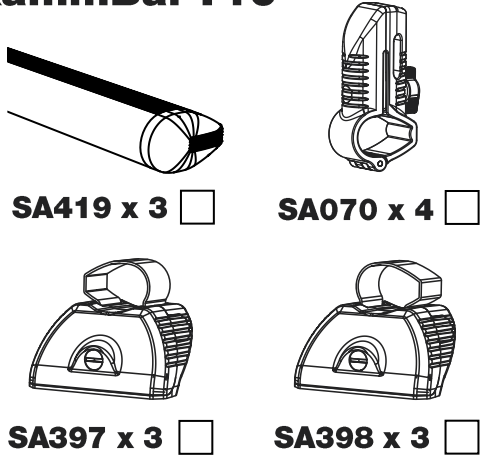

KammBar Fleet

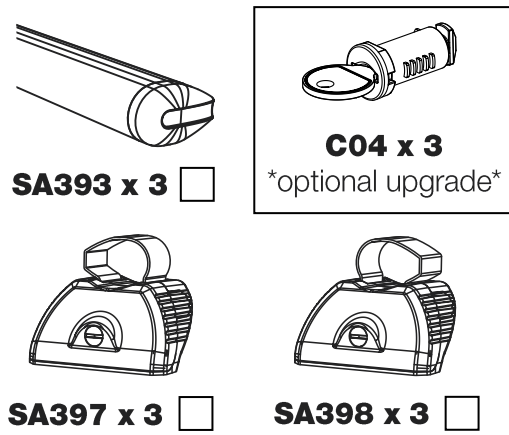

Fitting Kit

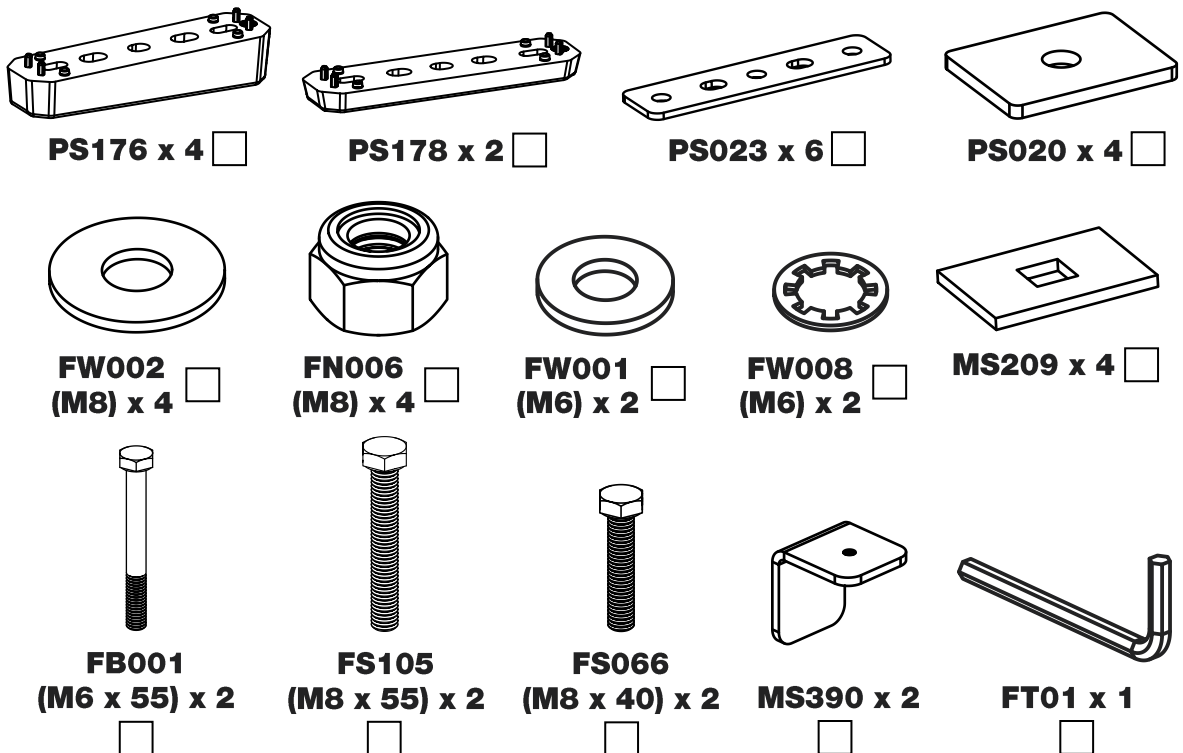


1.



2.




3.




SA397

PS176




SA397

PS178



SA397

PS176

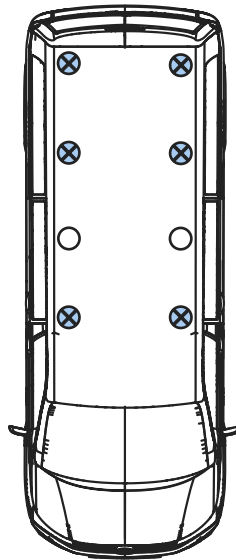

SA398




PS176

SA398





PS178

SA398



PS176

4.

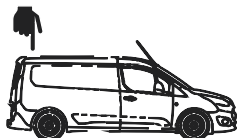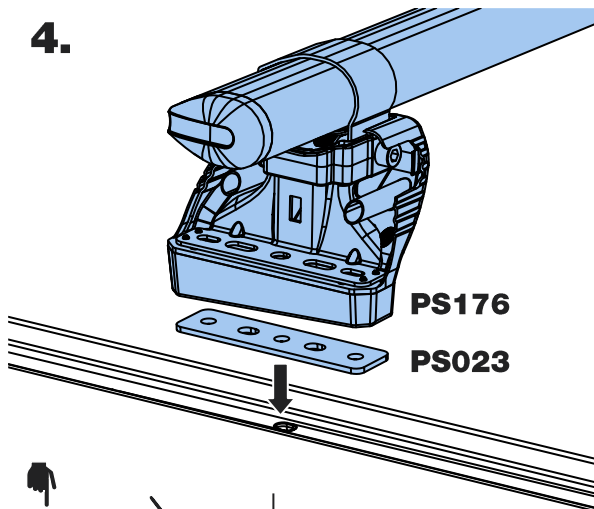

5.

