


TA4PR/FL



KammBar

Instructions

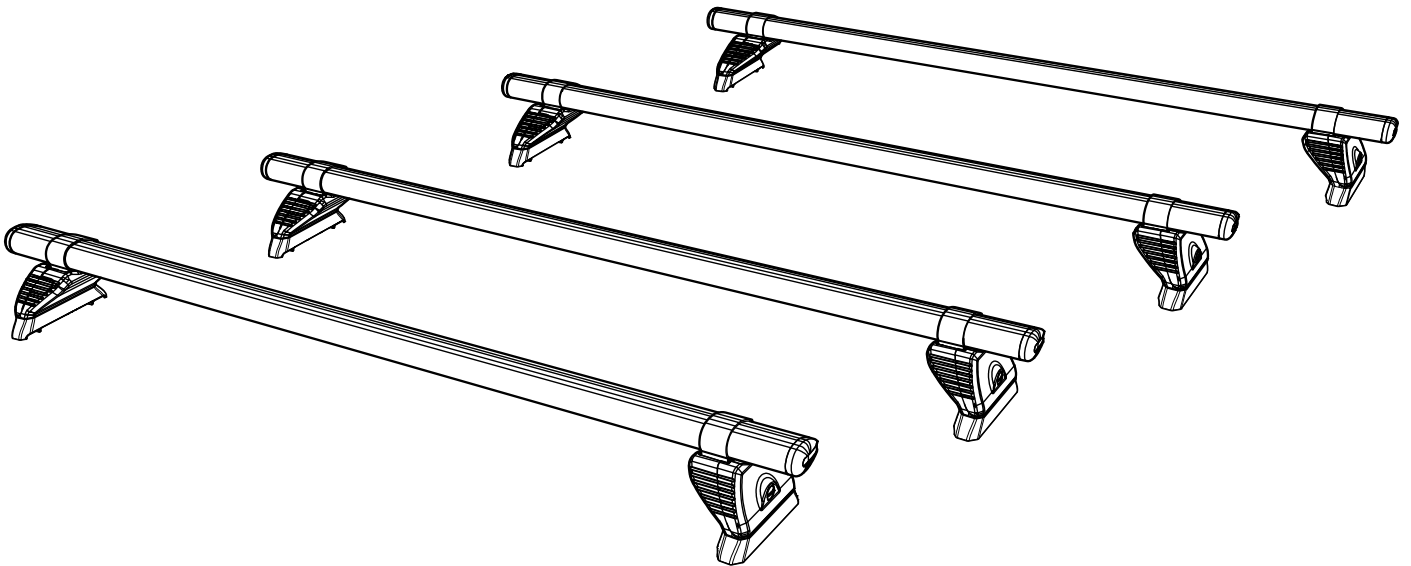


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

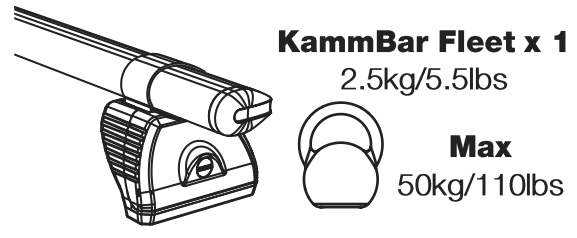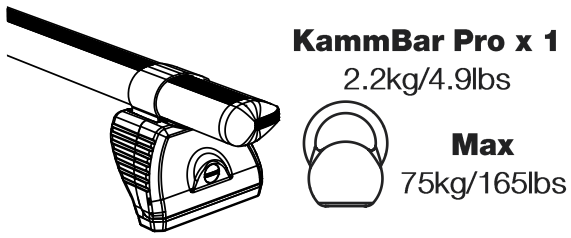


KammBar Pro

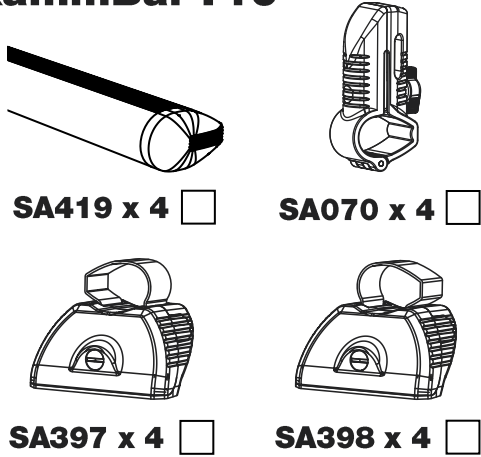

KammBar Fleet

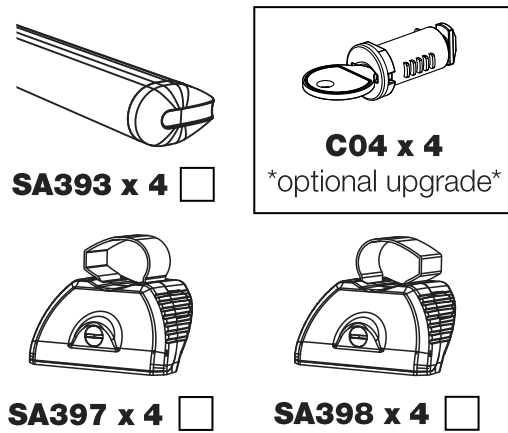

Fitting Kit

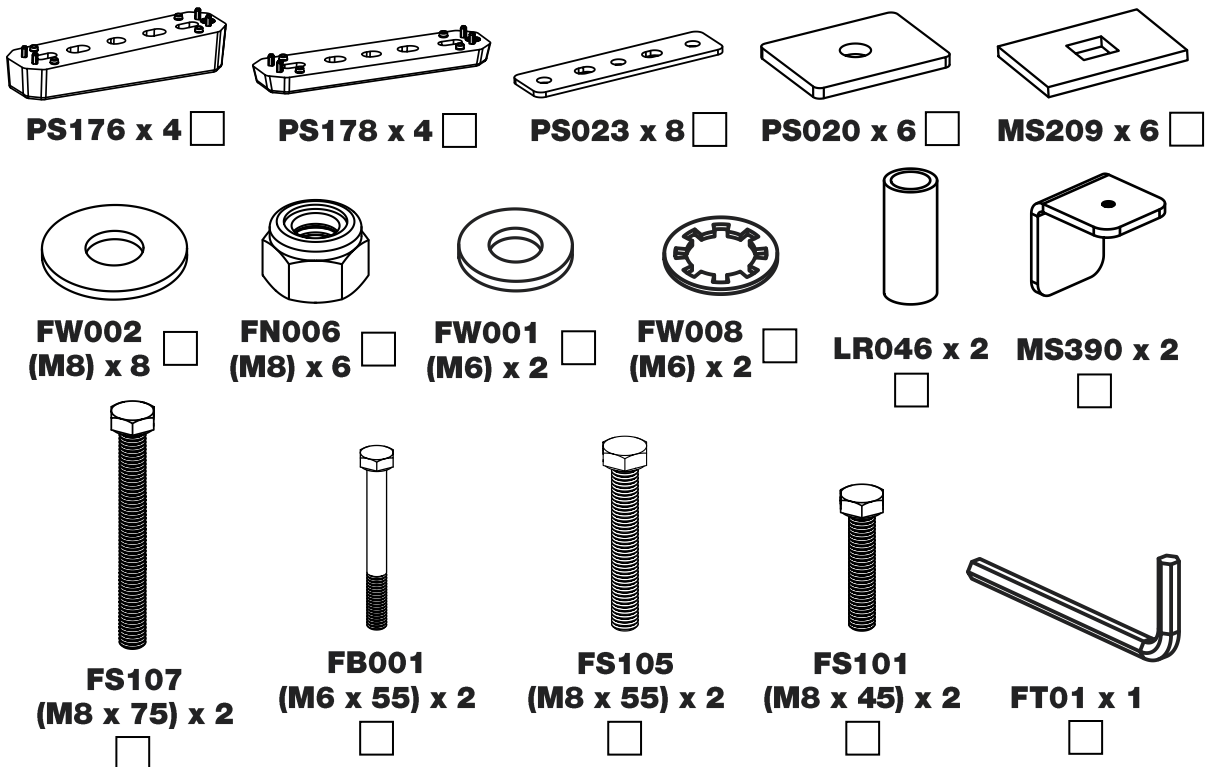


1.




2.



3.




SA397




PS176



SA397




PS178



SA397




PS178




SA397



PS176

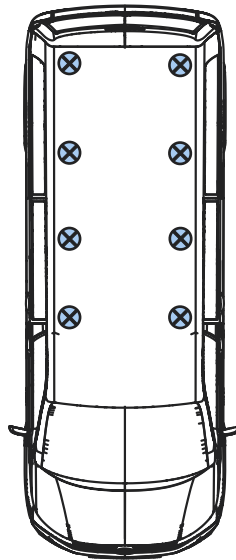

SA398



PS176



SA398



PS178




SA398



PS178





SA398





PS176















4.

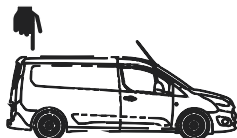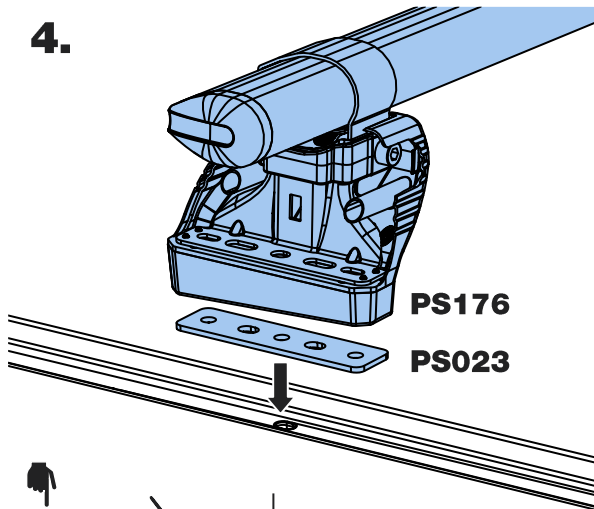


5.

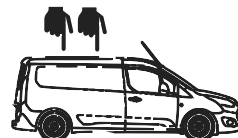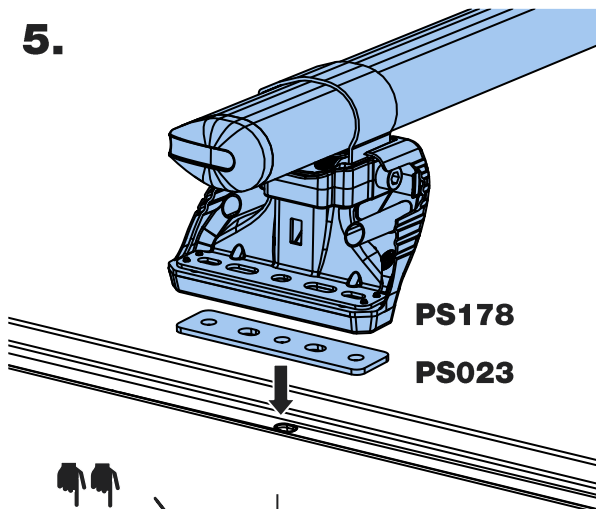

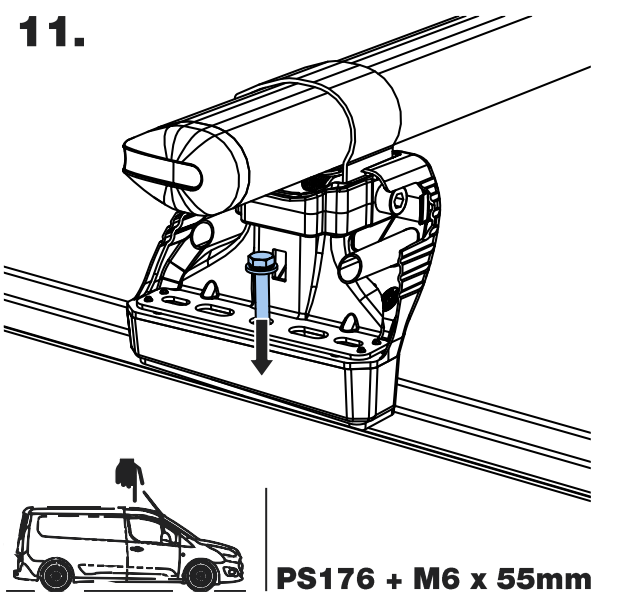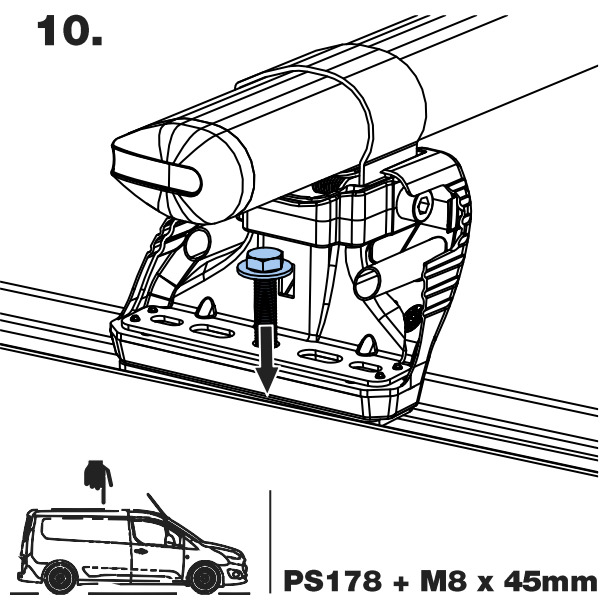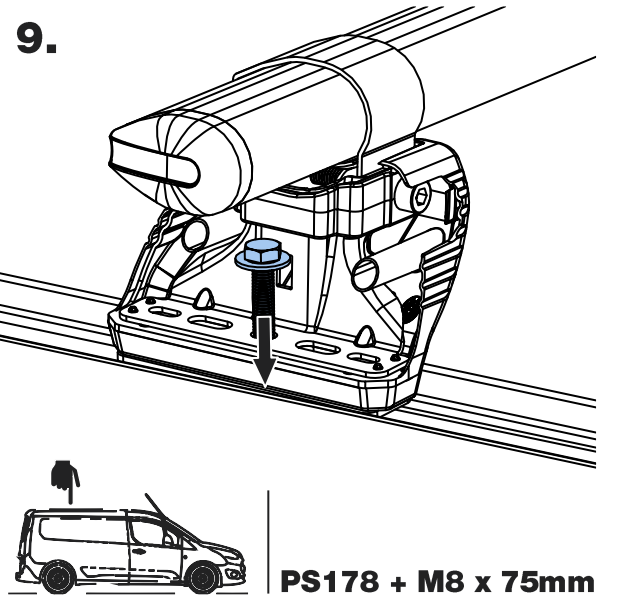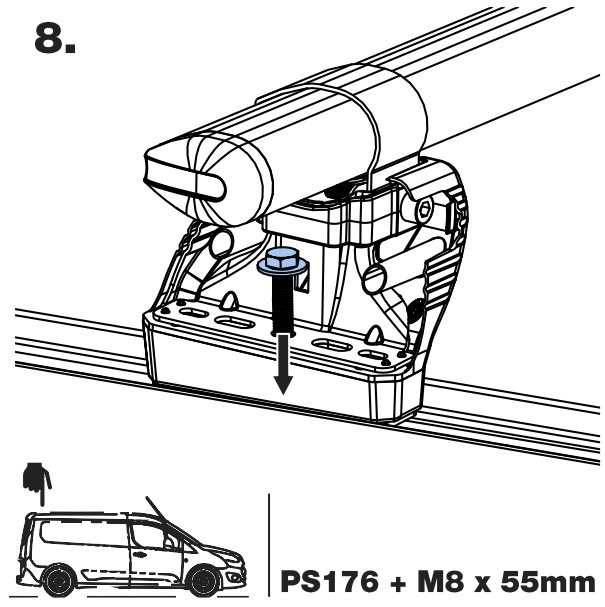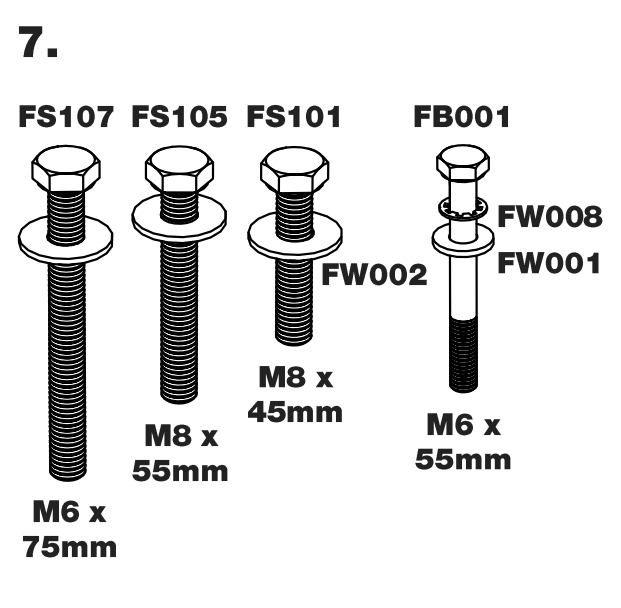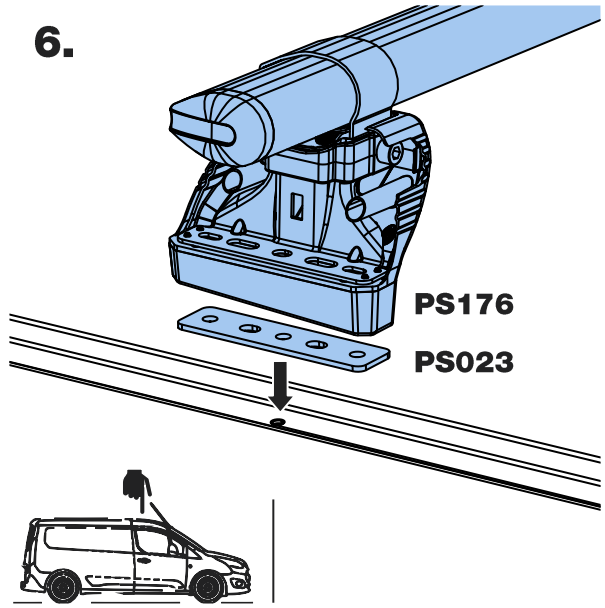

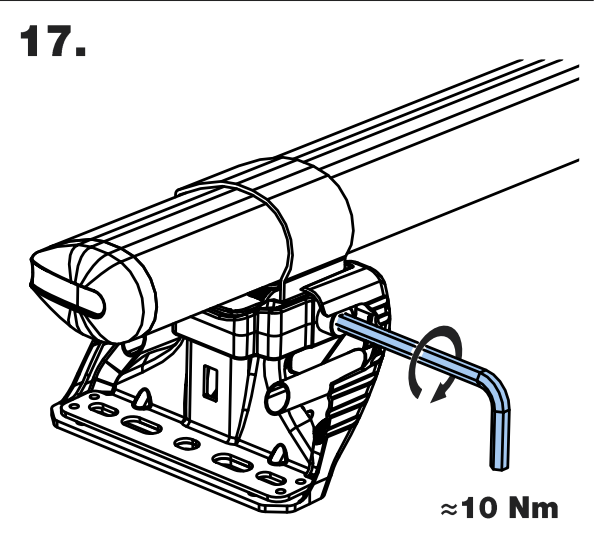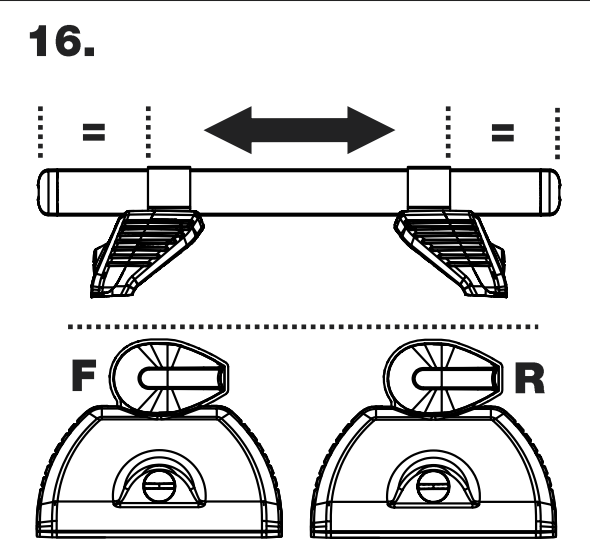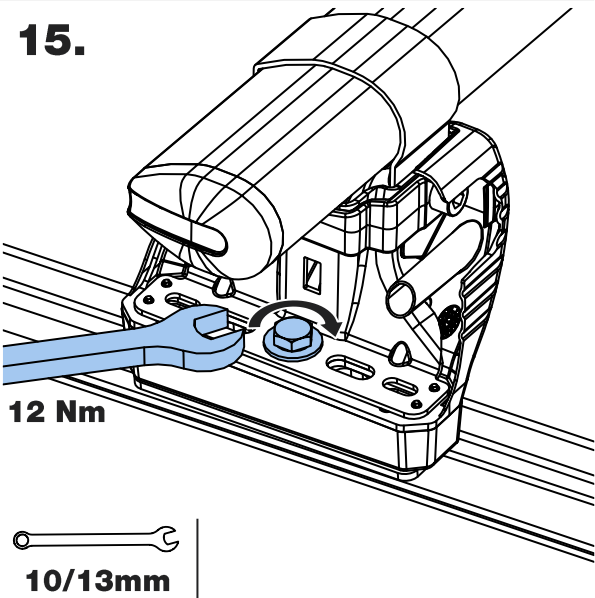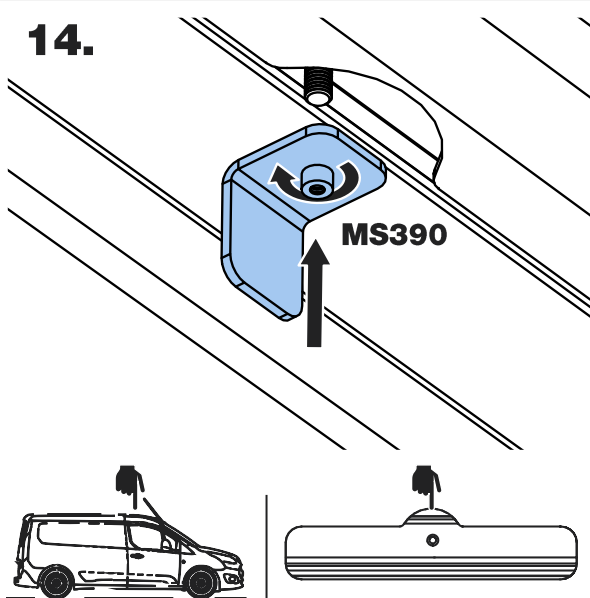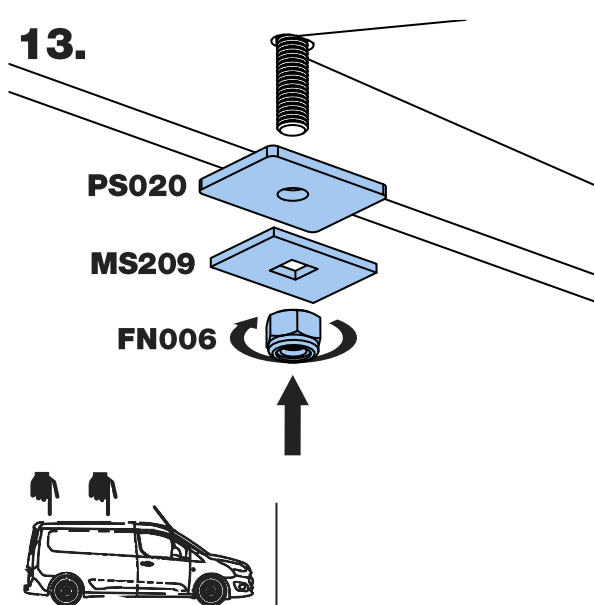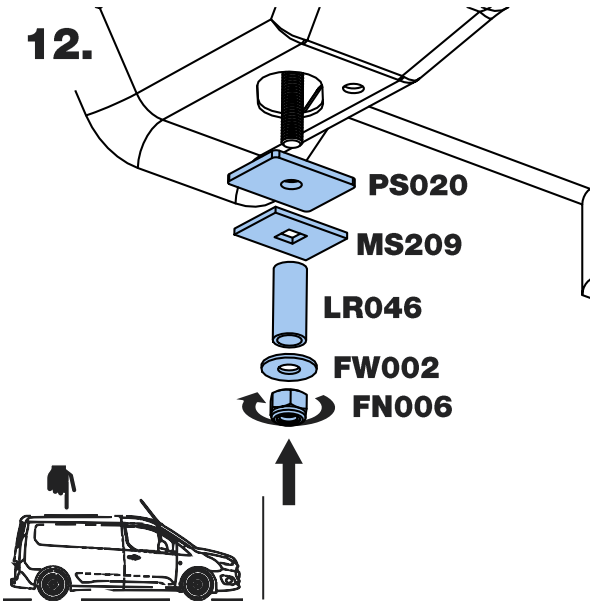

18.

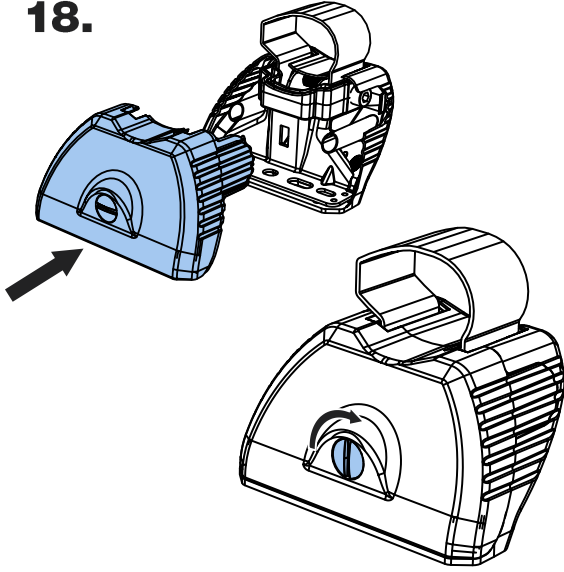

19.

