


RA2PR/FL




KammBar

Instructions

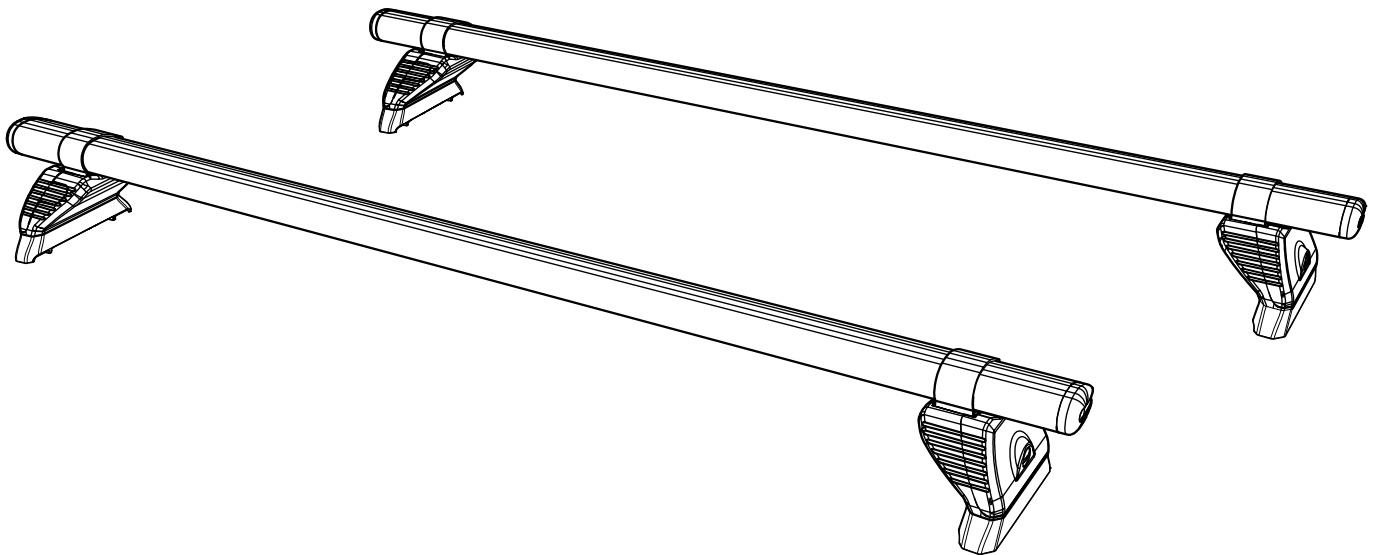


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

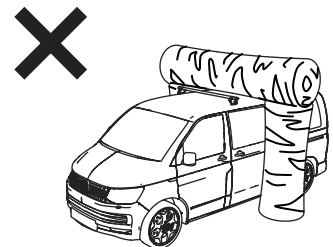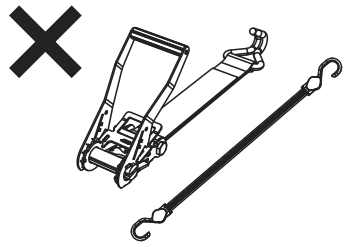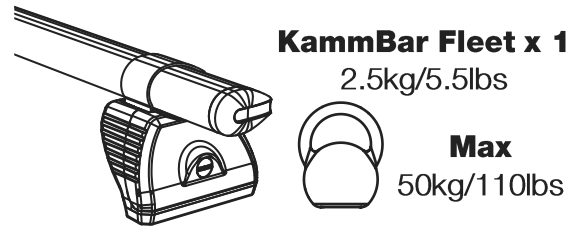


KammBar Pro

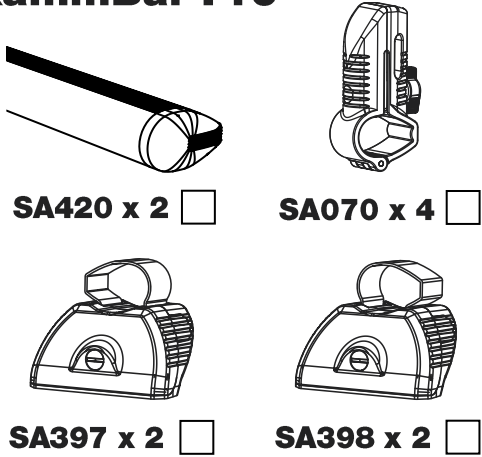

KammBar Fleet

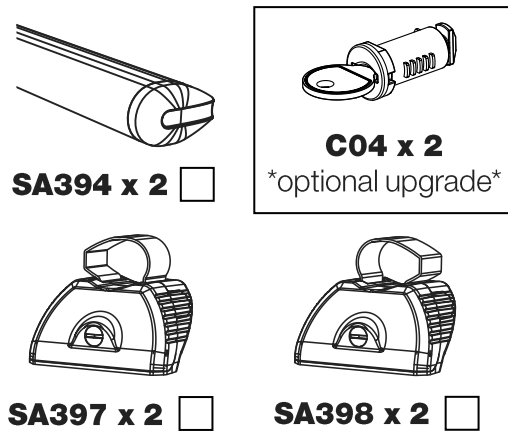


Fitting Kit

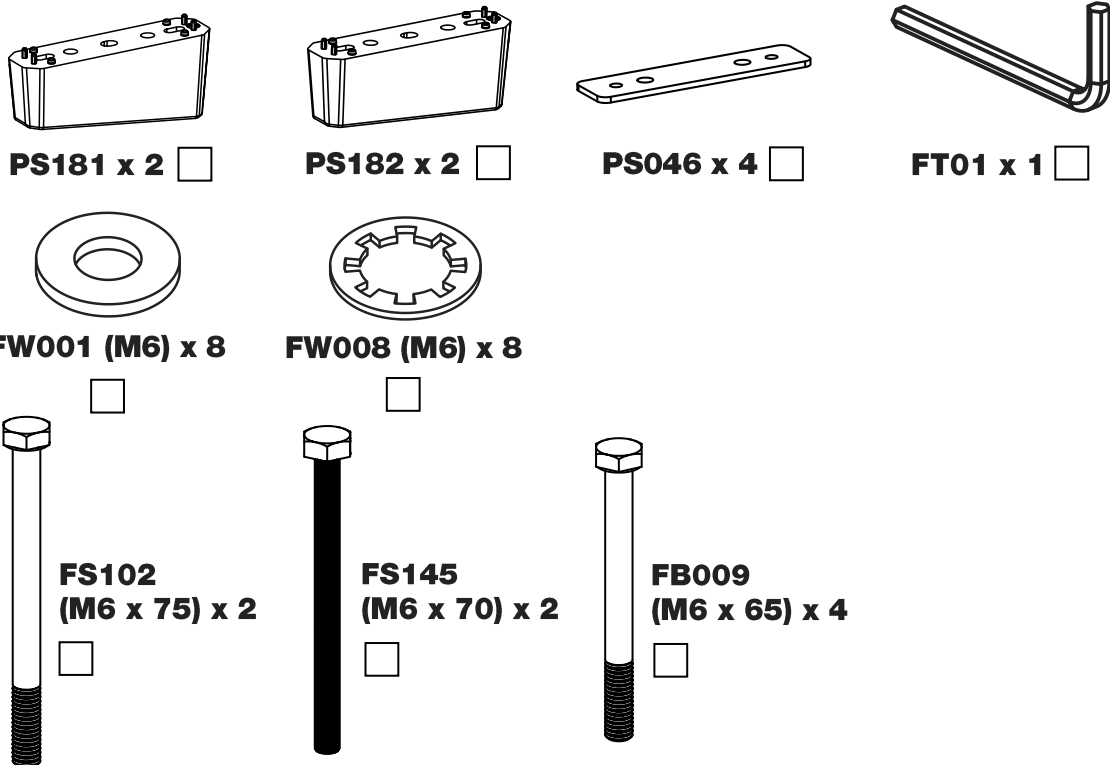


1.



2.

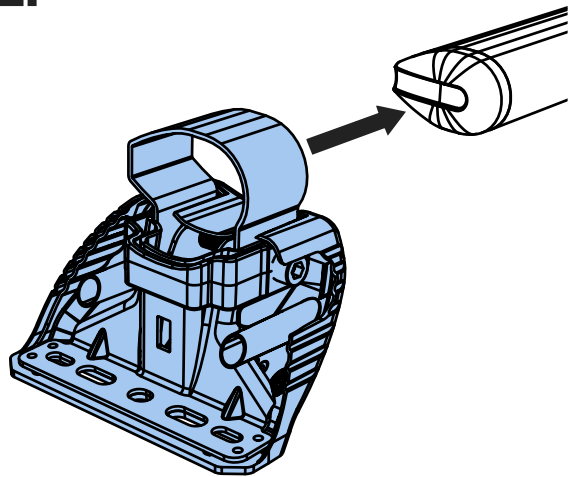


3.



SA397


PS182

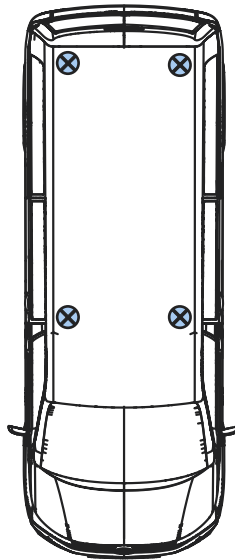

SA398



PS182



SA397


PS181

SA398










PS181

4.

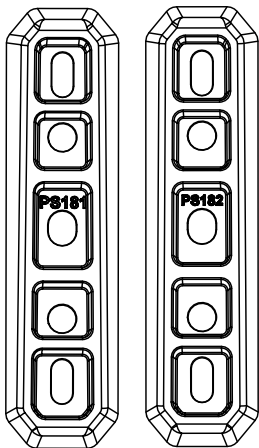


5.

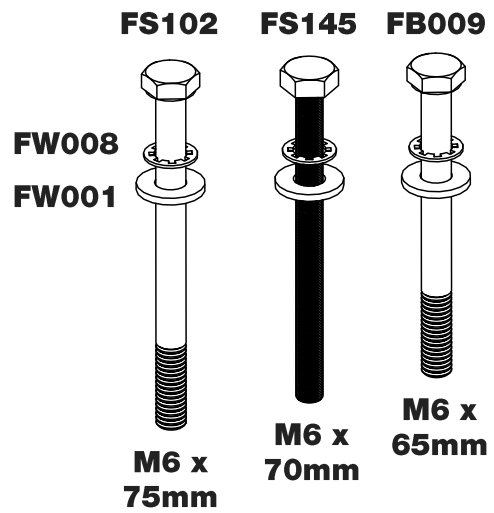

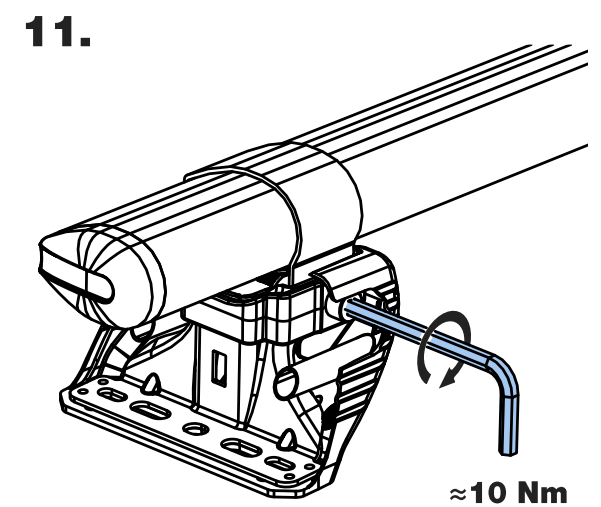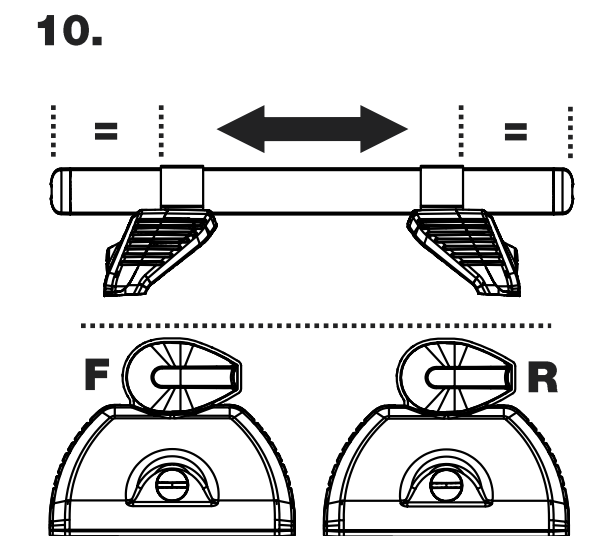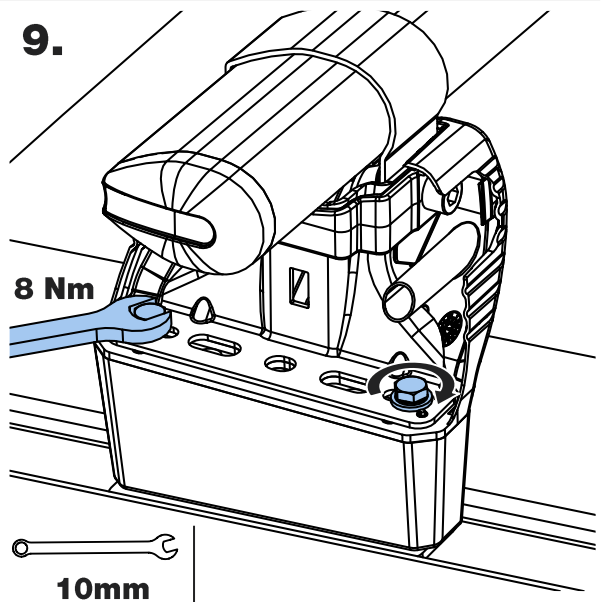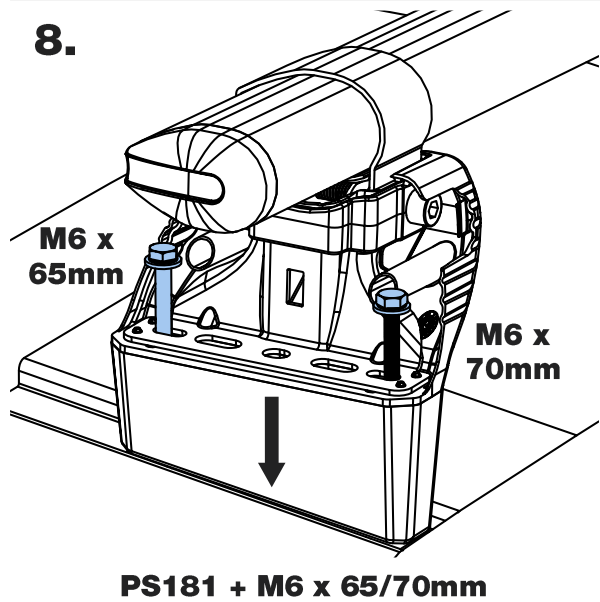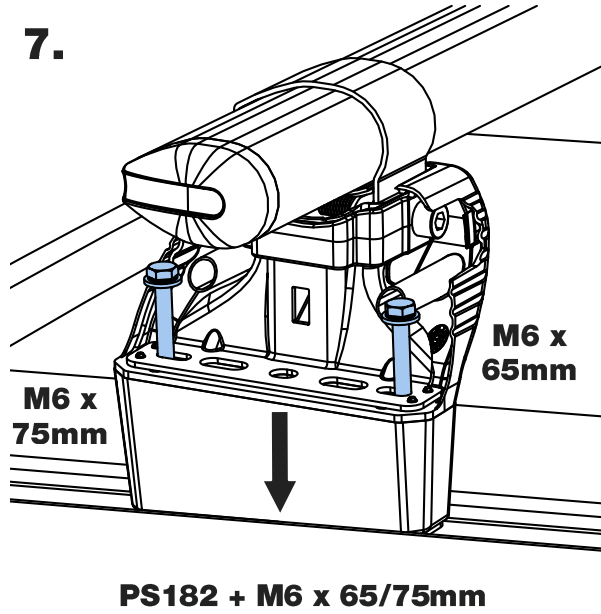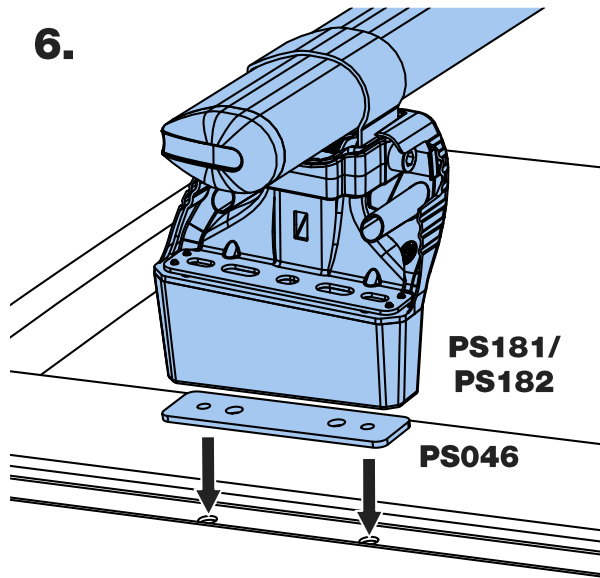

12.

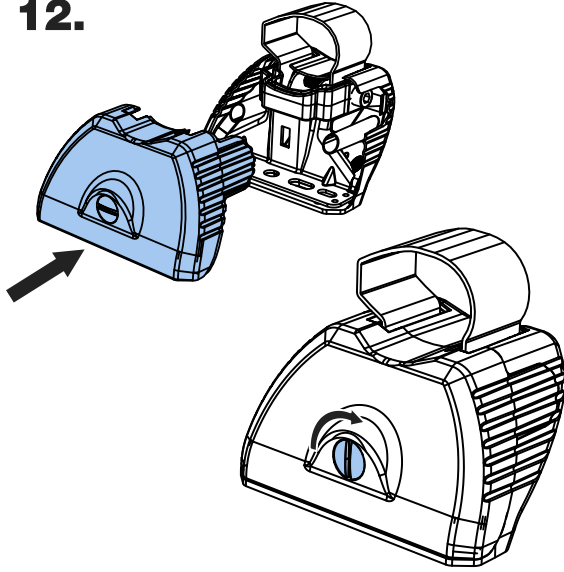

13.

