


# RA3PR/FL





# KammBar

## Instructions

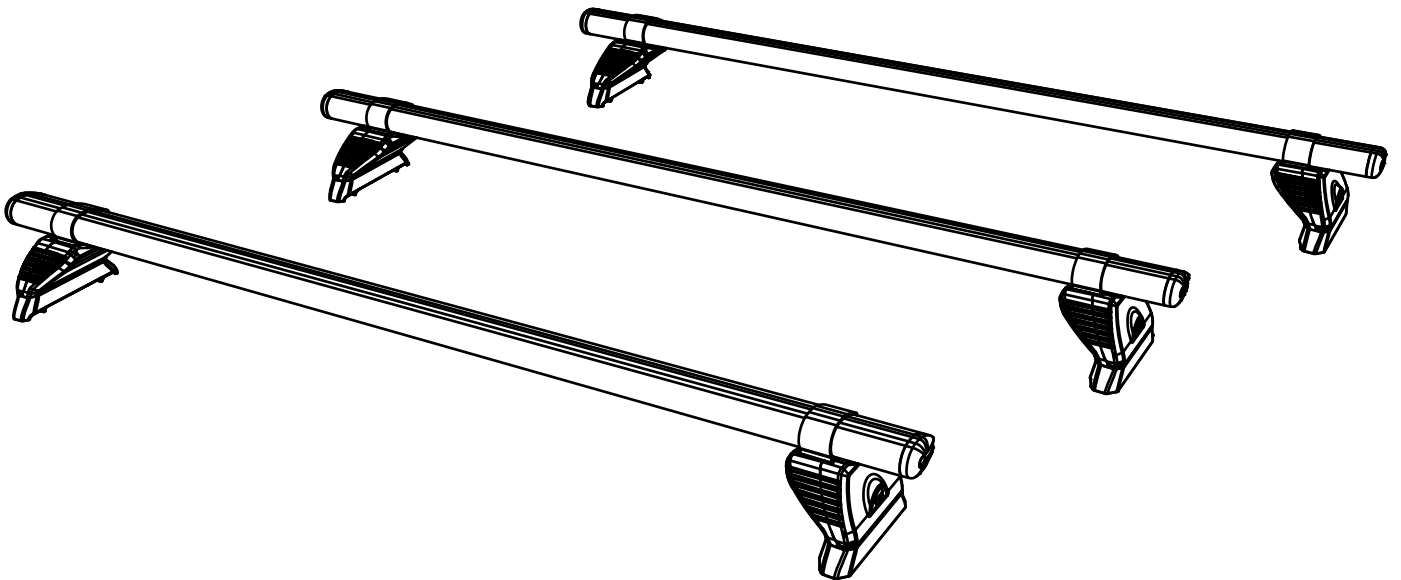


**CITY CRASH (✓)**


According to ISO/ PAS 11154:2006

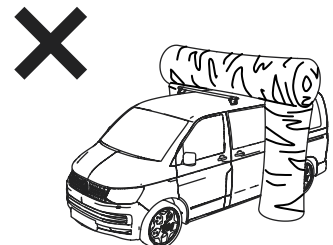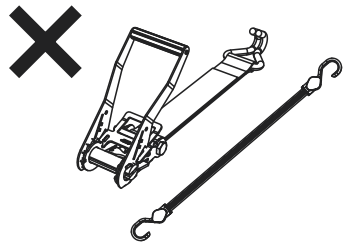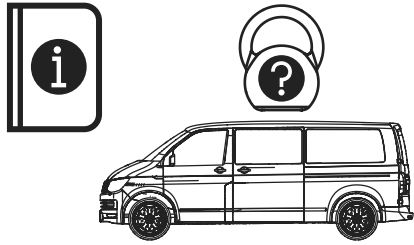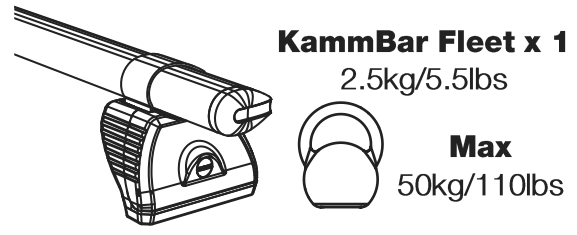


### KammBar Pro

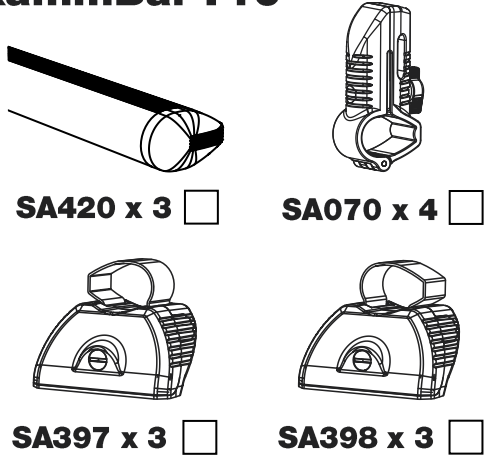


### KammBar Fleet

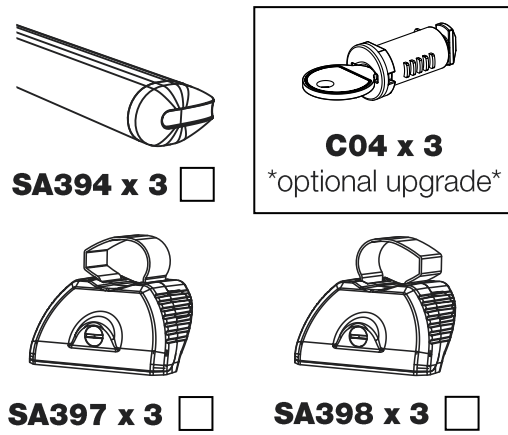


### Fitting Kit

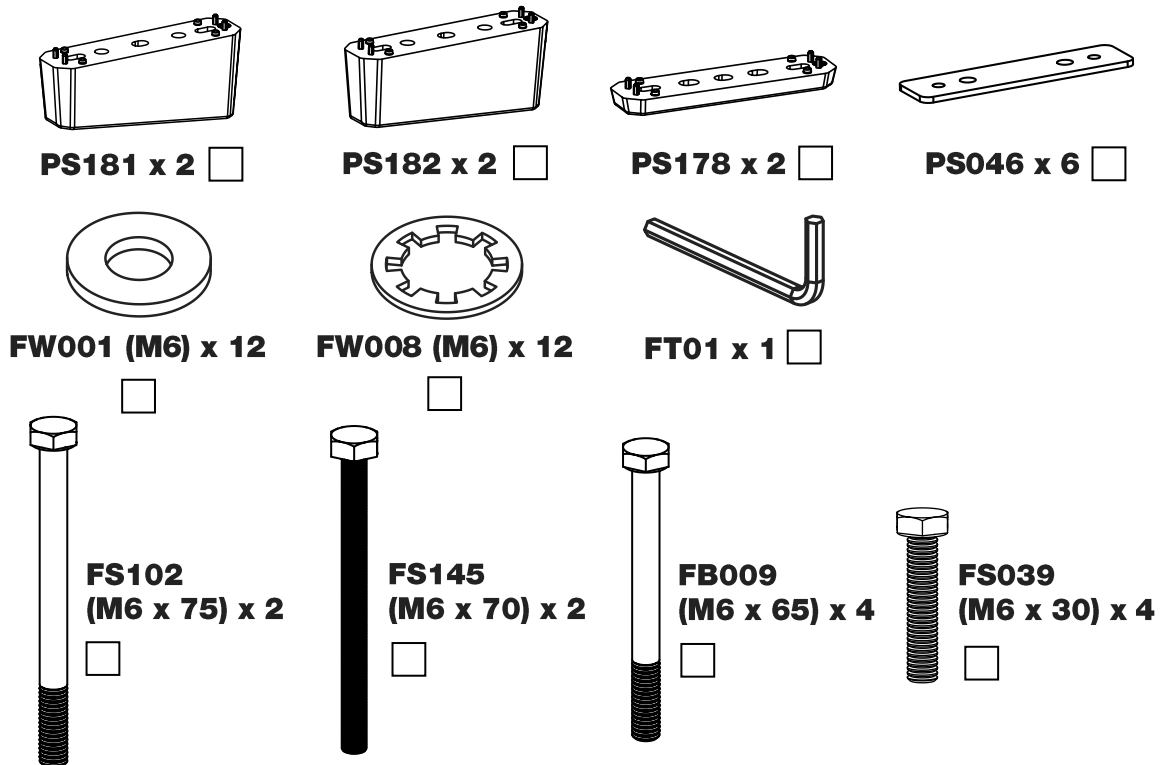

1.

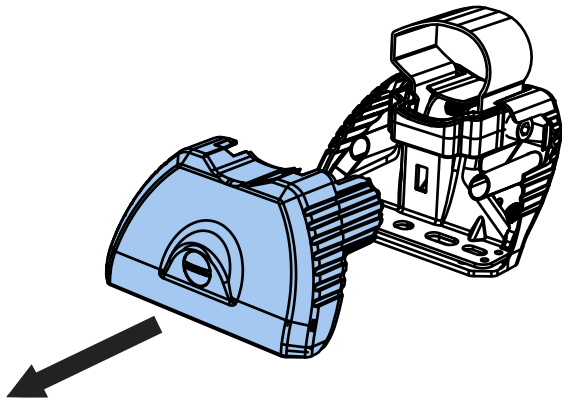

2.

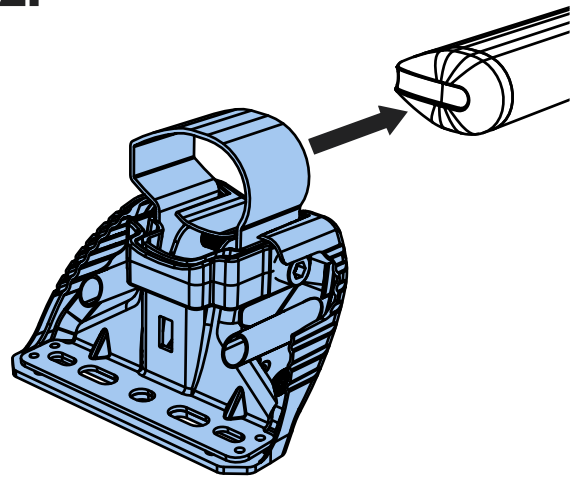

3.



SA397

PS182




SA397

PS178



SA397

PS181

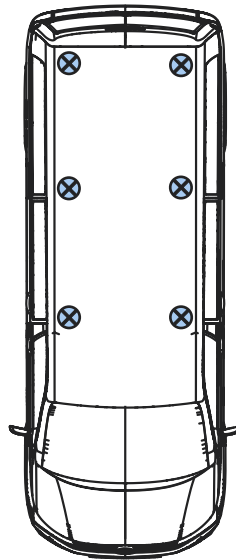

SA398

PS182


SA398

PS178


SA398







PS181

4.

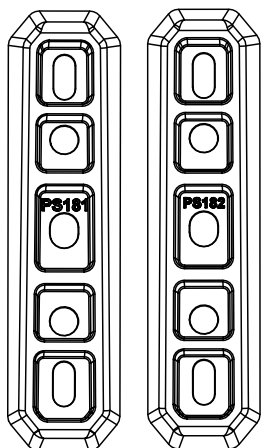


5.

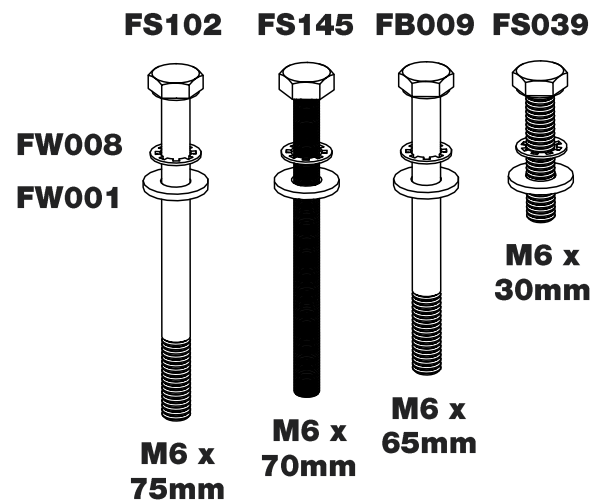


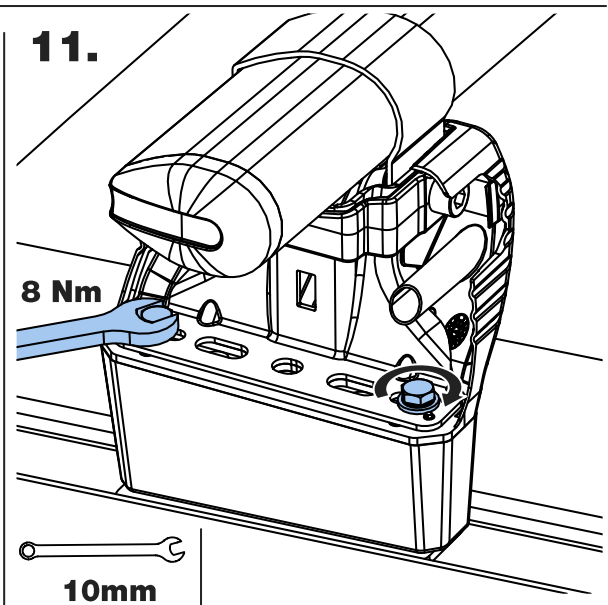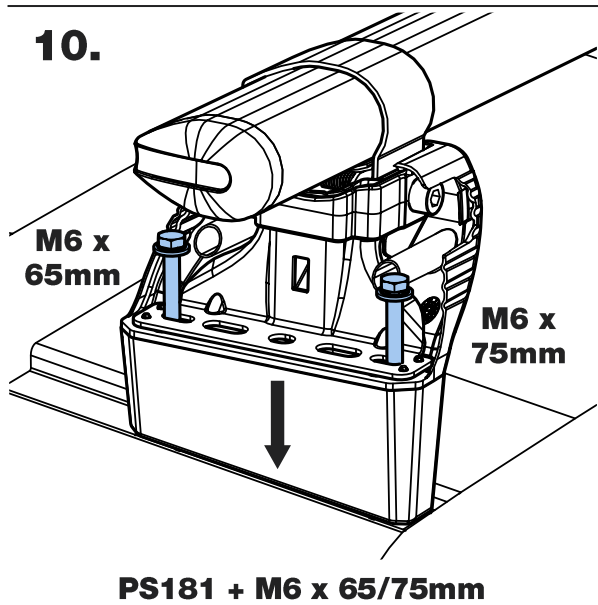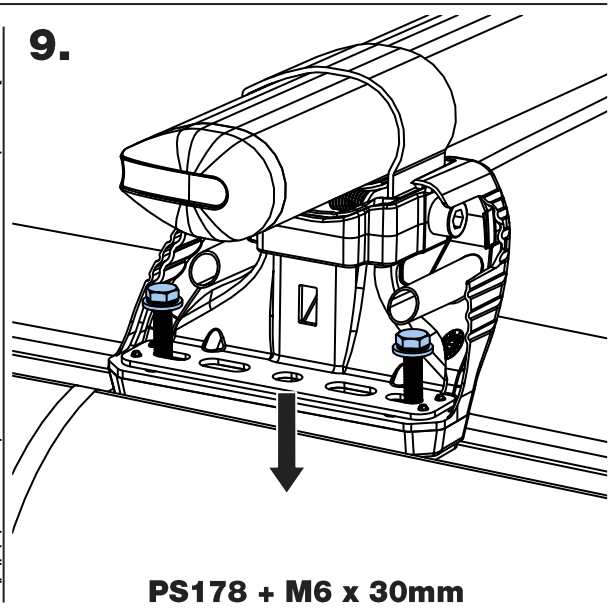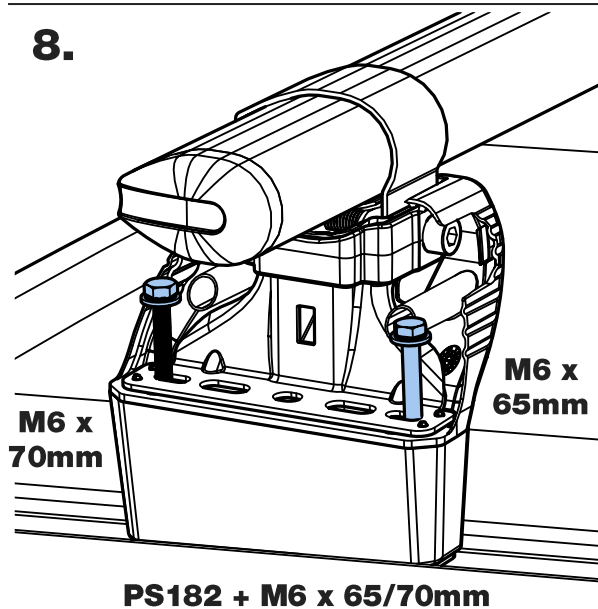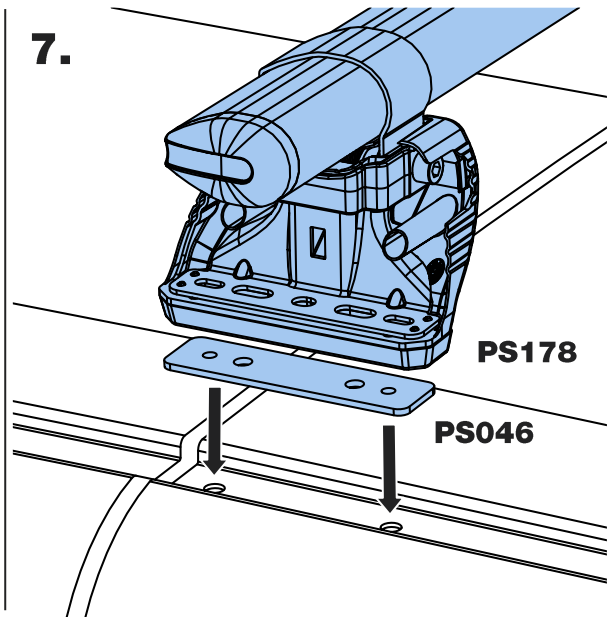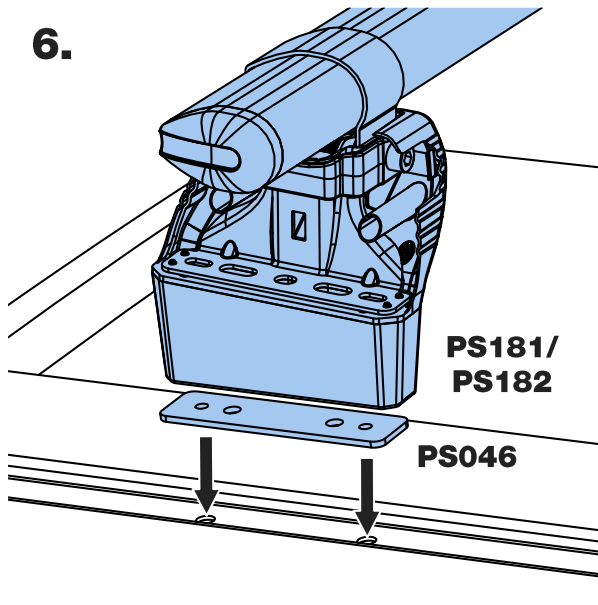


12.

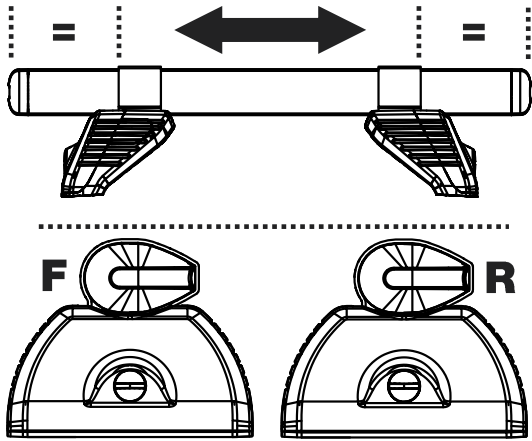

13.

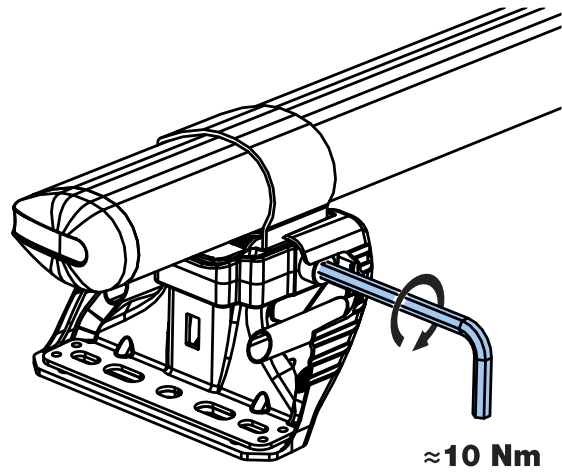

14.

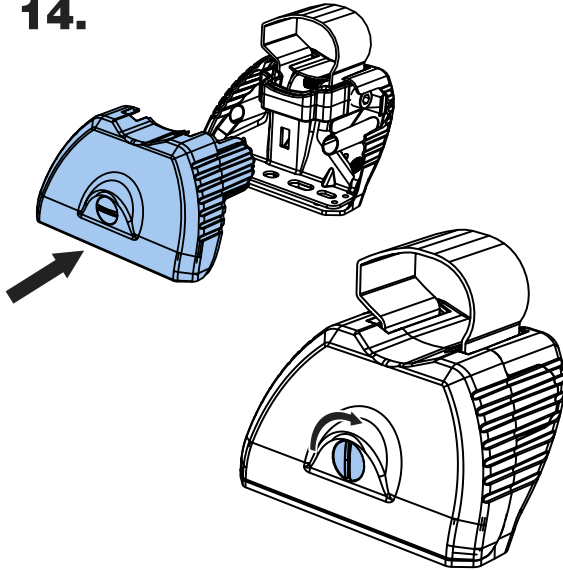

15.

