


# RA4PR/FL



# KammBar

## Instructions


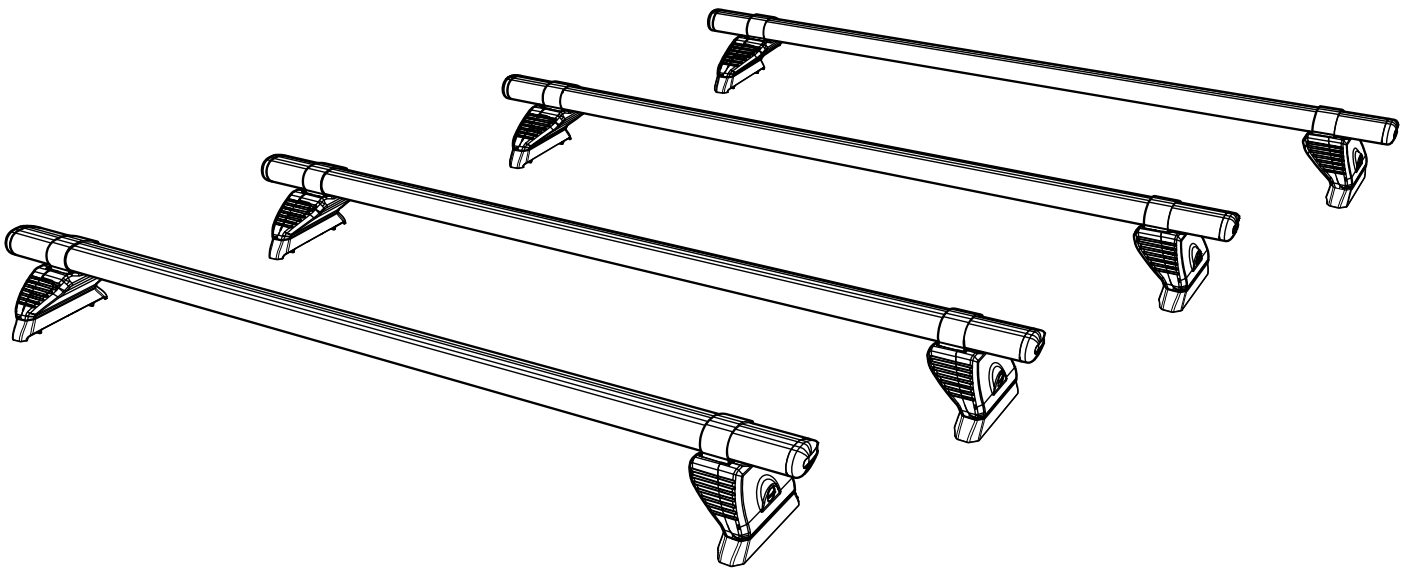


**CITY CRASH** (✓)



According to ISO/ PAS 11154:2006

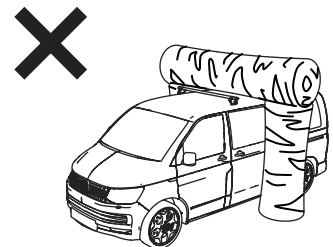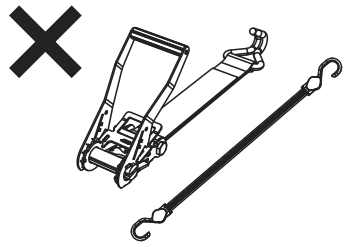




### KammBar Pro

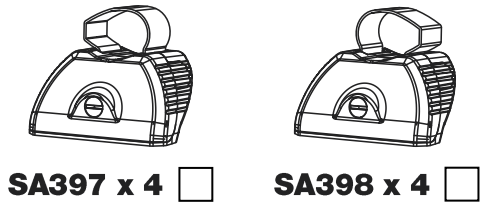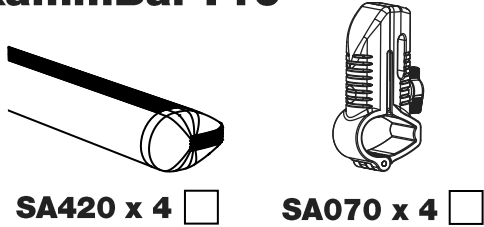


### KammBar Fleet

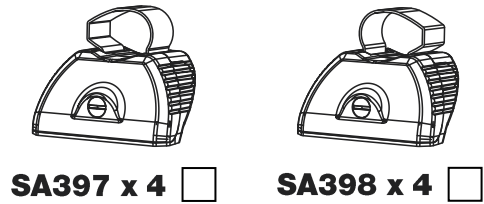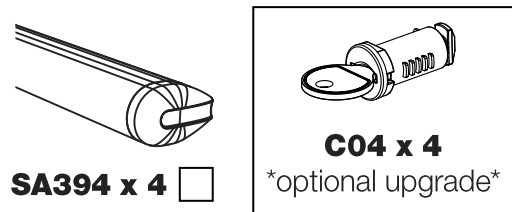


### Fitting Kit

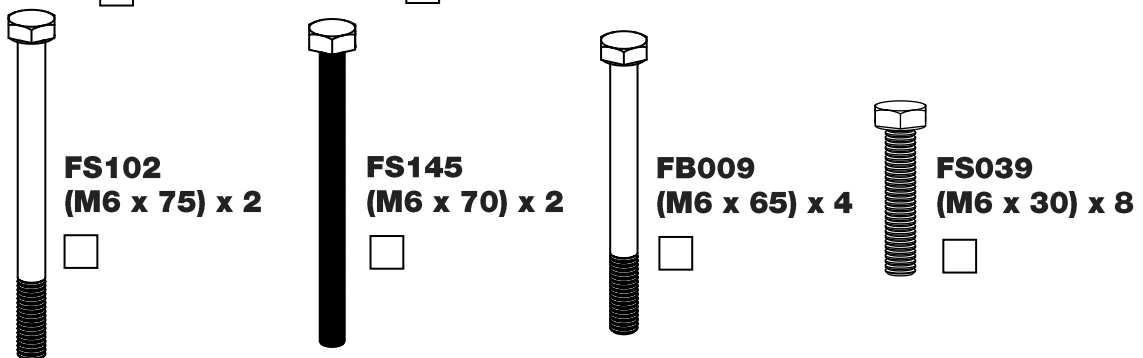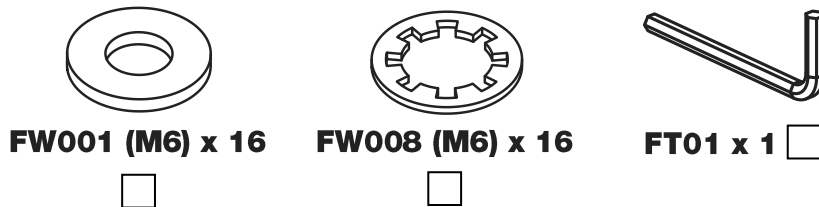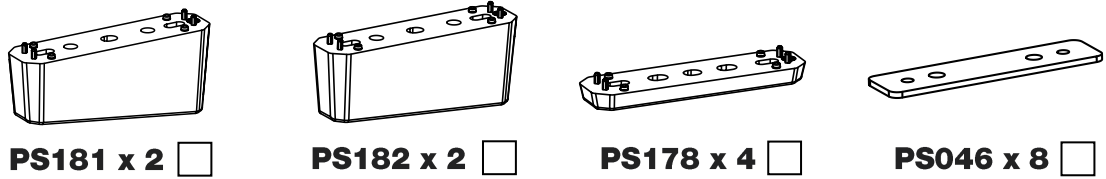

1.

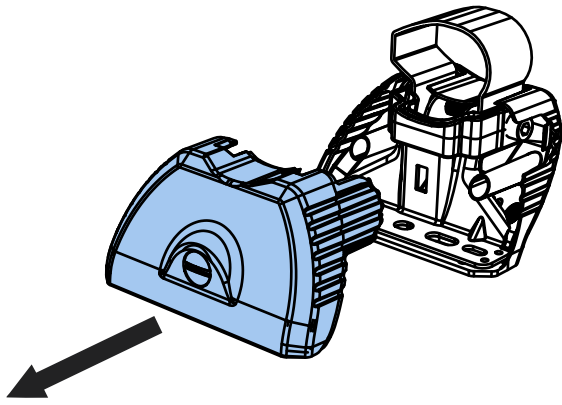

2.

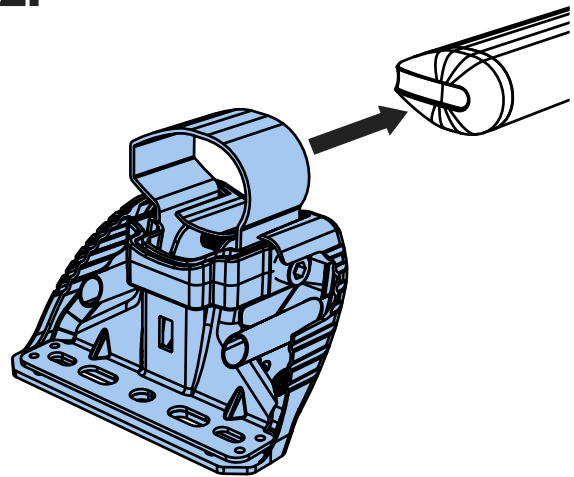


3.




SA397

PS182



SA397

PS178




SA397

PS178




SA397

PS181

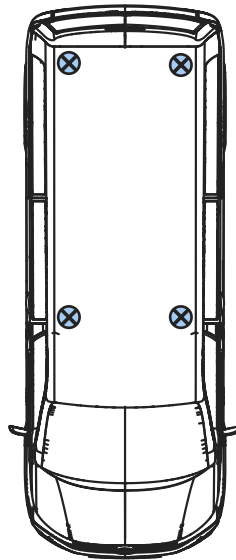


SA398



PS182

SA398




PS178

SA398




PS178

SA398



PS181

4.

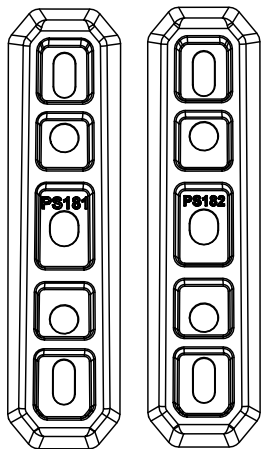

5.

FS102


FS145

FB009


FS039

FW008


FW001




M6 x 75mm



M6 x 70mm









M6 x 65mm




M6 x 30mm




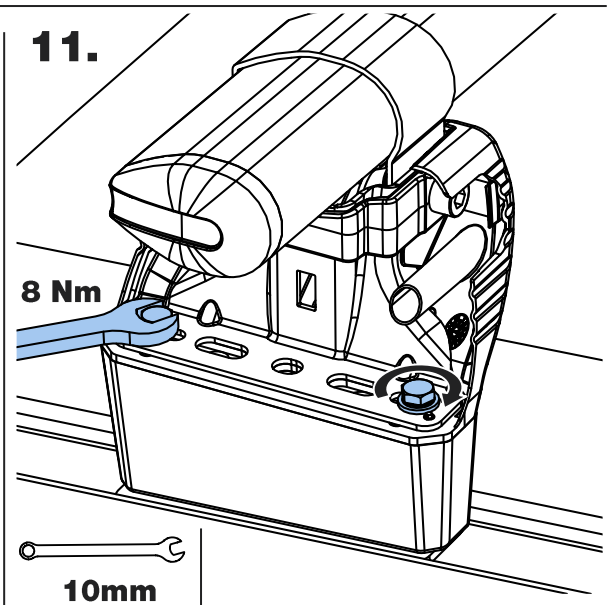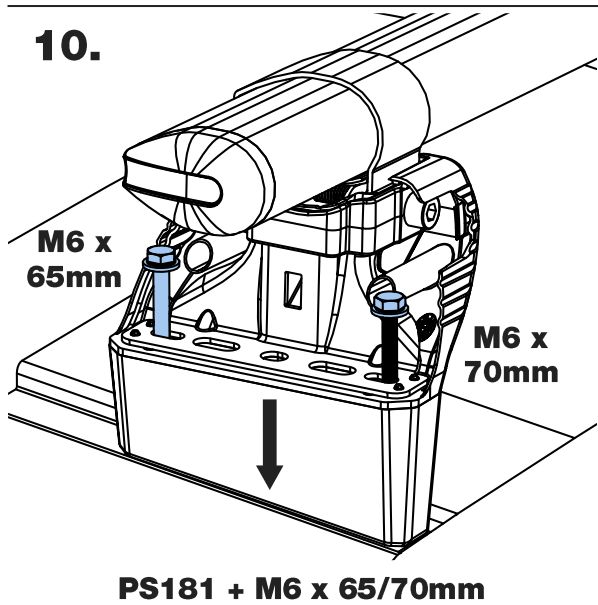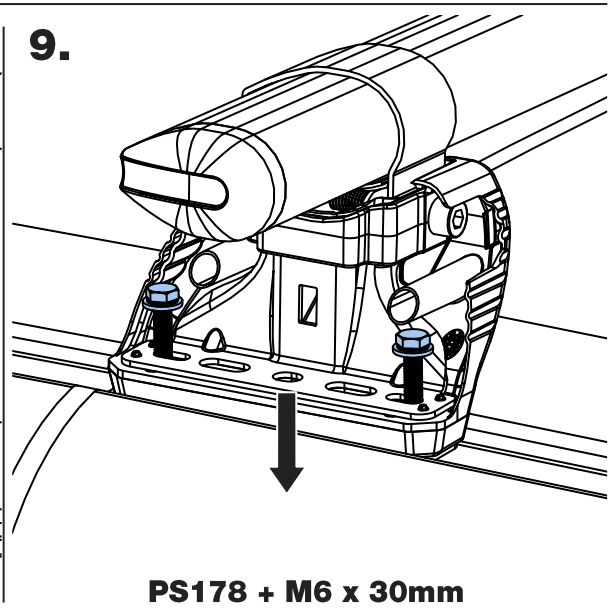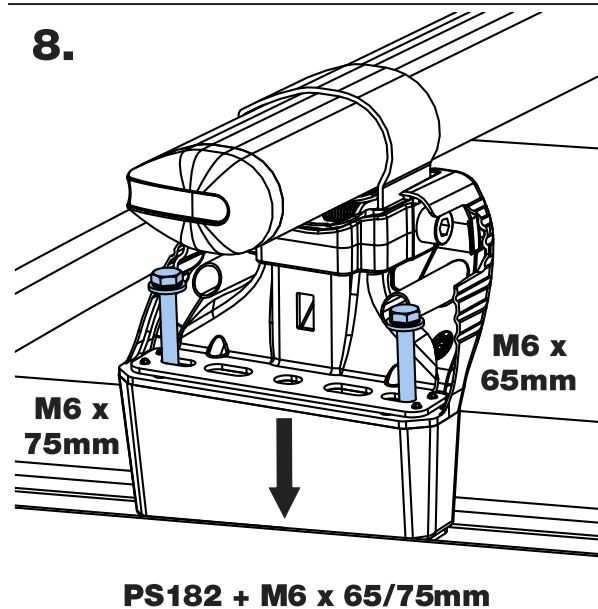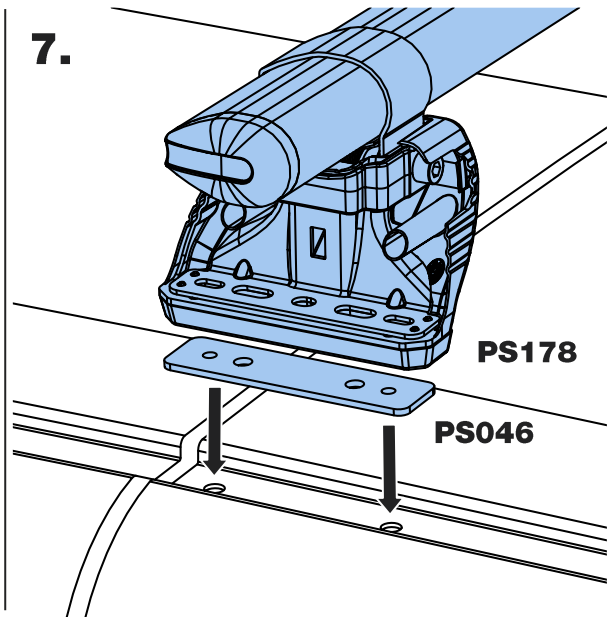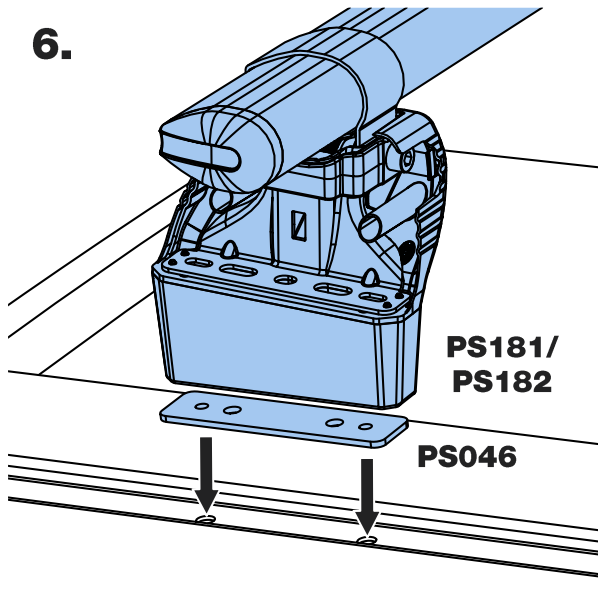


12.

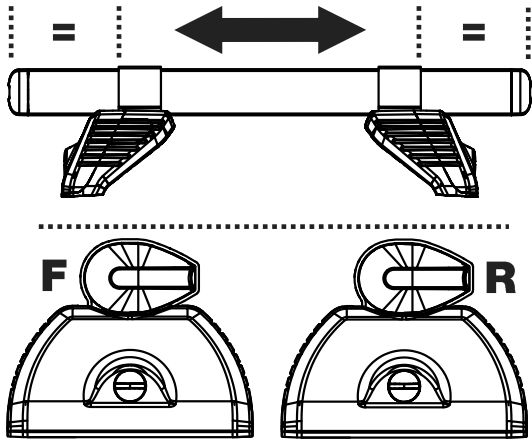

13.

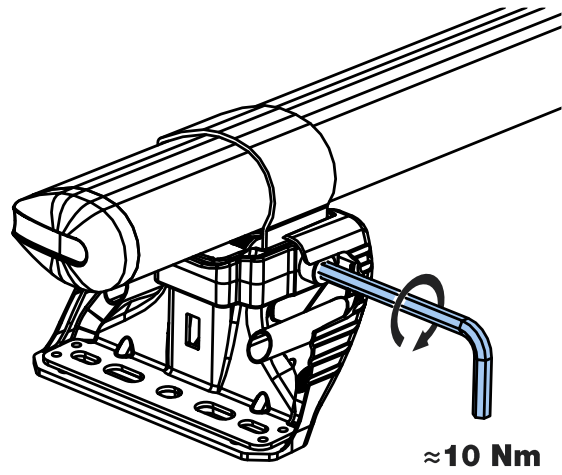

14.

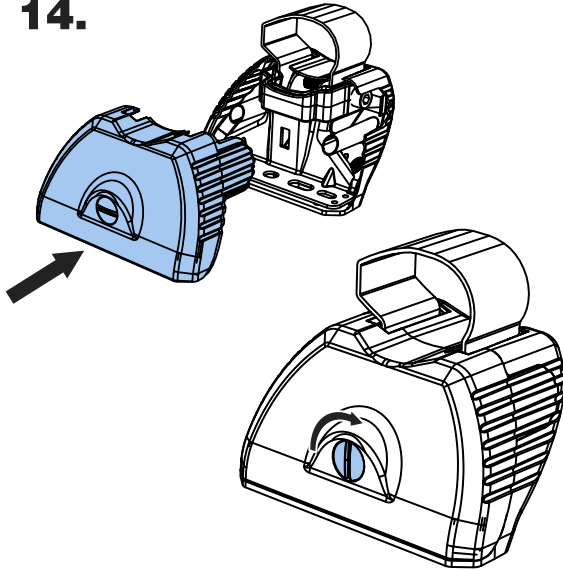

15.

