


KB3PR/FL




KammBar

Instructions

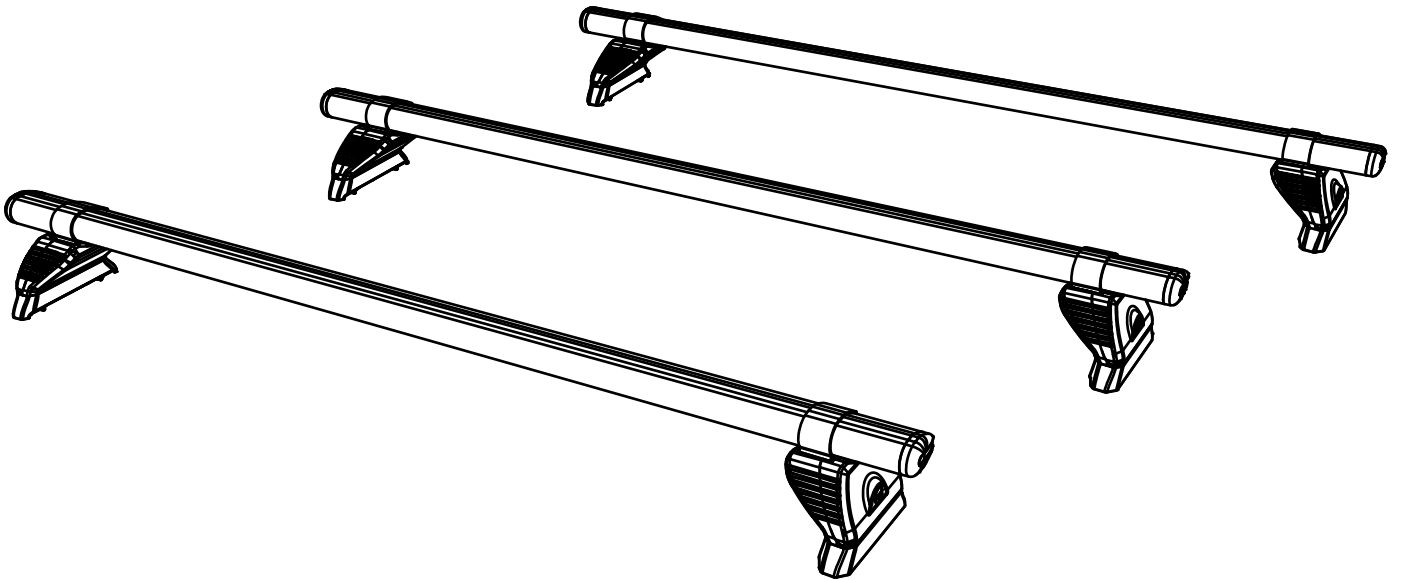


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

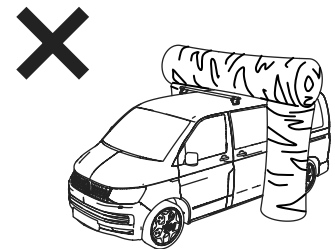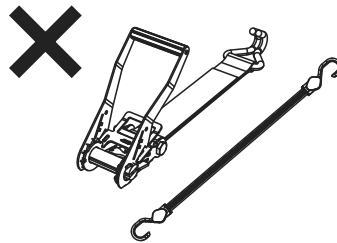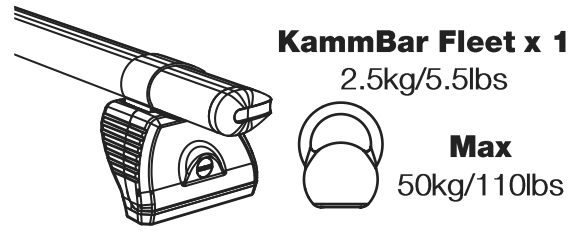


KammBar Pro

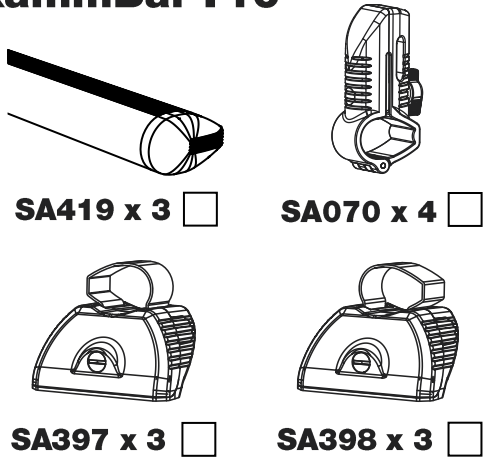


KammBar Fleet

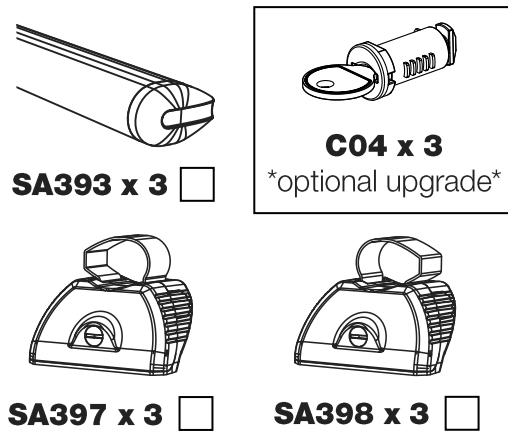


Fitting Kit

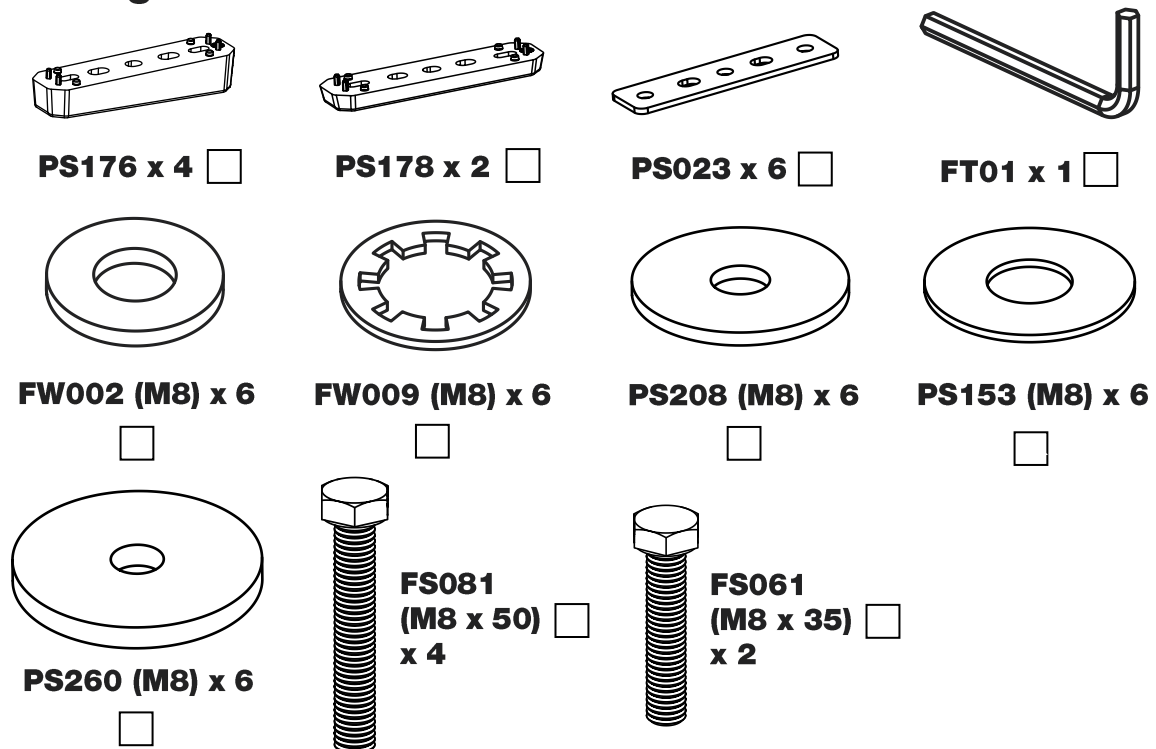


1.

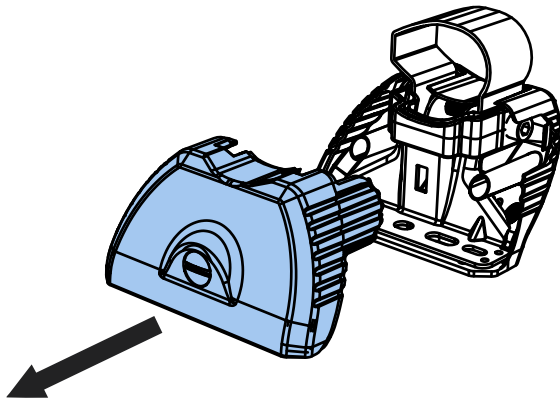

2.

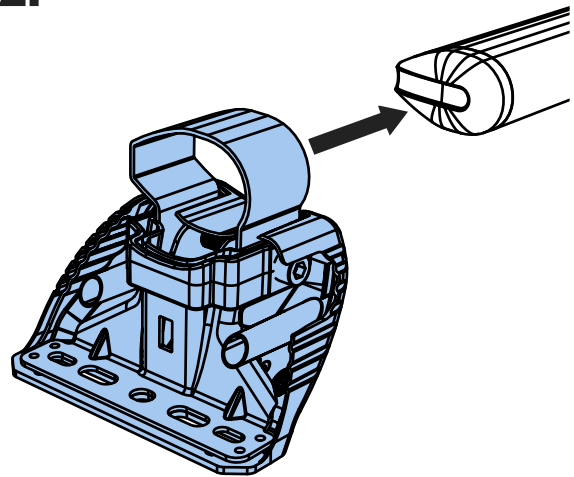


3.




SA397

PS176




SA397

PS178




SA397

PS176

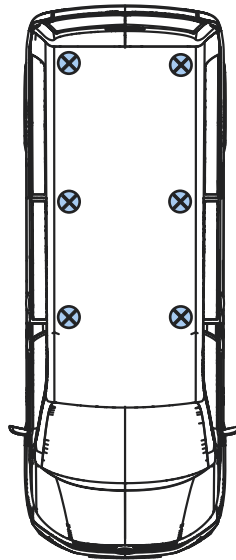


SA398

PS176




SA398

PS178



SA398


PS176









4.


MODEL	PS153	PS260
Kangoo	✓	✗
NV200	✗	✗
Citan	✓	✗
Caddy Maxi	✗	✓

5.

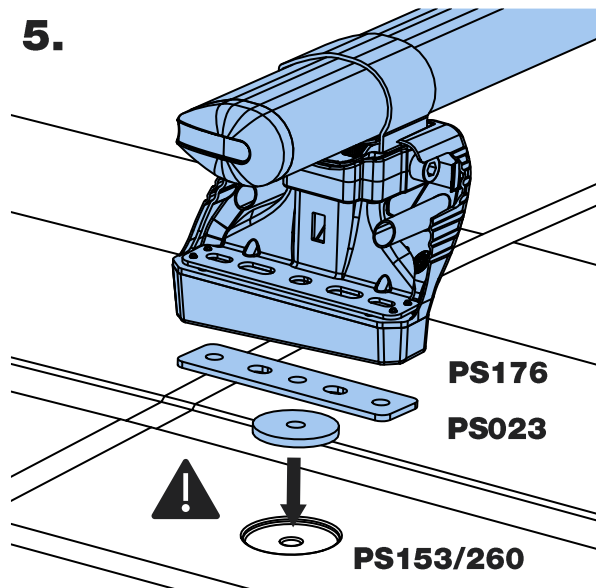


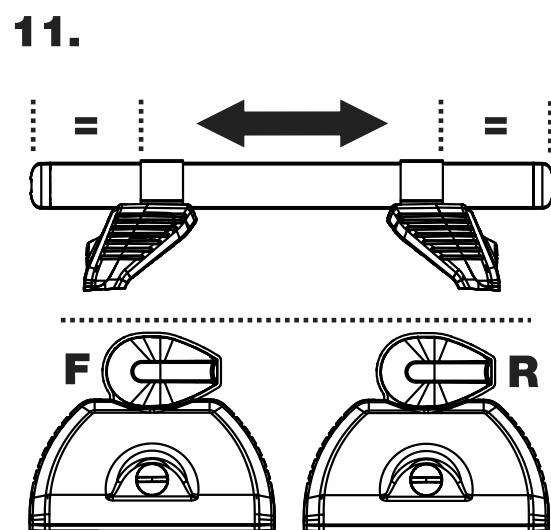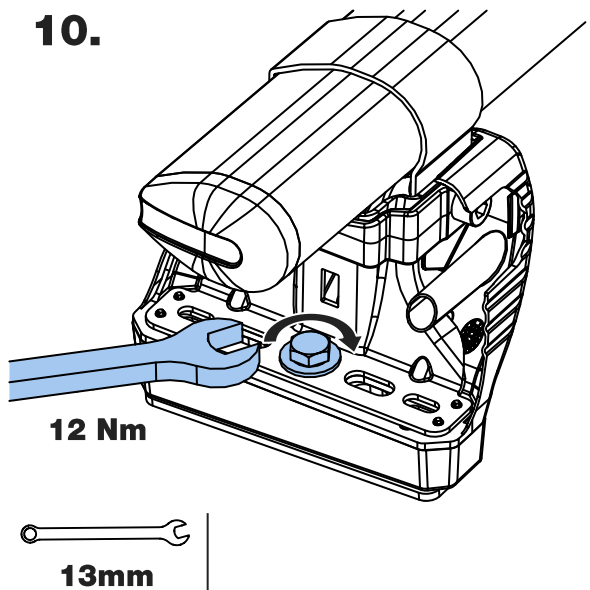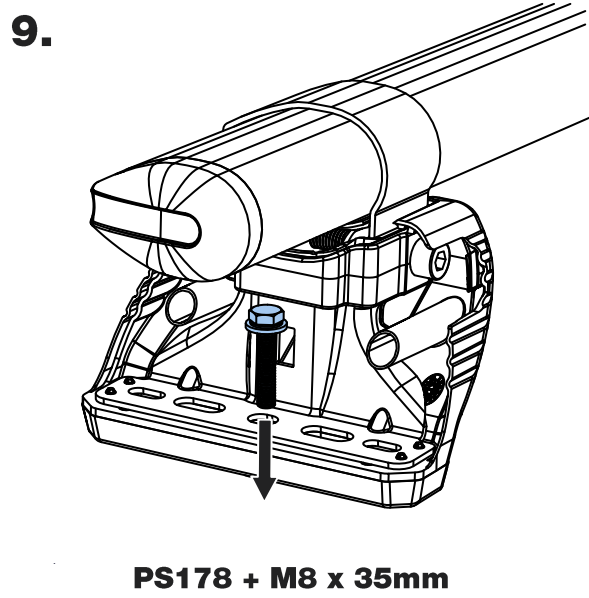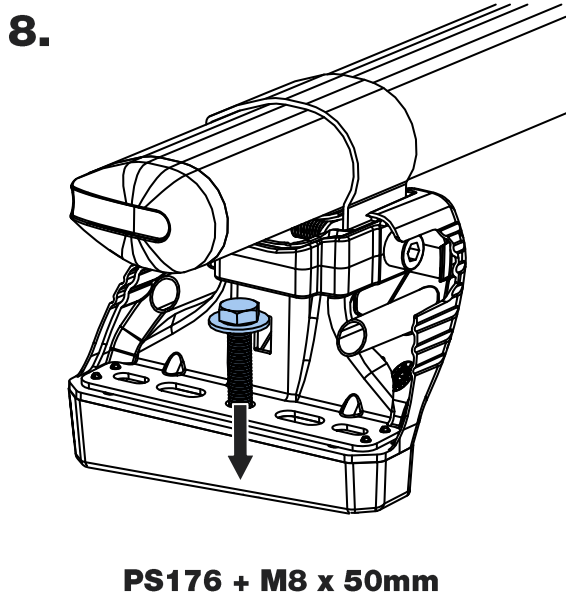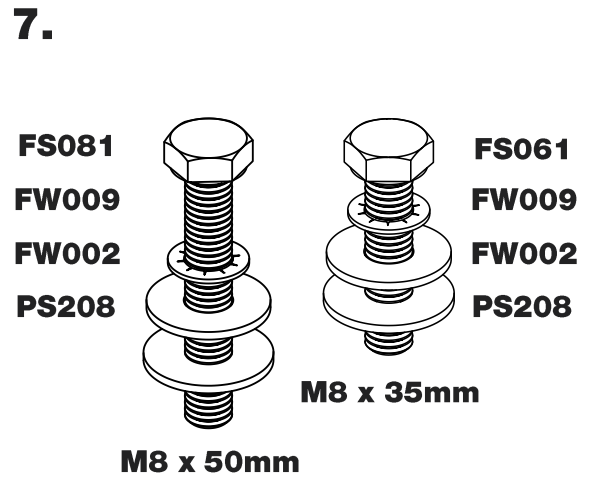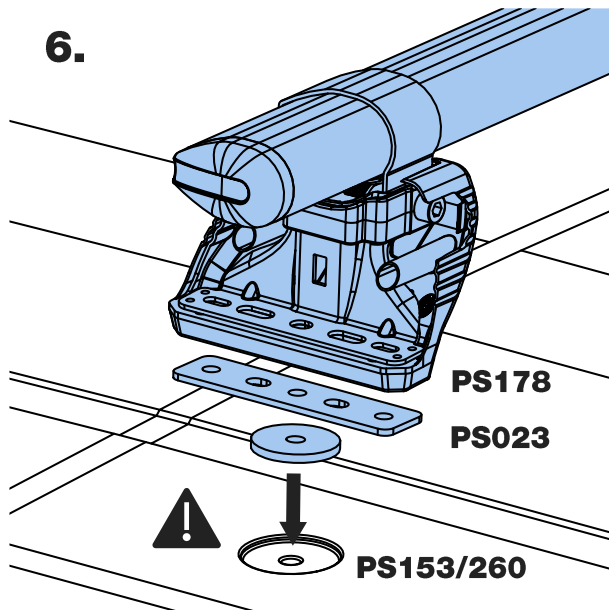


12.

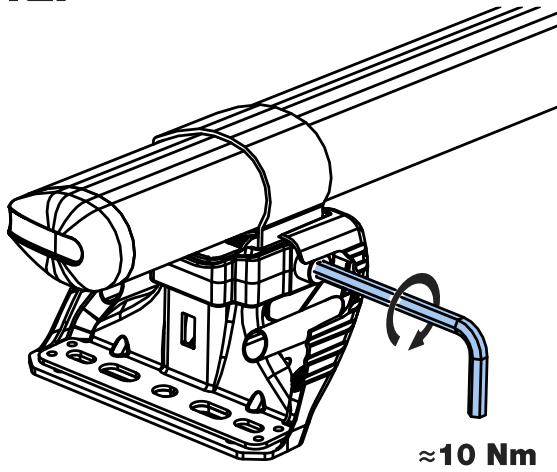

13.

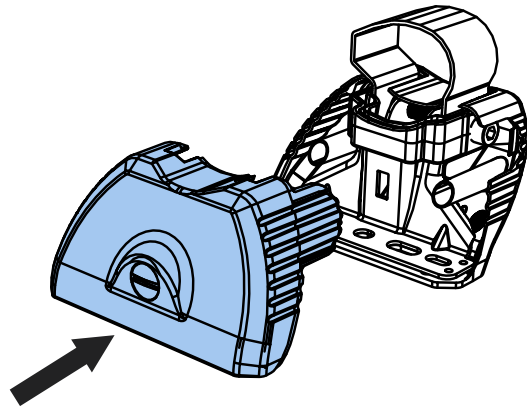

14.

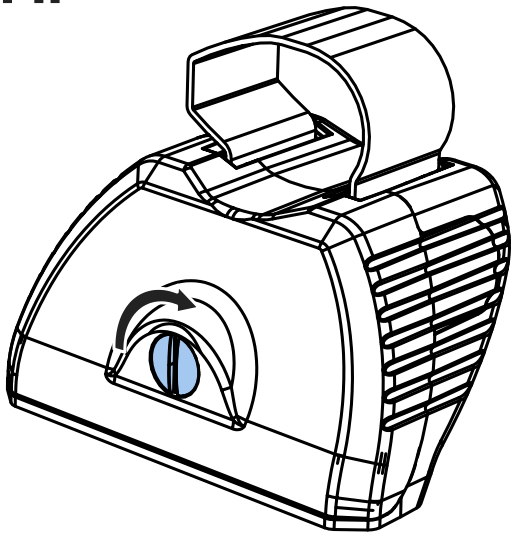

15.

