




# QA4PR/FL KammBar

## Instructions

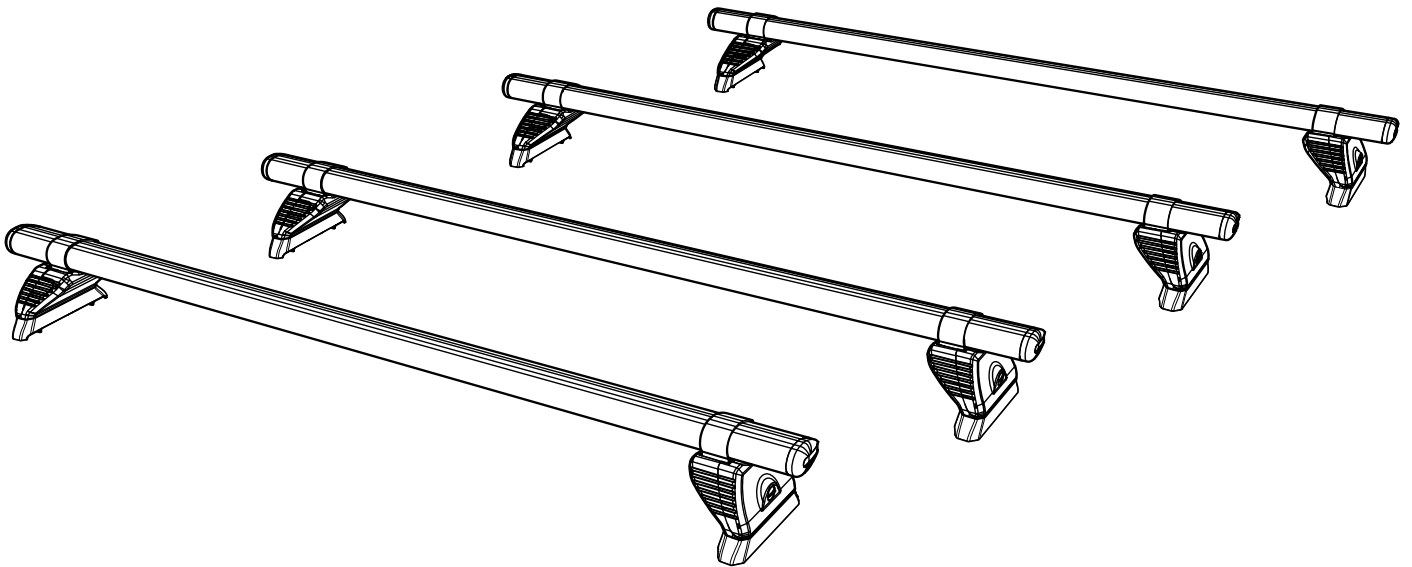


**CITY CRASH** (✓)


According to ISO/ PAS 11154:2006

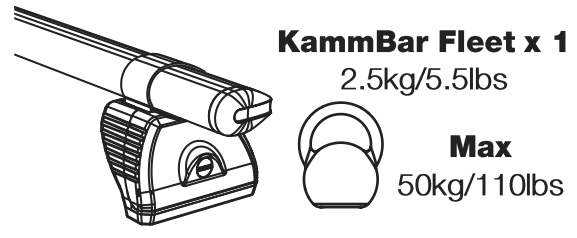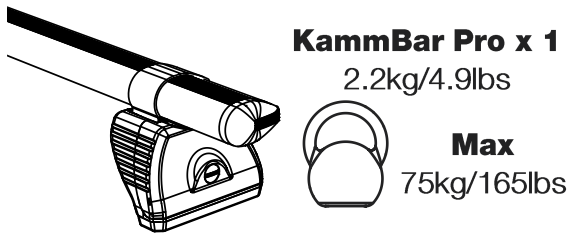


### KammBar Pro

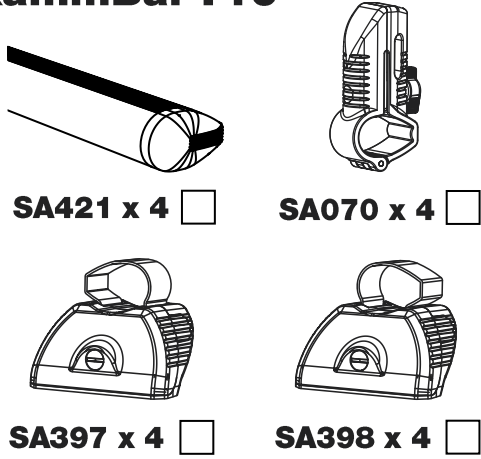


### KammBar Fleet

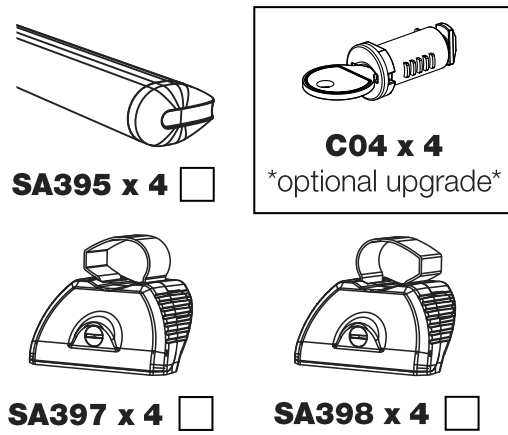


### Fitting Kit

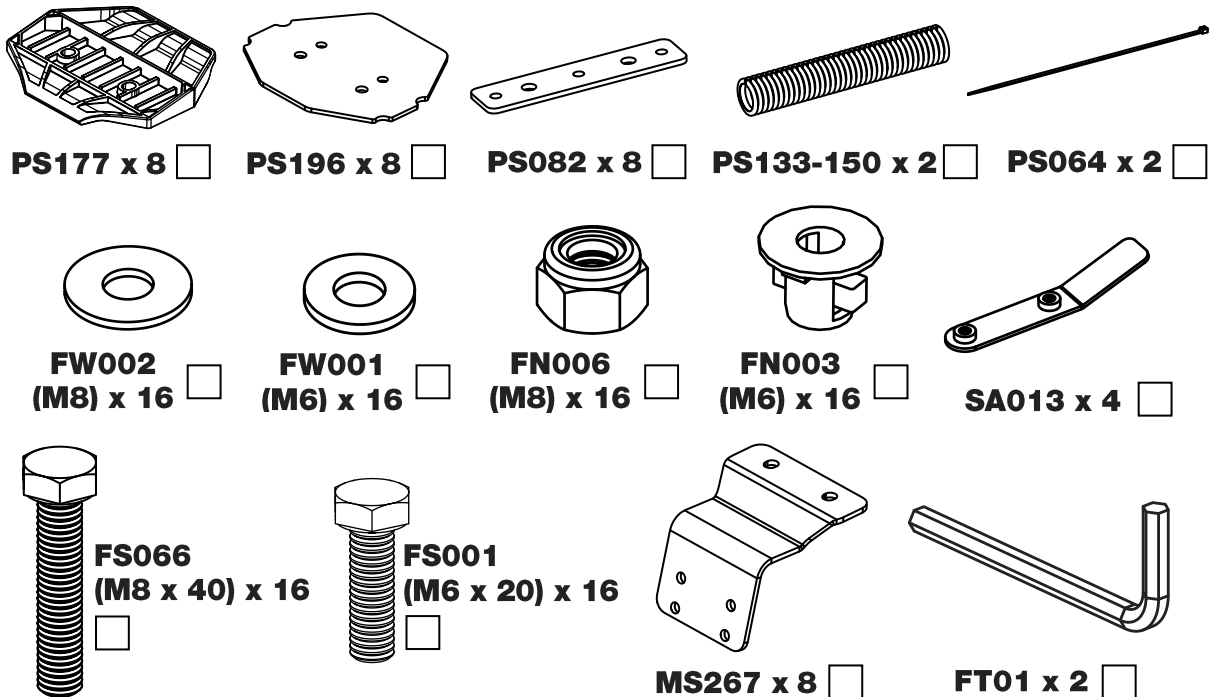

1.

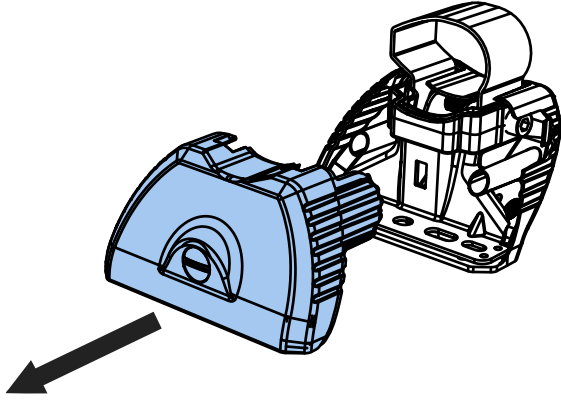

2.

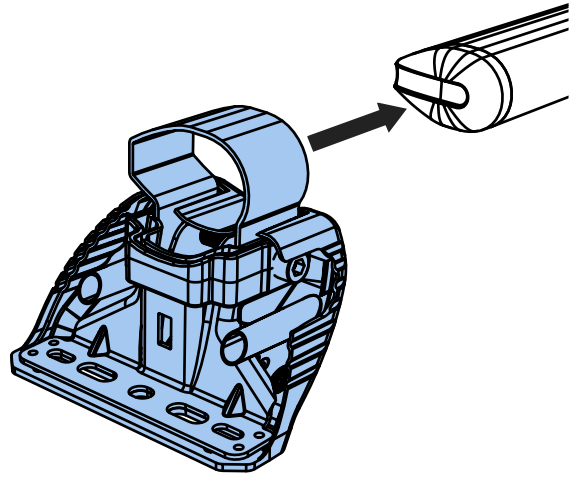

3.



SA397

PS177



SA397

PS177




SA397

PS177




SA397

PS177

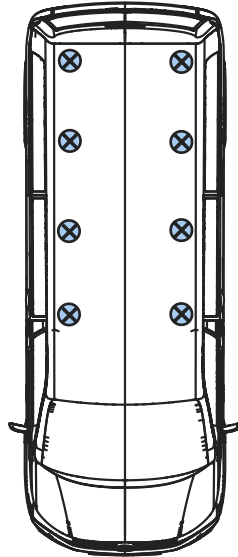


SA398




PS177

SA398




PS177

SA398




PS177

SA398










PS177







4.






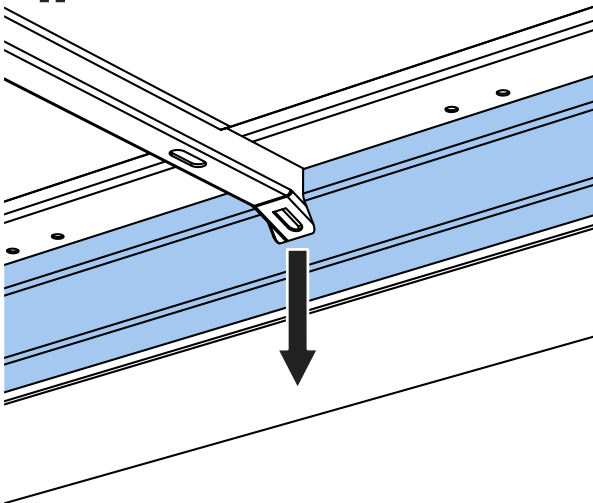


5.

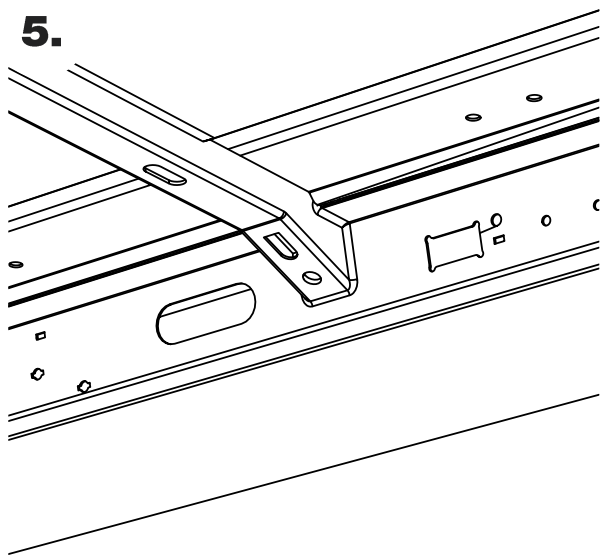


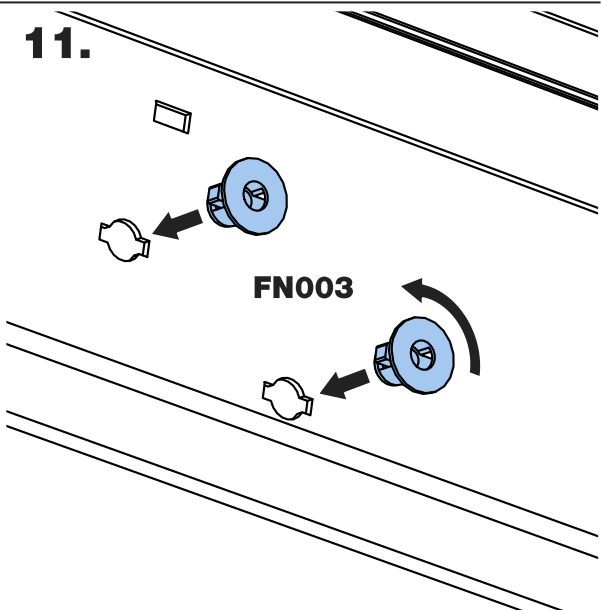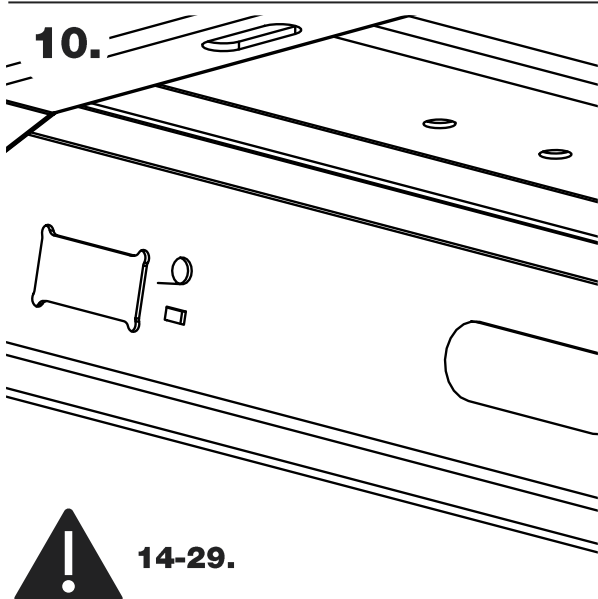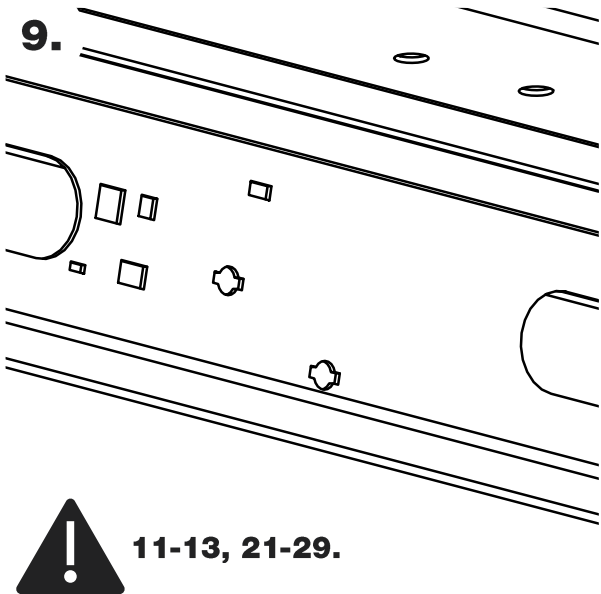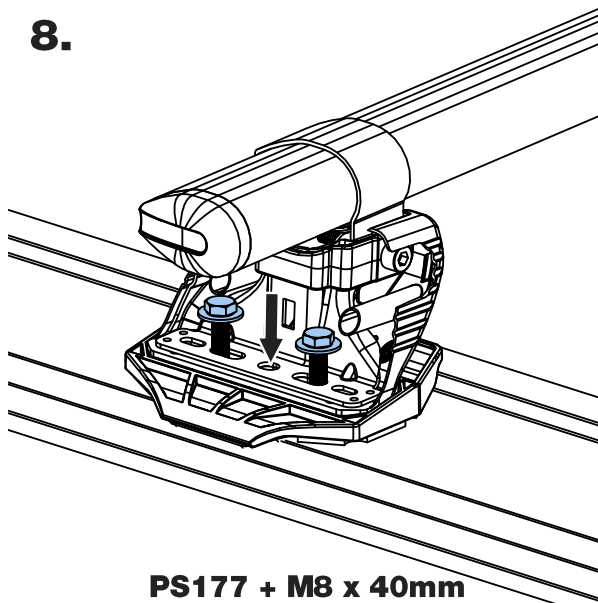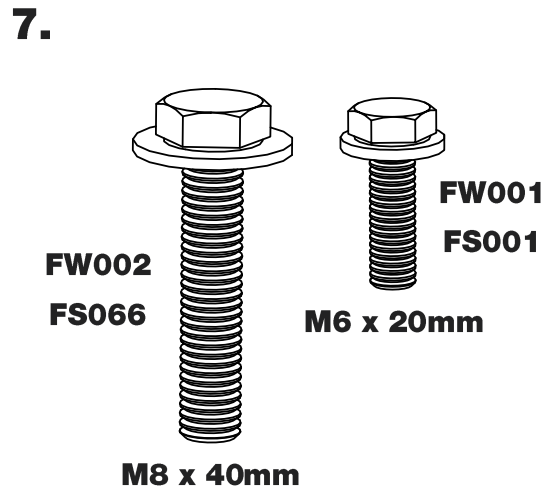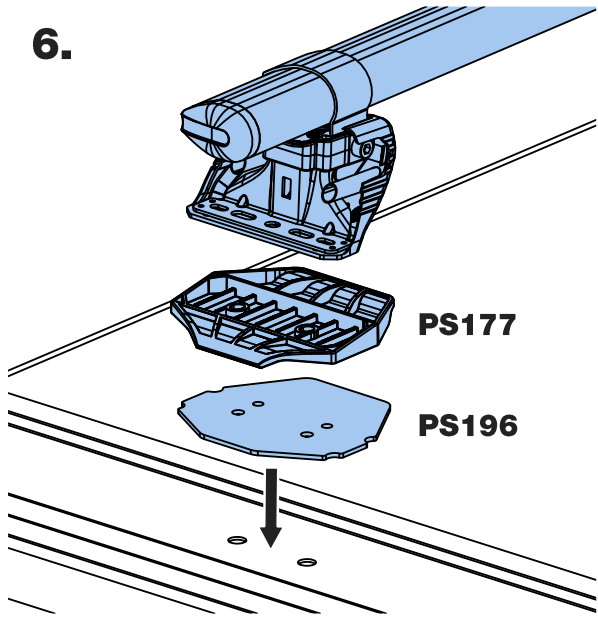

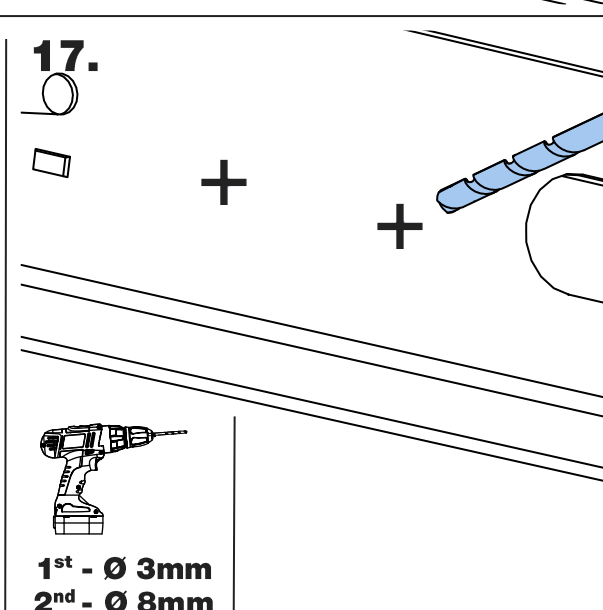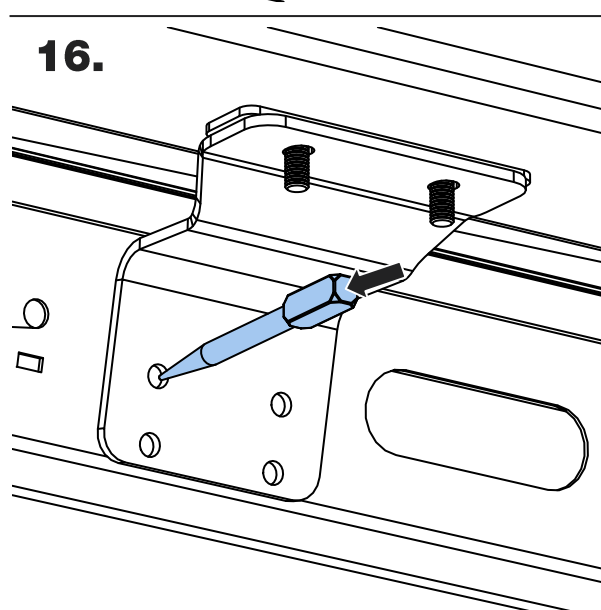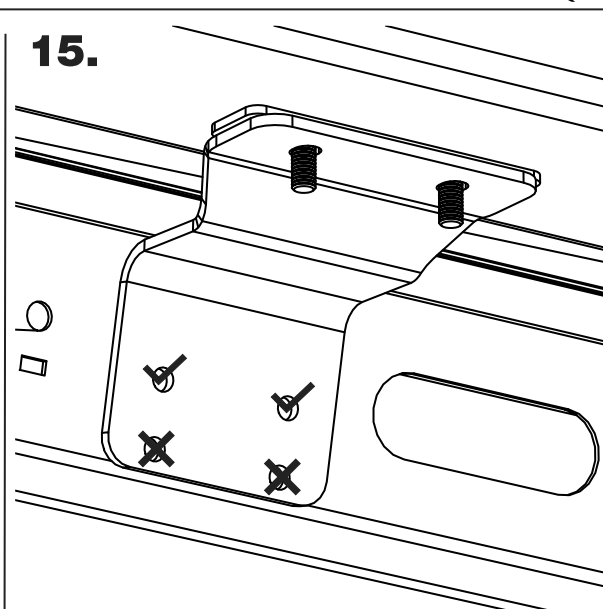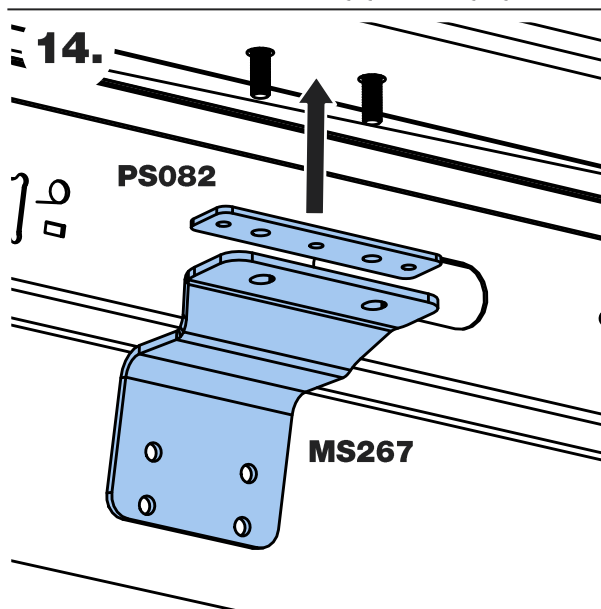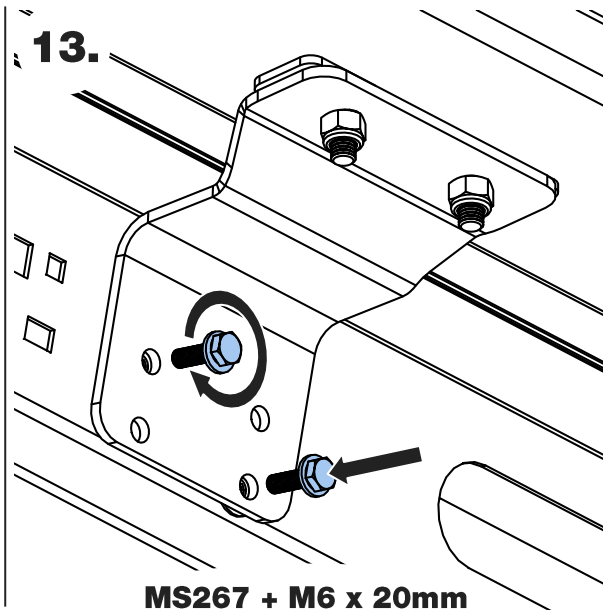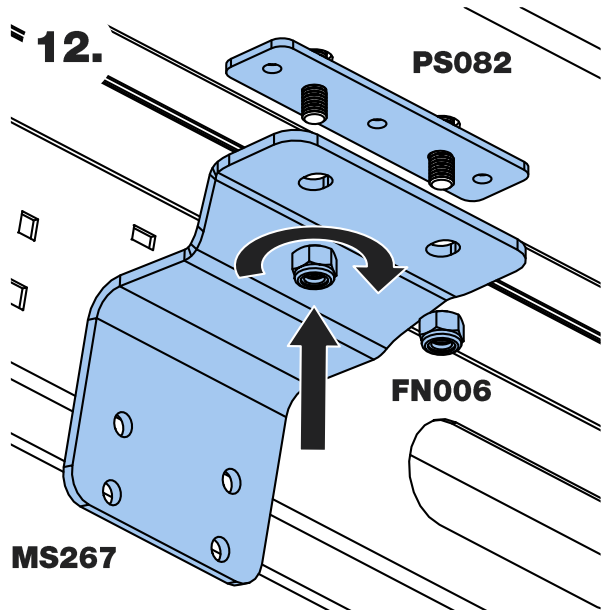


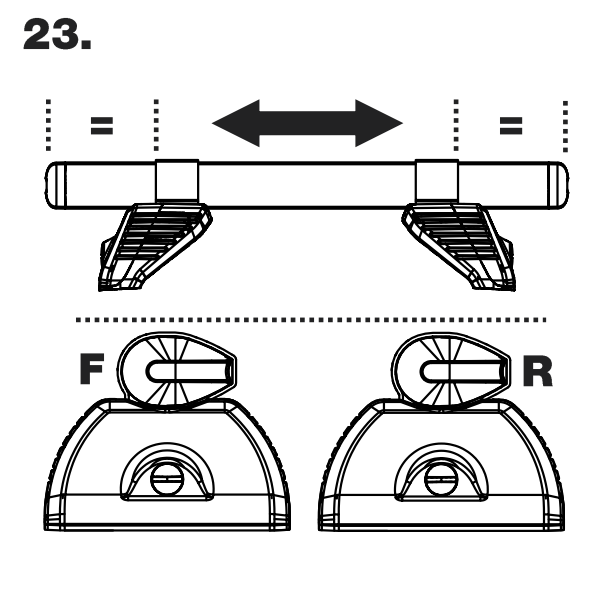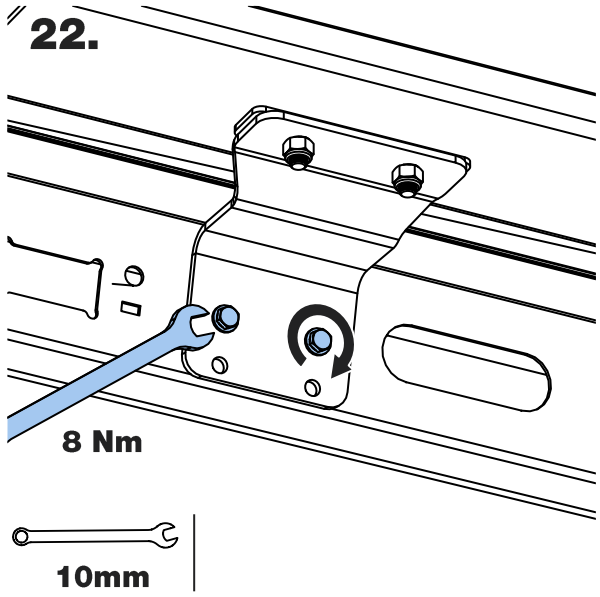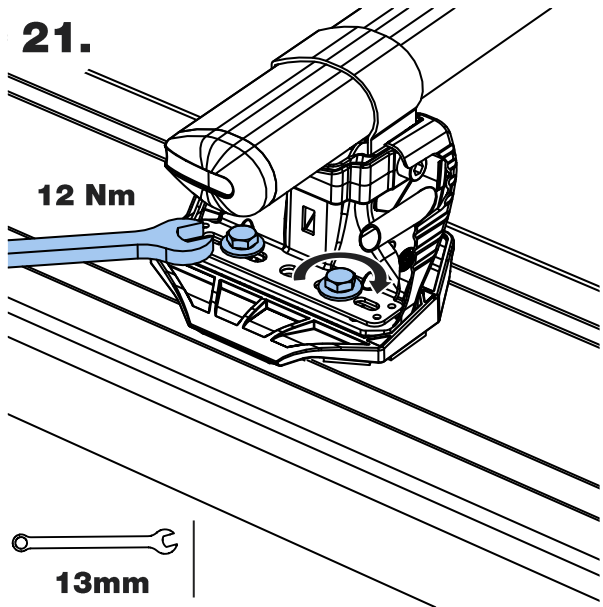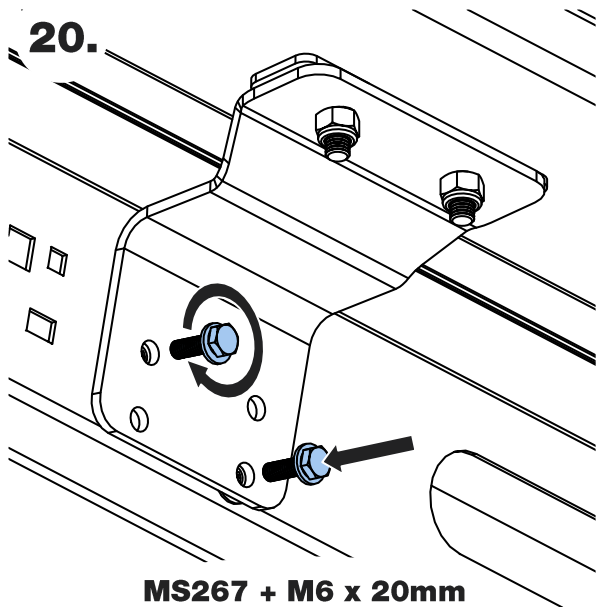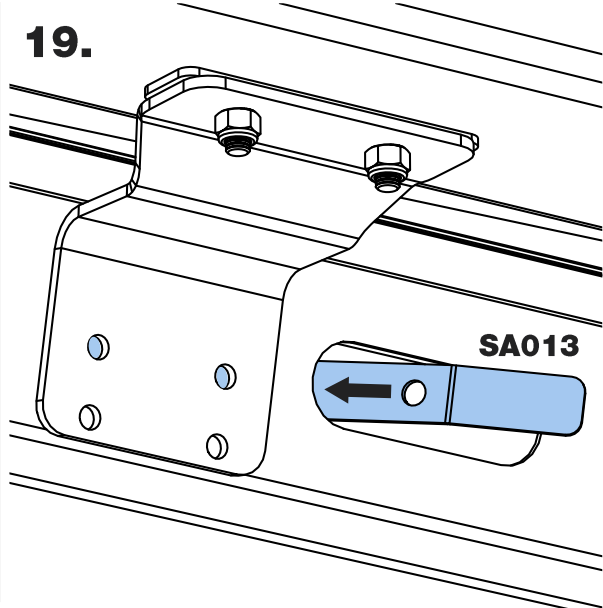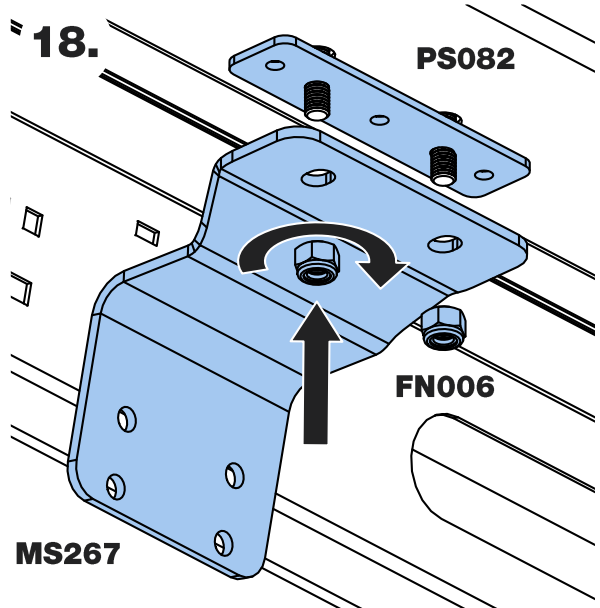


24.

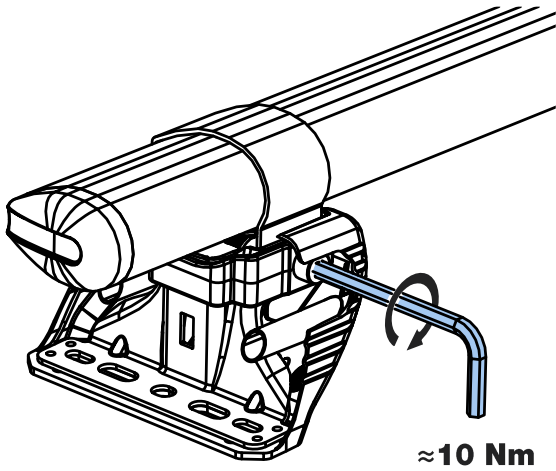


25.

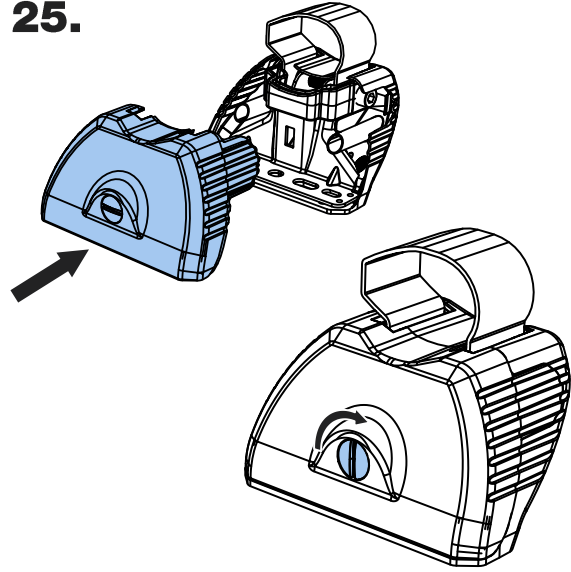


26.

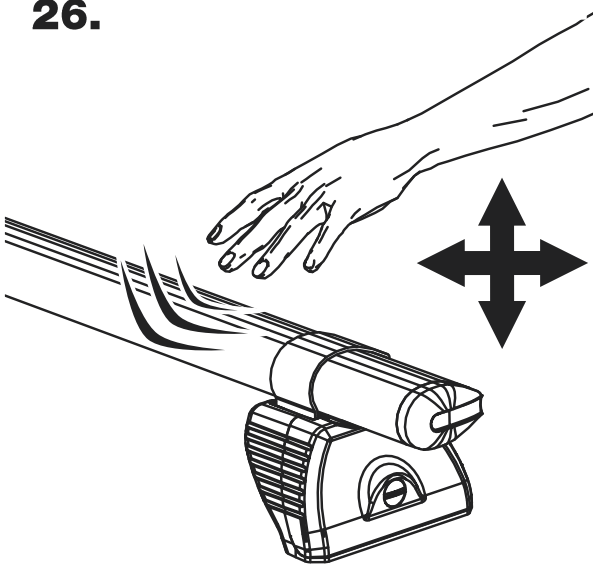

27.

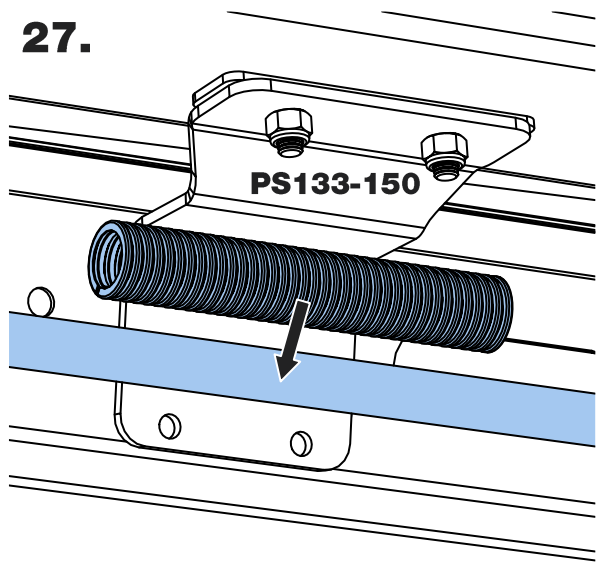

28.

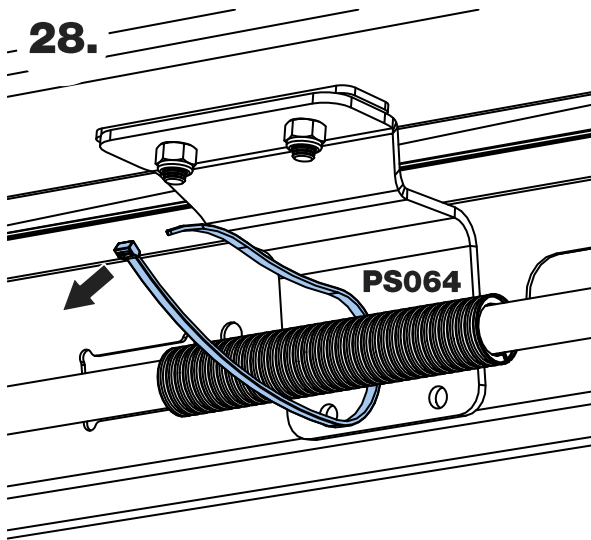

29.

