


JC3PR/FL KammBar Instructions


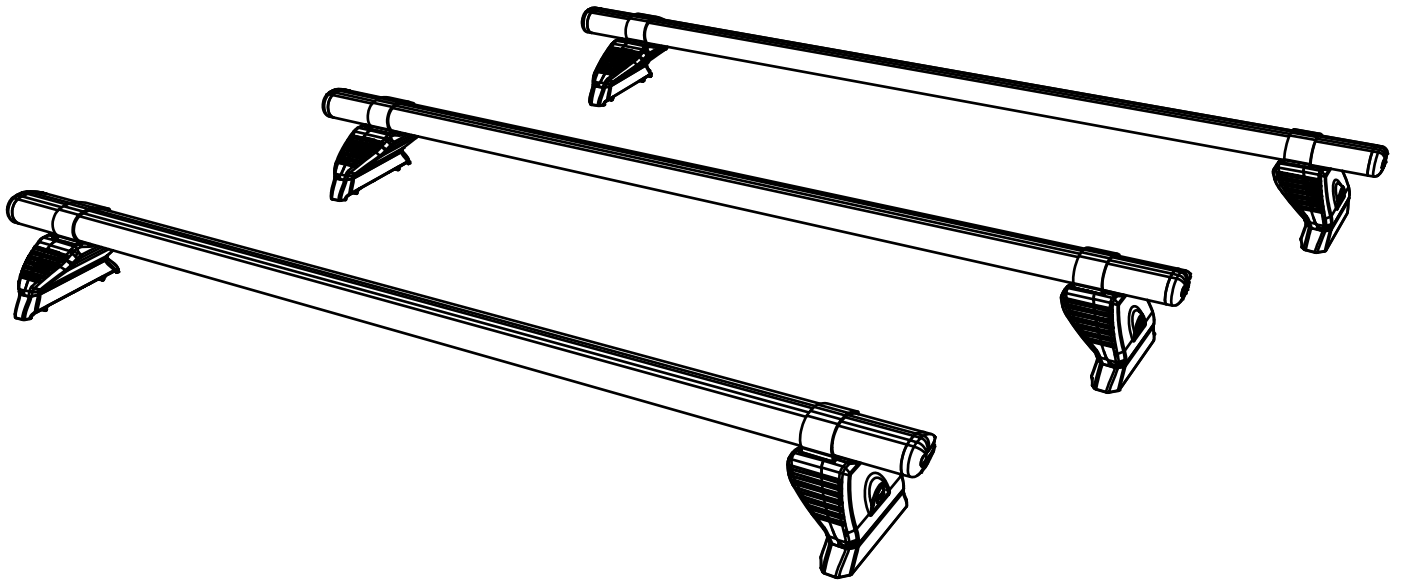


CITY CRASH (✓)



According to ISO/ PAS 11154:2006




KammBar Pro

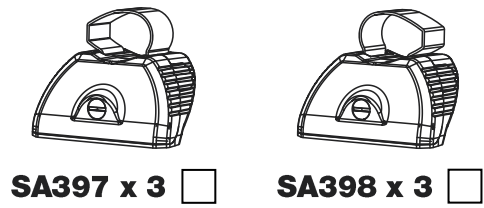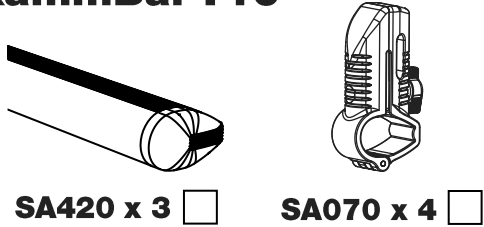

KammBar Fleet

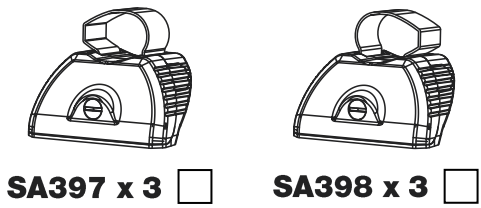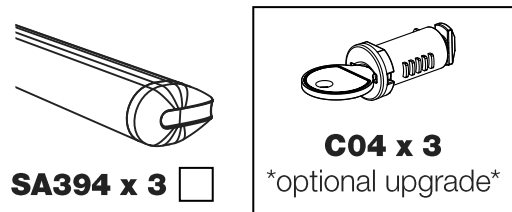

Fitting Kit

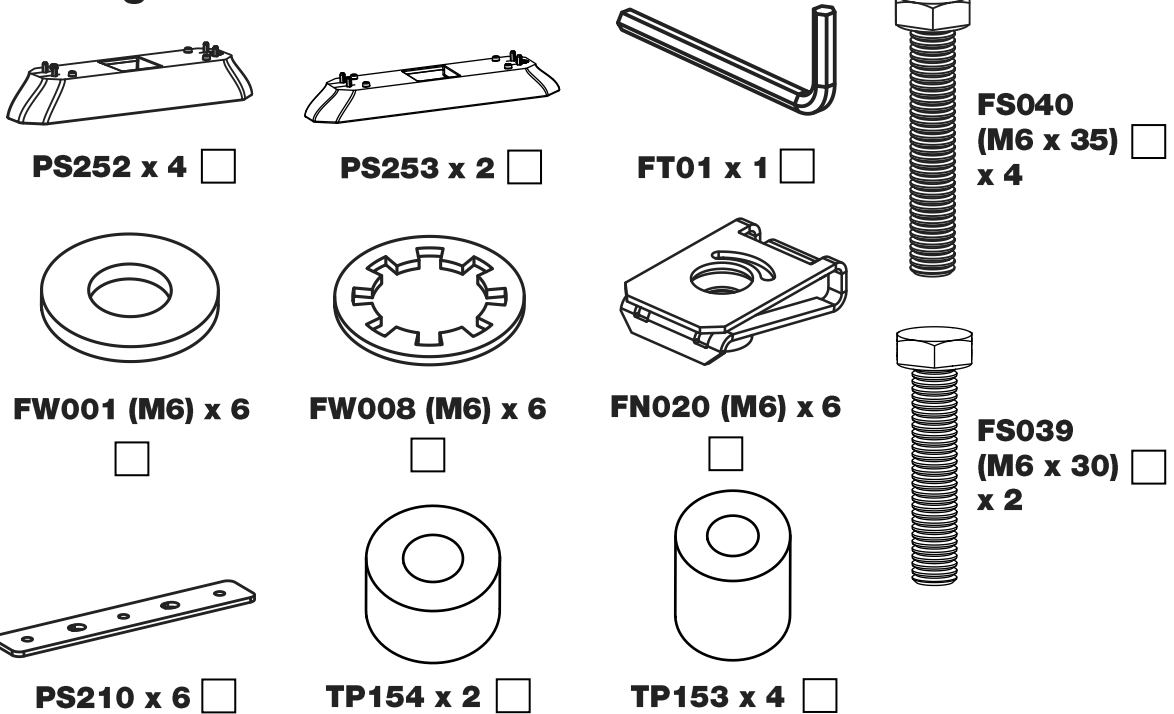

1.



2.



3.




SA397
PS252



SA397
PS253



SA397
PS252

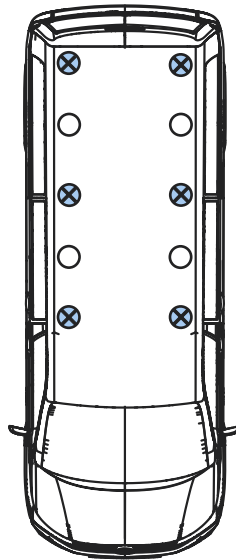

SA398
PS252




SA398
PS253




SA398
PS252









4.

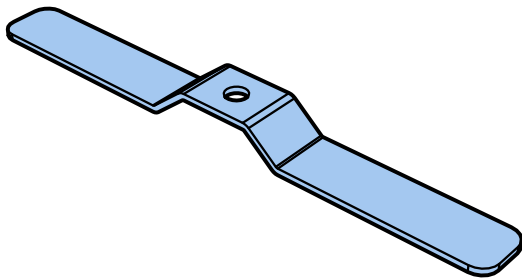


5.

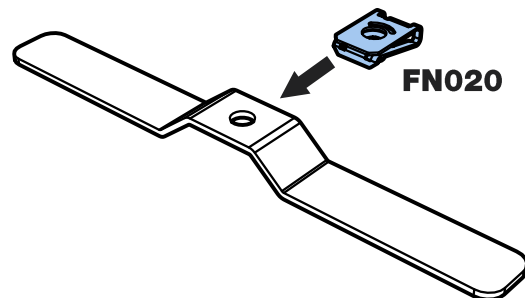


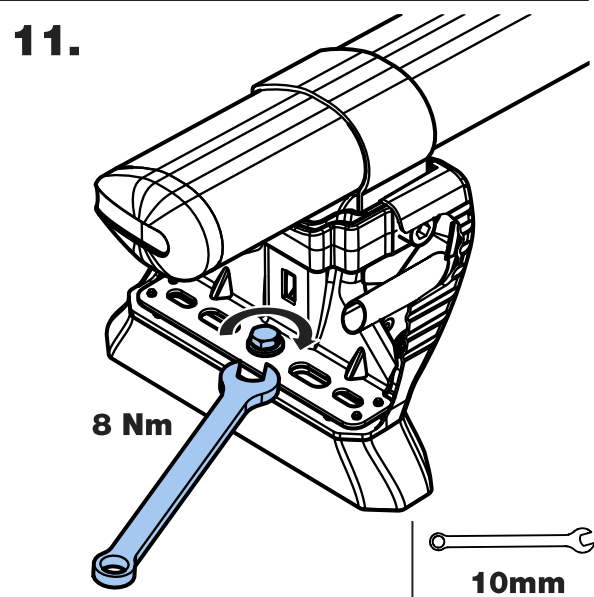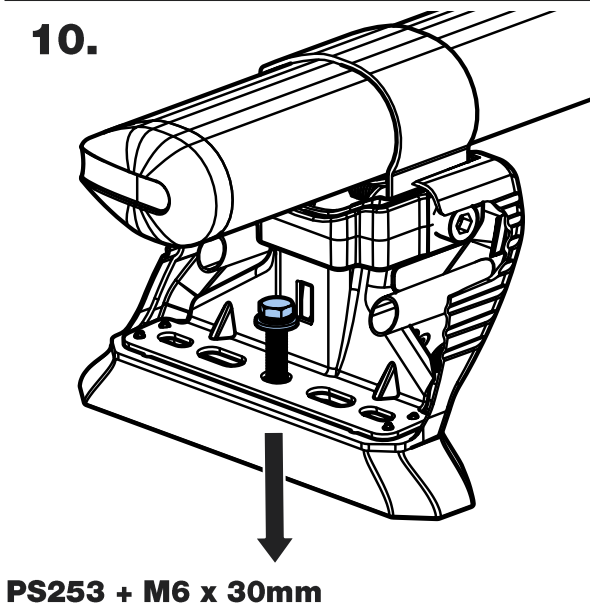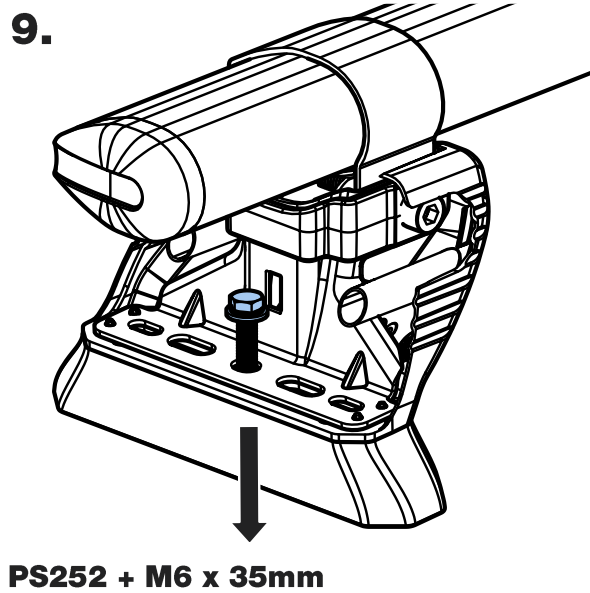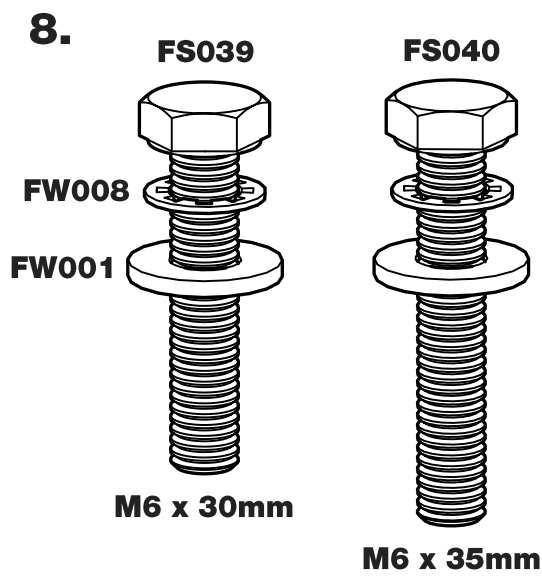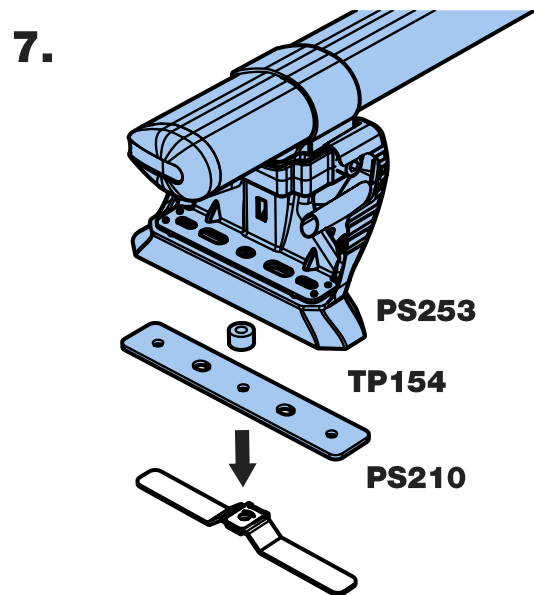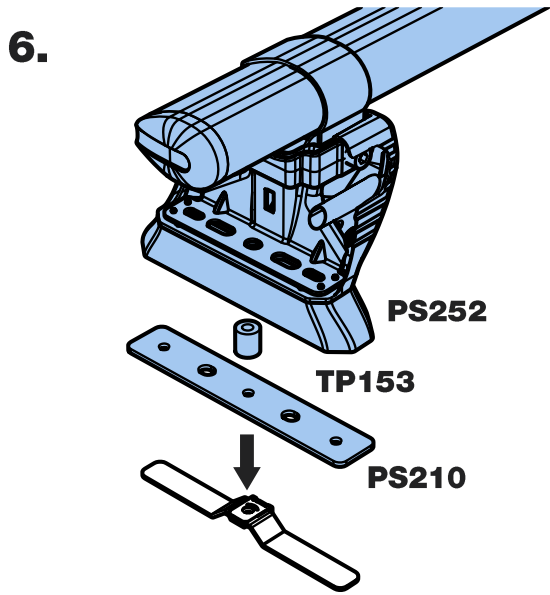


12.

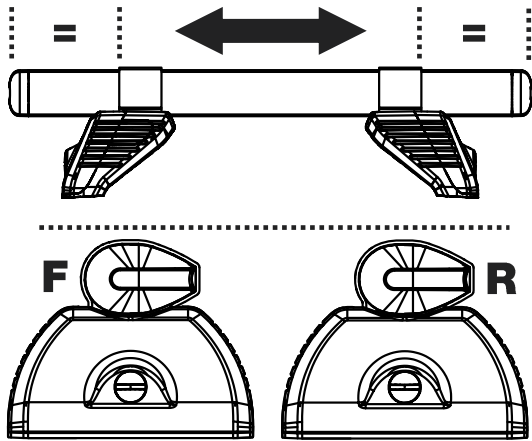

13.

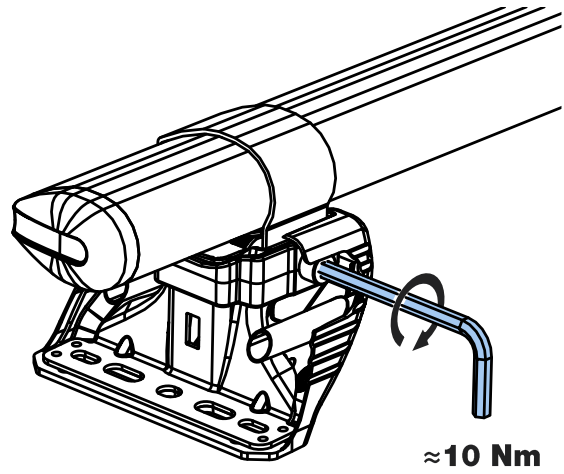

14.

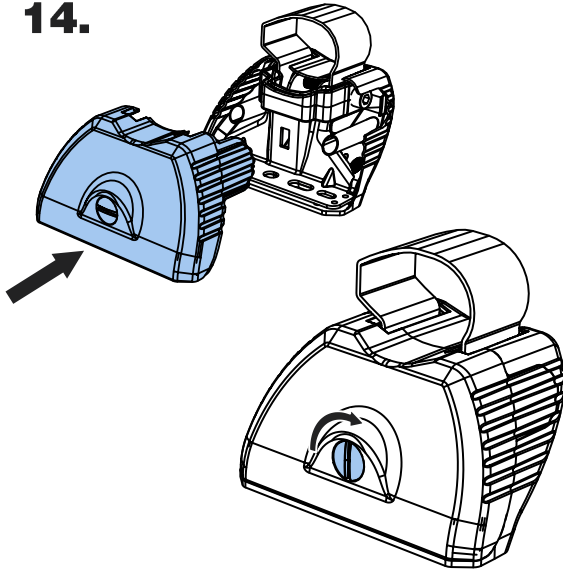

15.

