


KD3PR/FL




KammBar

Instructions

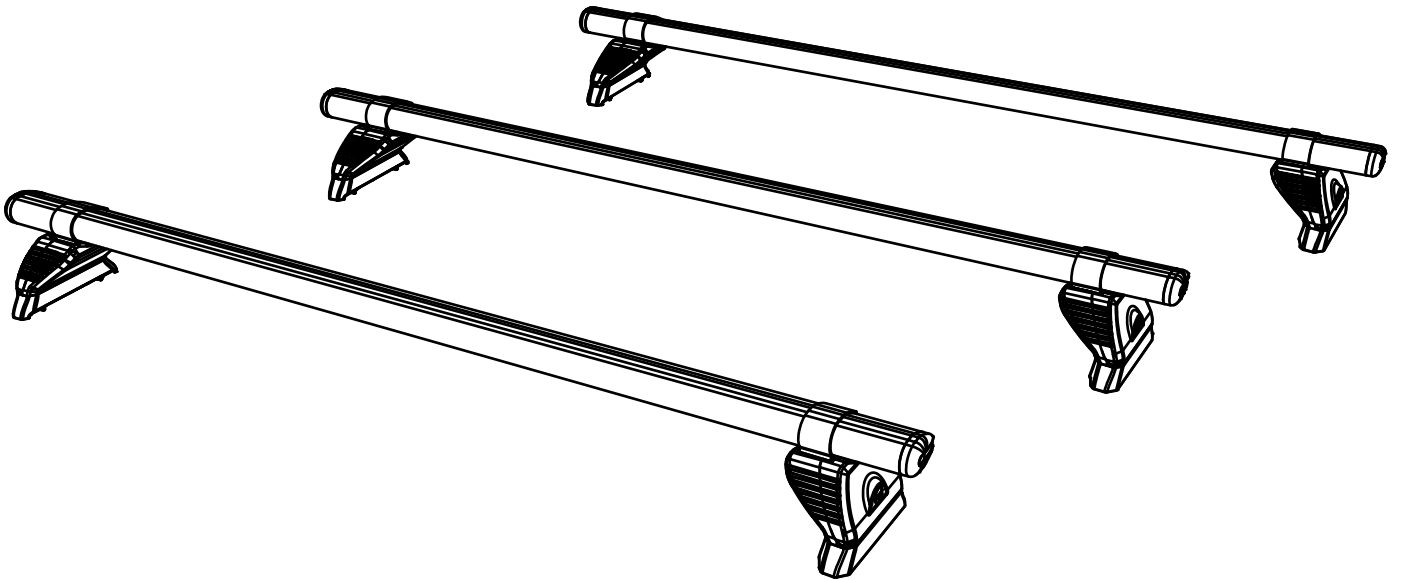


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

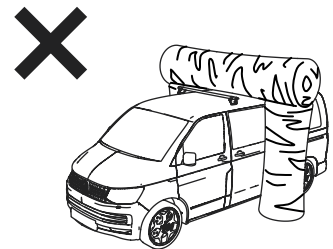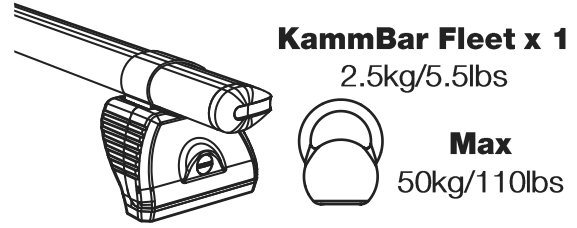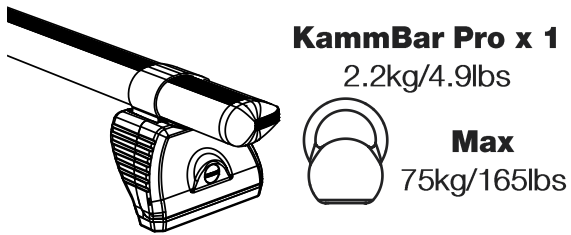


KammBar Pro

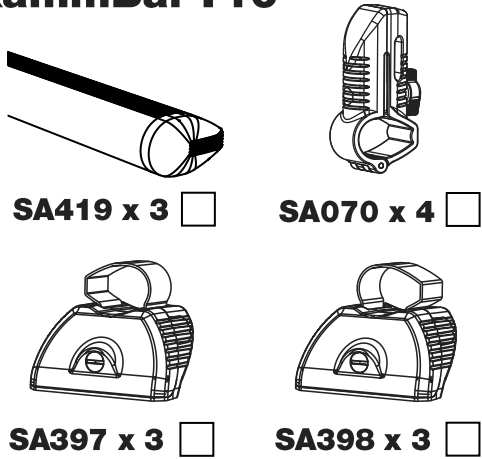

KammBar Fleet

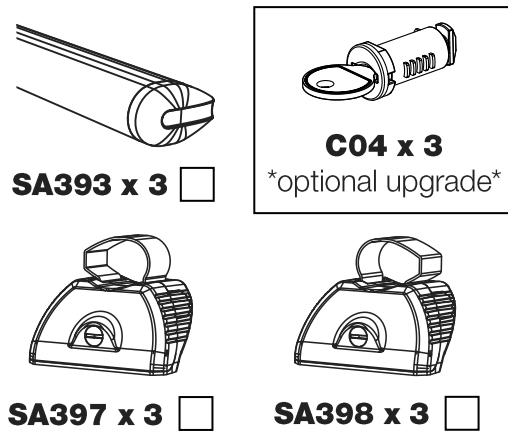

Fitting Kit

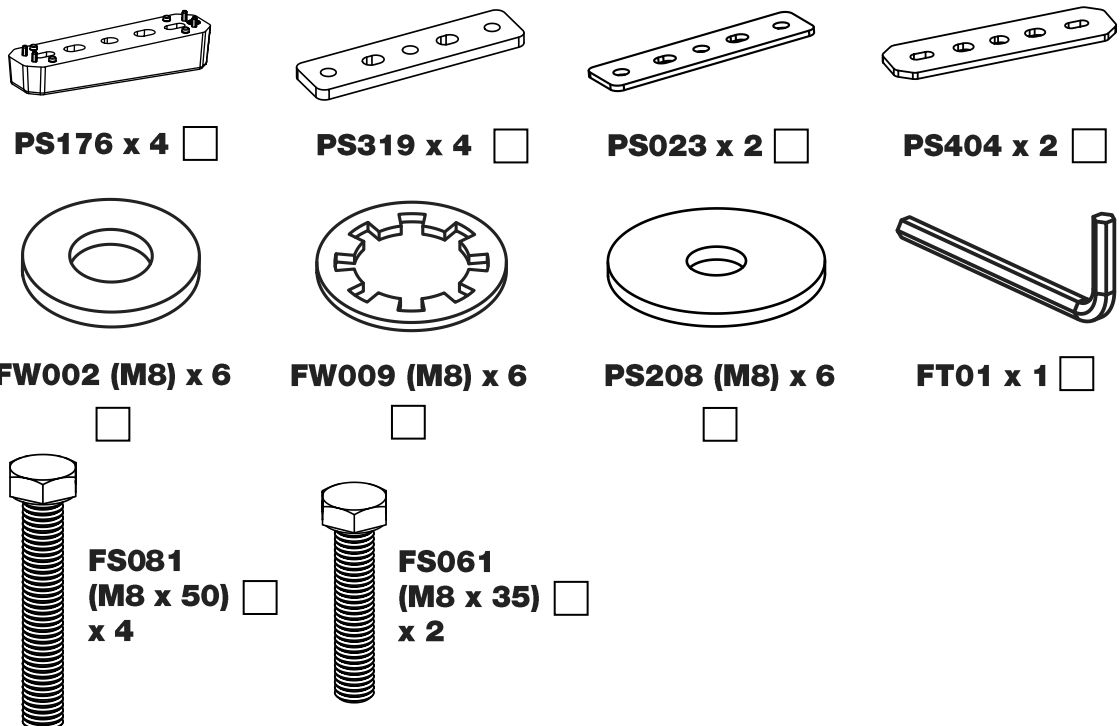


1.




2.




3.




SA397



PS176




SA397




SA397


PS176

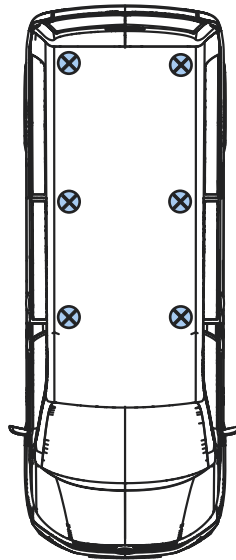


SA398




PS176



SA398




SA398




PS176




4.

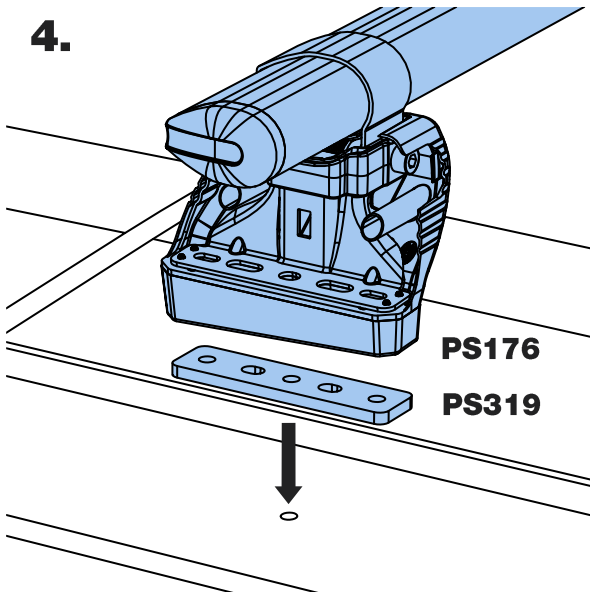


5.

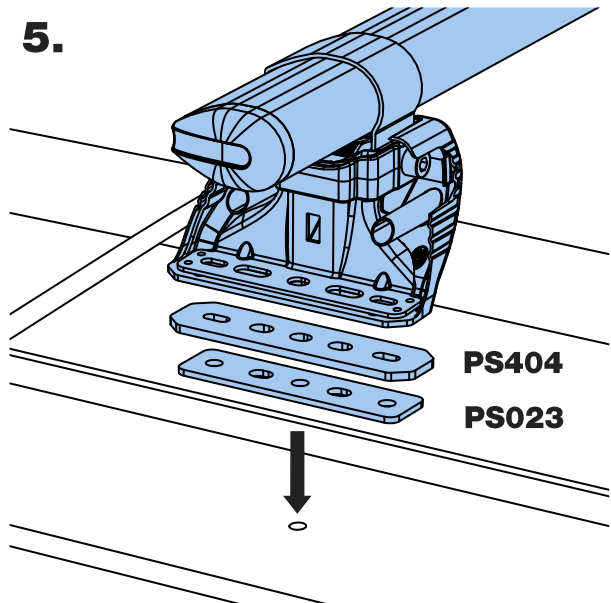

6.

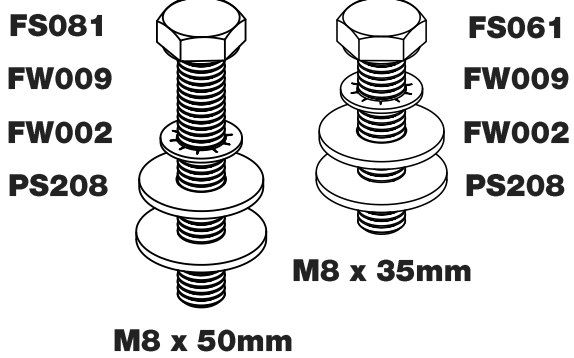


7.

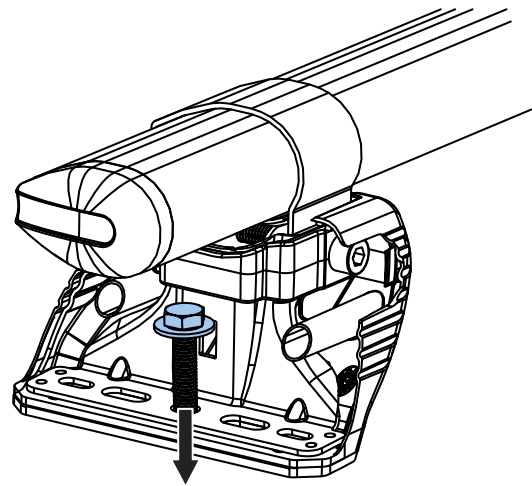


PS404 + M8 x 35mm

8.

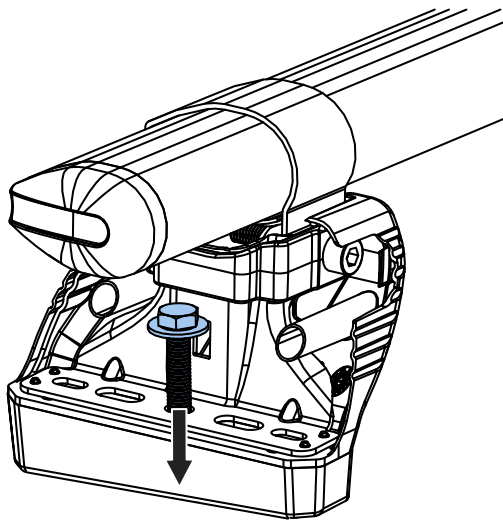


PS176 + M8 x 50mm


9.

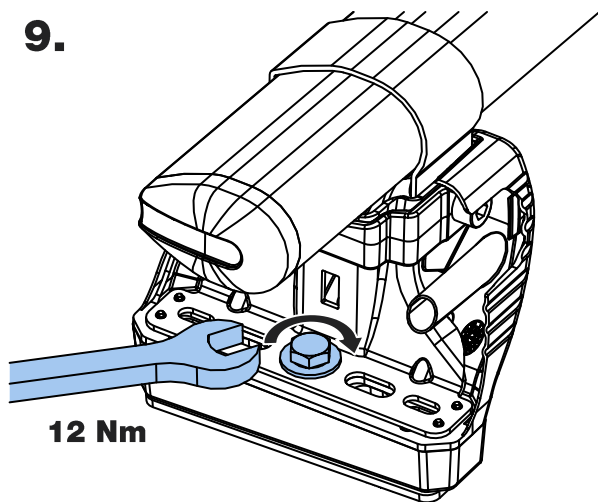


10.

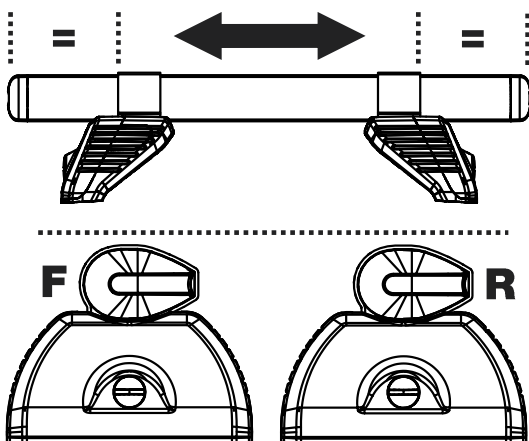

11.

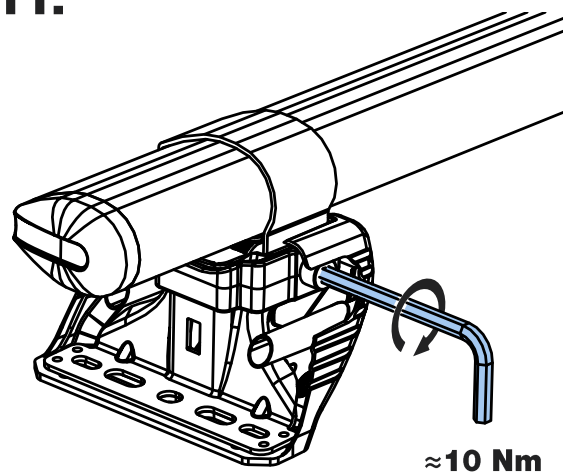

12.

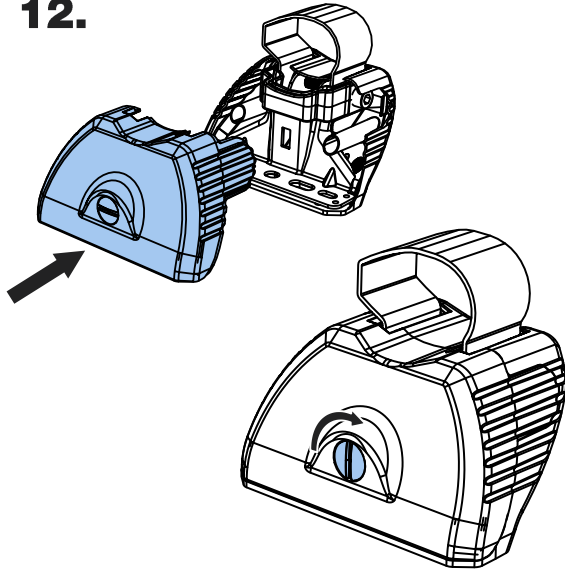

13.

