


# MC2PR/FLR






# KammBar

## Instructions


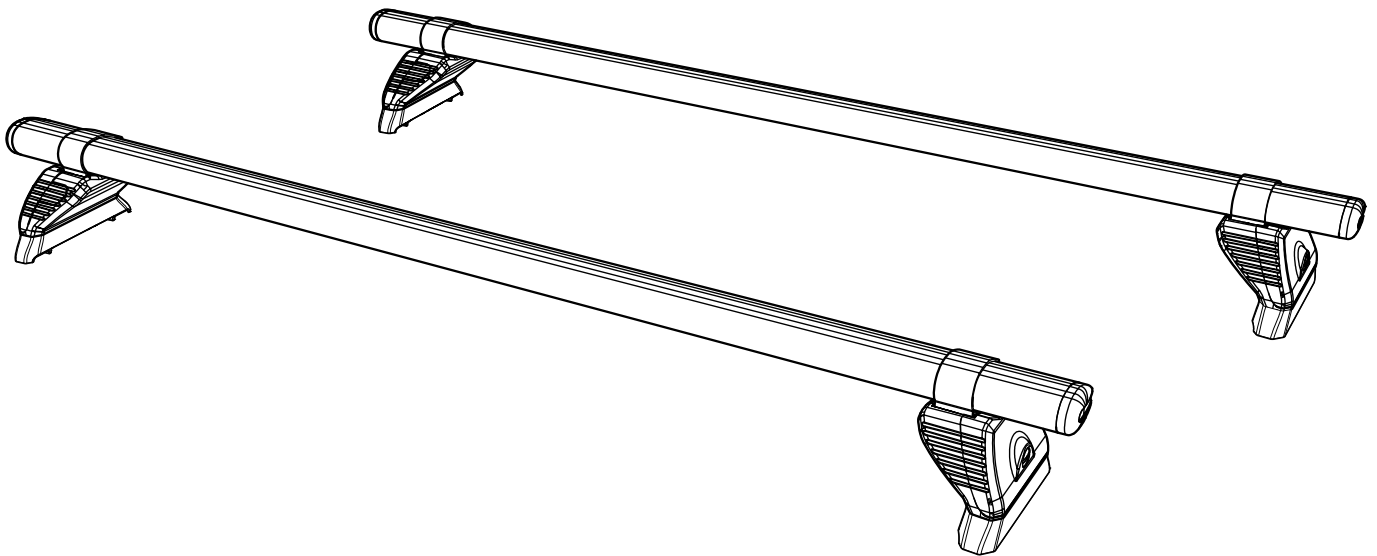


**CITY CRASH** (✓)



According to ISO/ PAS 11154:2006

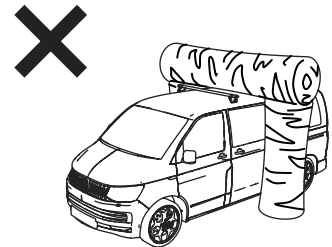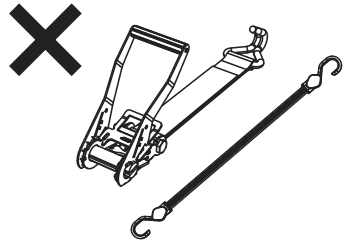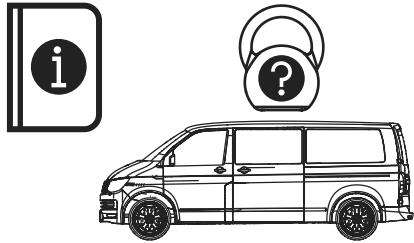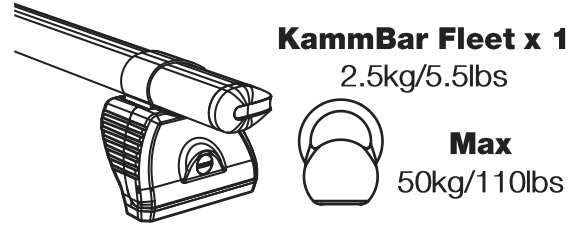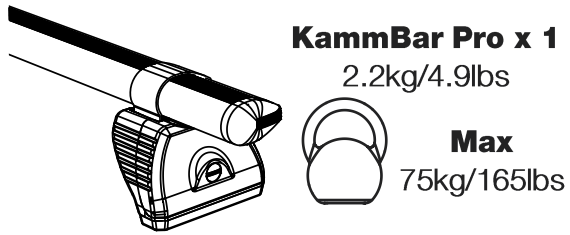




### KammBar Pro

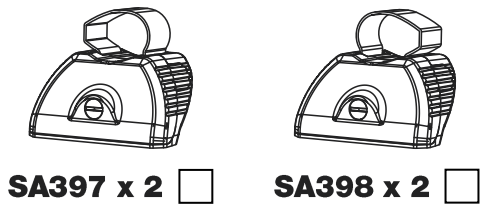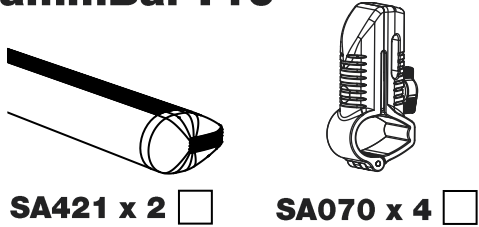


### KammBar Fleet

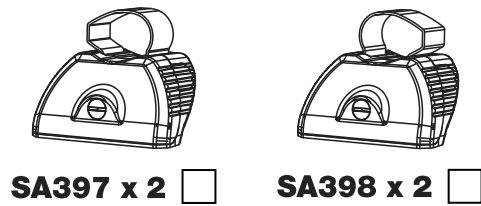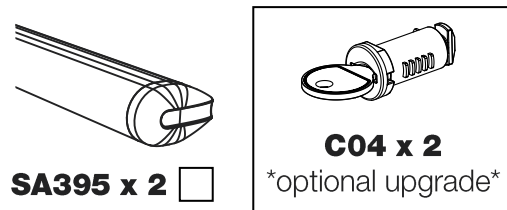


### Fitting Kit

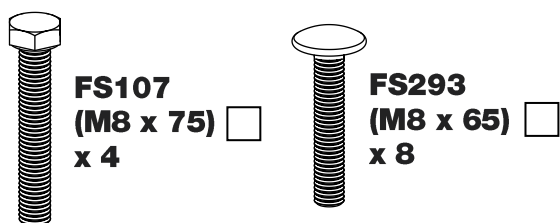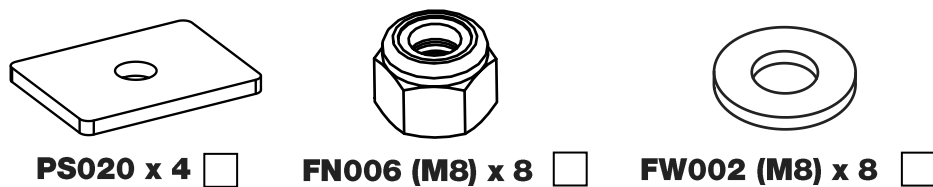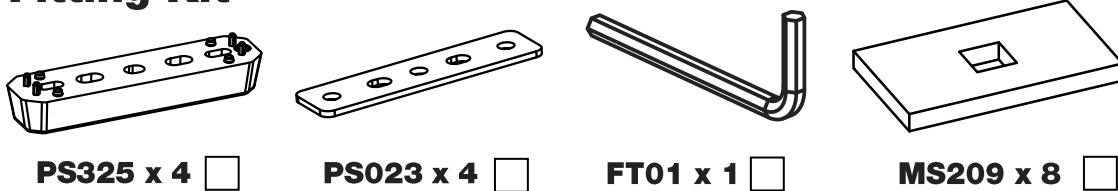


1.

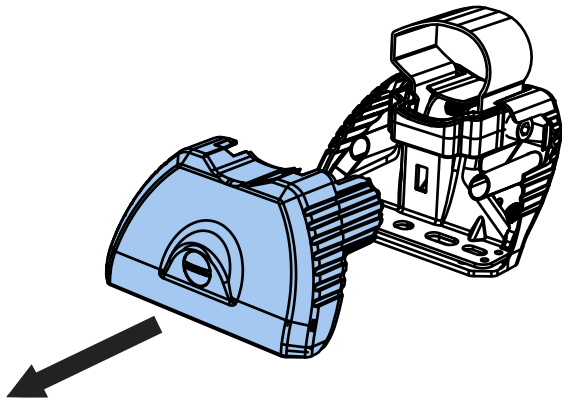

2.

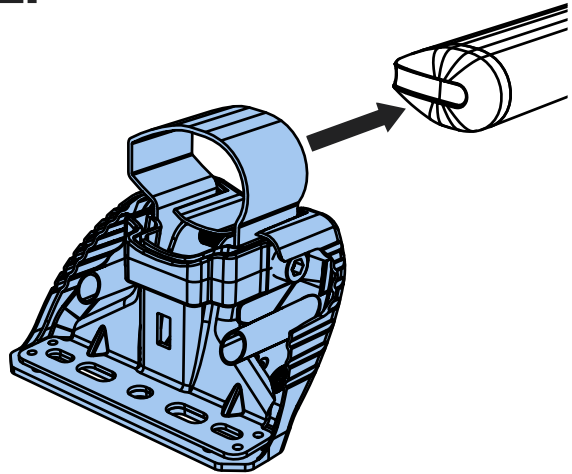

3.


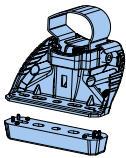


SA397

PS325

SA398

PS325

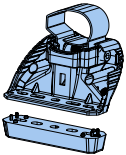
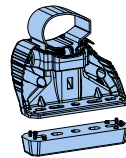


SA397


PS325

SA398

PS325

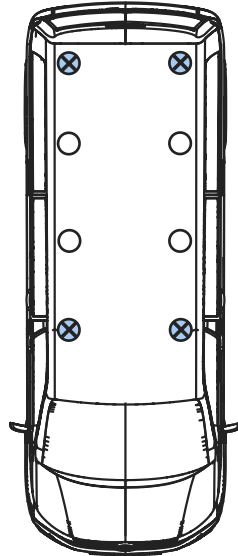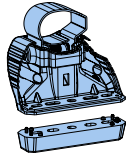


4.

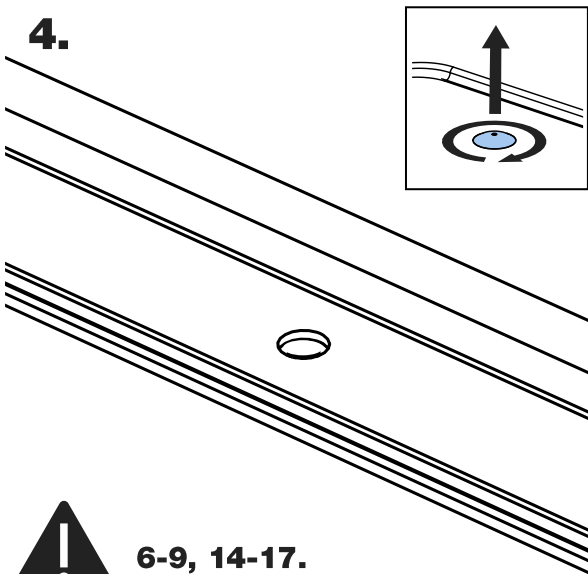

6-9, 14-17.

5.

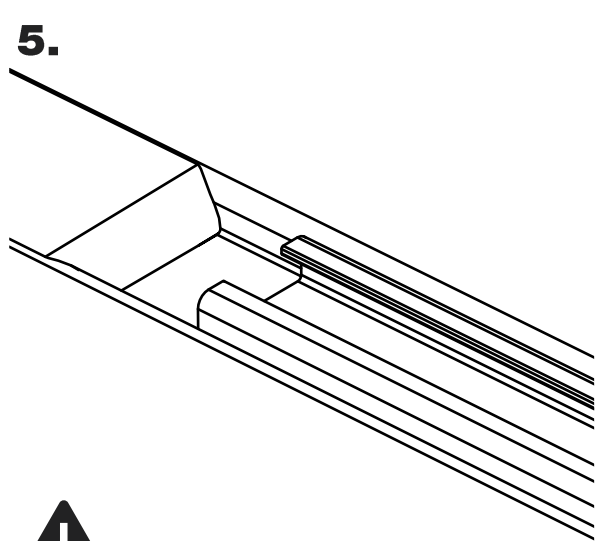

10-17.

