


Feet Kit

Fitting instructions	
Type:	9078885
Make:	Mercedes
	Vito L2 2013->

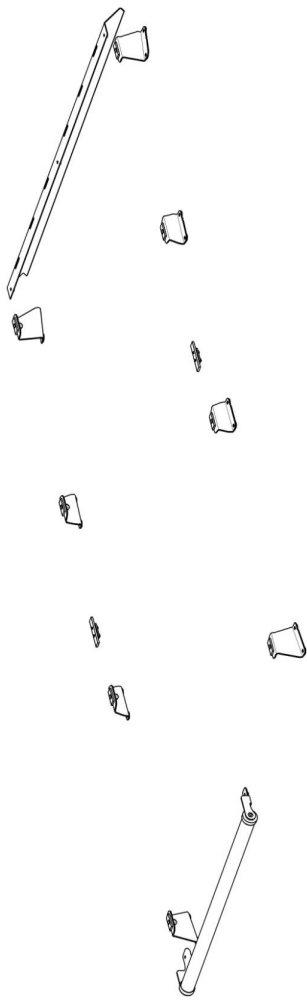

- NL Montagehandleiding
- GB Fitting instruction
- D Montageanleitung
- F Instruction de montage
- S Monteringsanvisningar
- DK Montagevejledning
- E Istruccines de montaje
- I Istruzioni per il montaggio
- PL Instrukcja montażu
- SF Aseennusohjeet
- CZ Pokyny k montáži
- H Szerelési útmutató
- RUS РУКОВОДСТВО ДЛЯ МОНТАЖА



Your perfect fit
brink.eu

 	<p>160 Kg</p>	<p>160Kg</p>	
	<p>2080 mm</p>	<p>20Nm 10Nm</p>	<p>2000Knm</p>

