

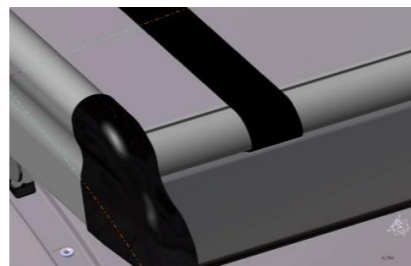



# Feet Kit

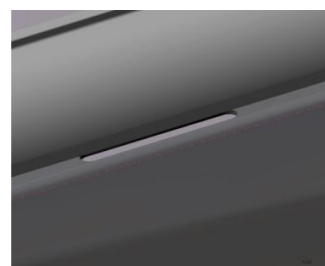

2000Km

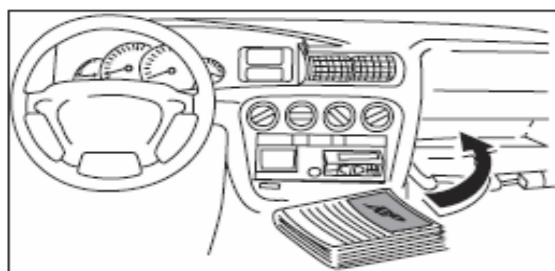

Fitting instructions  
 Type: 9078587  
 Make: Peugeot/Citrôen/Toyota  
 Expert L1 2016 ->  
 Jumpy L1/2016->  
 Proace L0 2016 ->

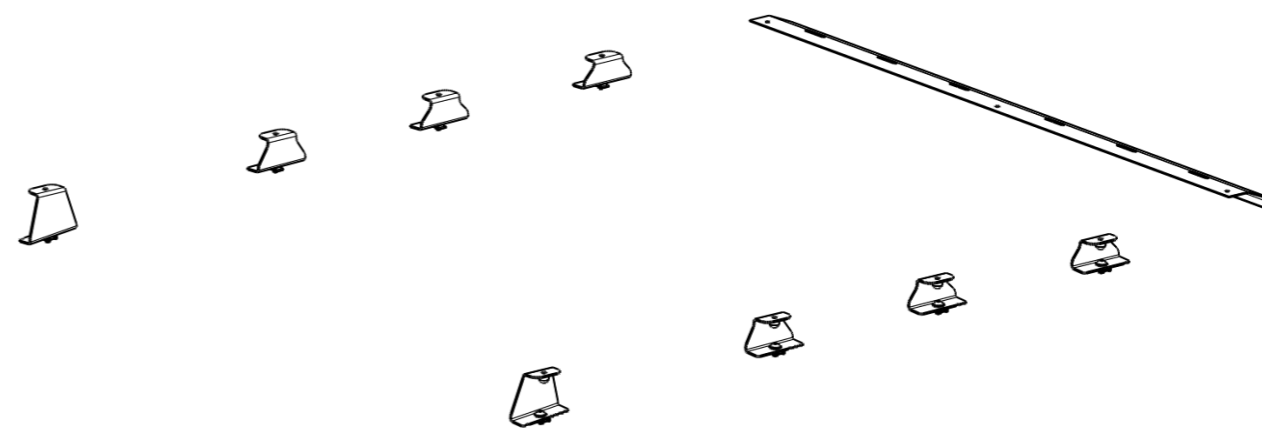

- NL Montagehandleiding
- GB Fitting instruction
- D Montageanleitung
- F Instruction de montage
- S Monteringsanvisningar
- DK Montagevejledning
- E Instrucciones de montaje
- I Istruzioni per il montaggio
- PL Instrukcja montażu
- SF Asennusohjeet
- CZ Pokyny k montáži
- H Szerelési útmutató
- RUS РУКОВОДСТВО ДЛЯ МОНТАЖА



Your perfect fit  
brink.eu

