


JC3KR

KammRack

Instructions



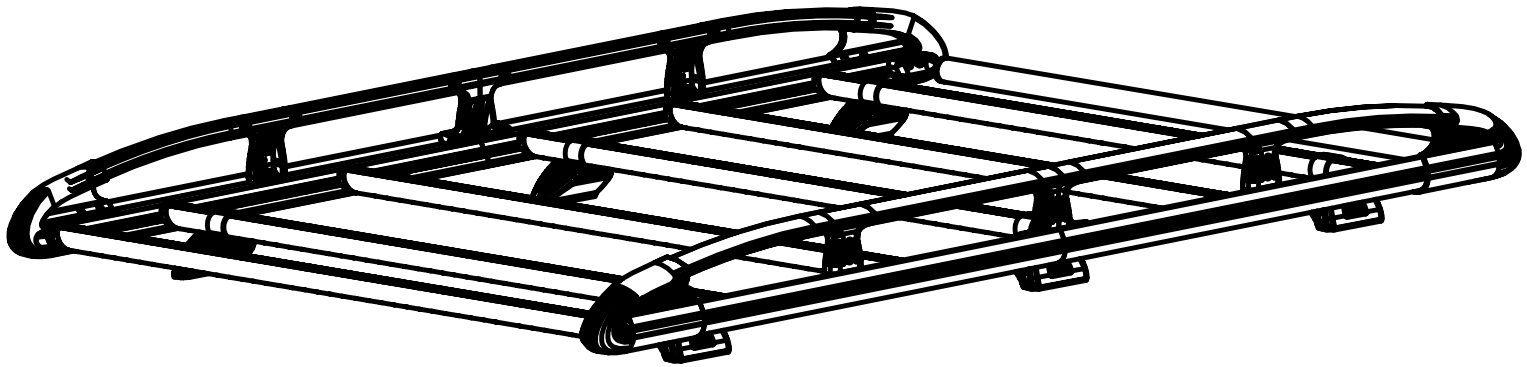


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

JC3KR:


CITROEN Jumper/Dispatch, 2016 –
PEUGEOT Expert, 2016 –
TOYOTA Proace, 2016 –
VAUXHALL Vivaro, 2019-

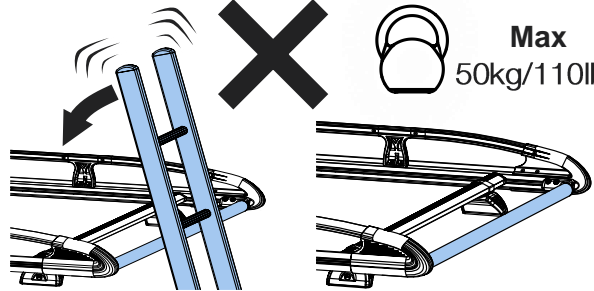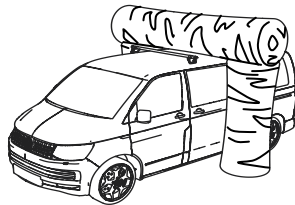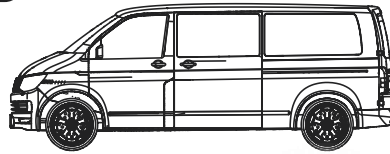


KammRack

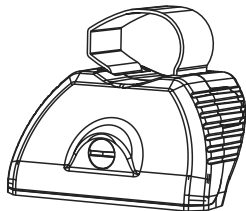


SA397U x 3

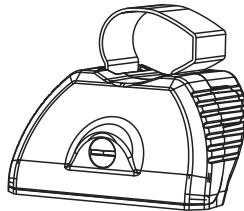


SA398U x 3

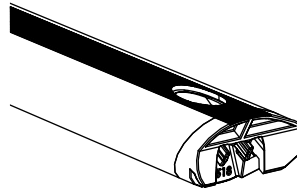

SA429/S
A467

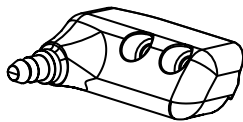


PS519 x 1

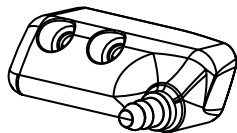


PS520 x 1

LHS x 2


RHS x 2

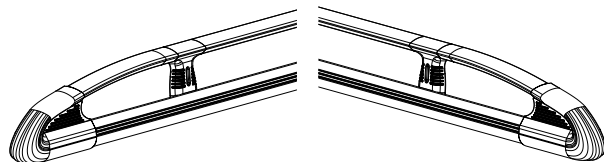

ASF x 1

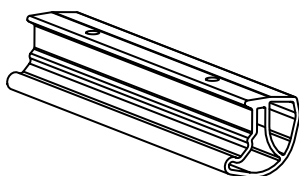


EXT15-02 x 2

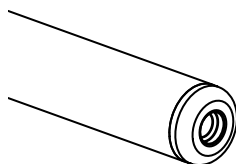


SA437 x 1


Fitting Kit




PS252 x 4




PS253 x 2

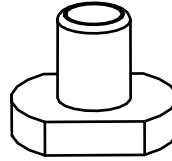


FN085 x 18

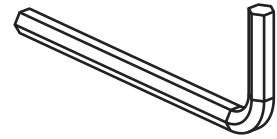

FT01 x 1

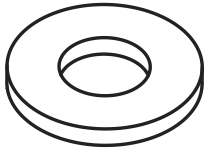


FW001 (M6) x 6

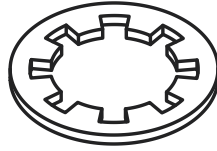


FW008 (M6) x 6




FN020 (M6) x 6

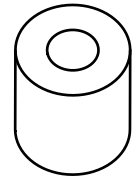


TP153 x 4




FS040
(M6 x 35) x 4




FS039
(M6 x 30) x 2




FS059
(M8 x 25) x 18

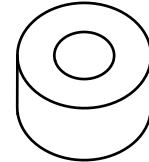

TP154 x 2




PS210 x 6


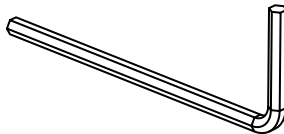


FT05 x 1


K662/B662- Jumpy/Dispatch/Proace/Expert 2016-, Opel Vivaro 2019- L2, H1, Vauxhall Vivaro 2019- L1, H1, Tailgate

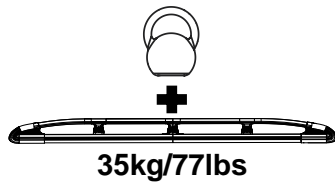



150kg Max

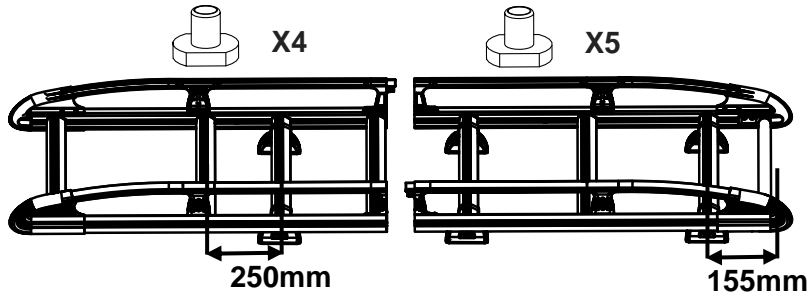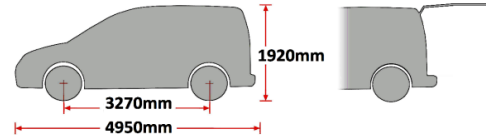


K664/B664- Jumpy/Dispatch/Proace/Expert 2016-, Opel Vivaro 2019- L3, H1, Vauxhall Vivaro 2019- L2, H1, Tailgate

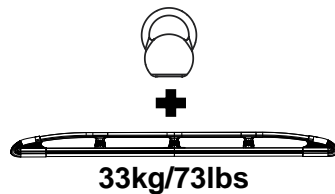



150kg Max

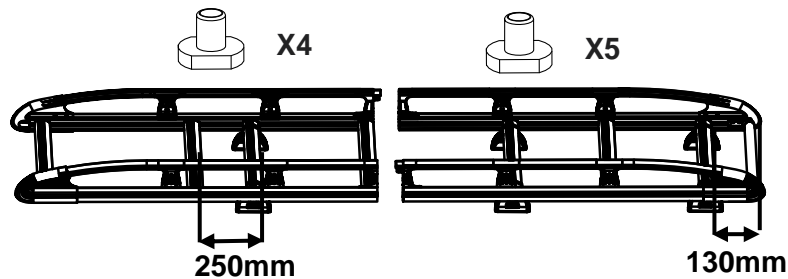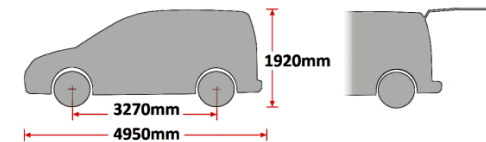


K661/B661- Jumpy/Dispatch/Proace/Expert 2016-, Opel Vivaro 2019- L2, H1, Vauxhall Vivaro 2019- L1, H1, Twin Doors

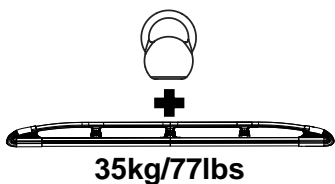



150kg Max

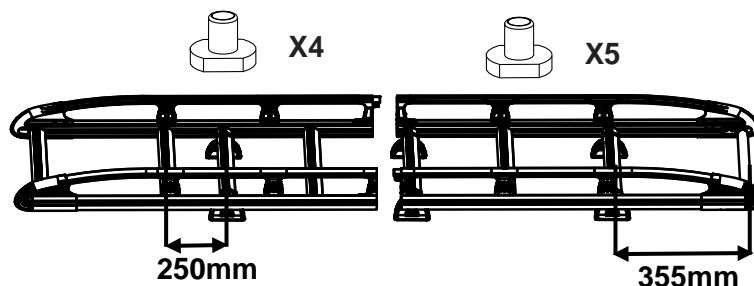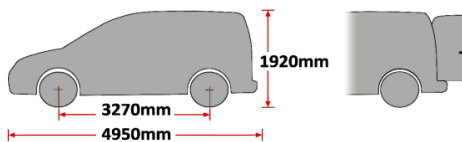


K663/B663- Jumpy/Dispatch/Expert 2016-, Opel Vivaro 2019- L3, H1, Vauxhall Vivaro 2019- L2, H1, Twin Doors

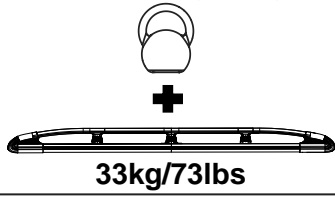


**150kg
Max**

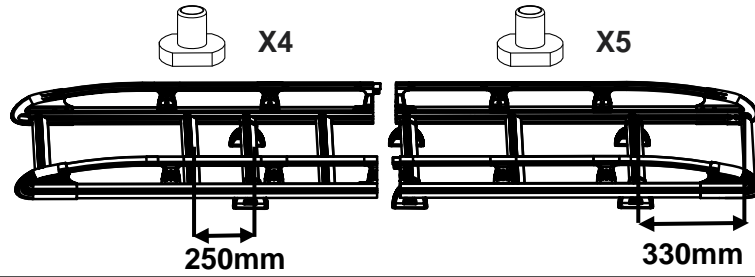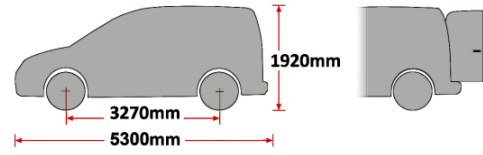


1.

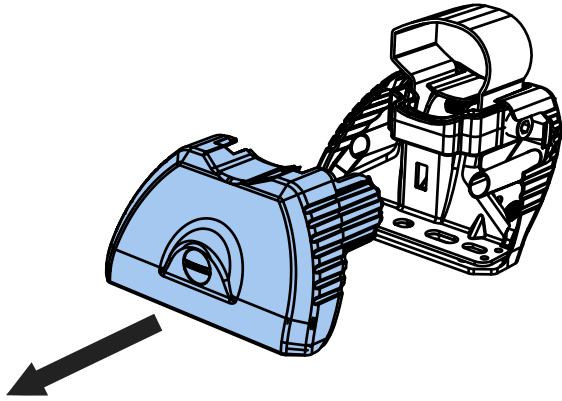


2.

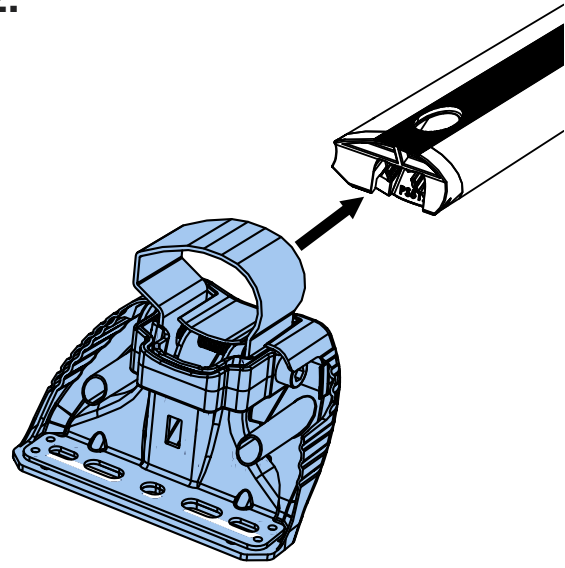


3.

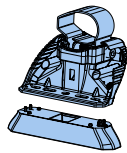


SA397U
PS252

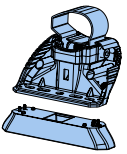


SA397U
PS253

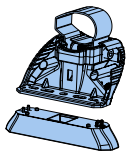


SA397U
PS252

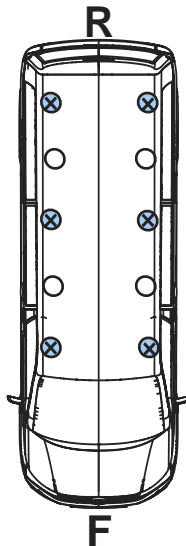


SA398U
PS252

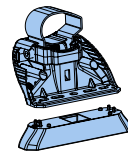


SA398U
PS253

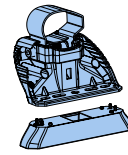


SA398U
PS252

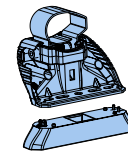

4.

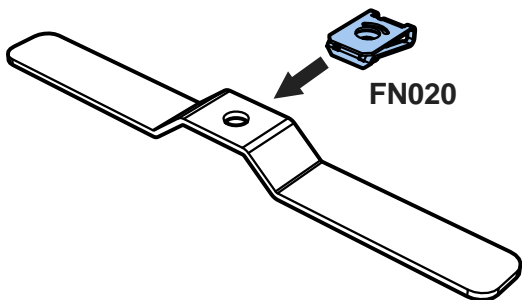


5.

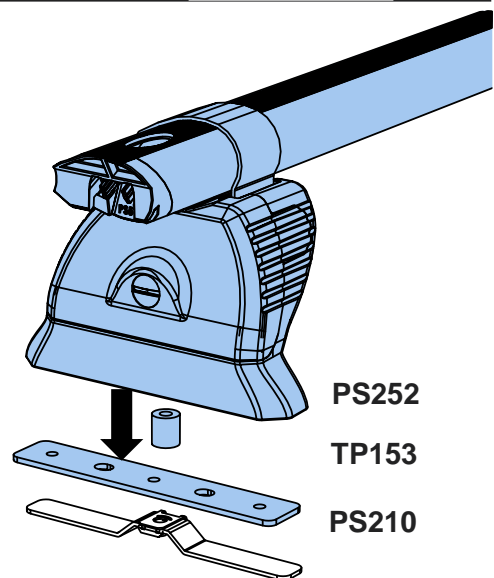


PS252
TP153
PS210


6.

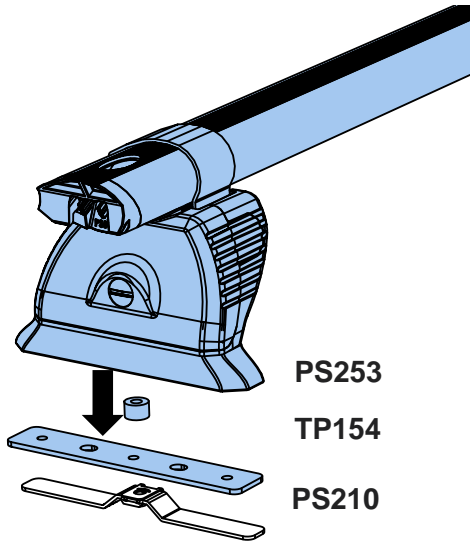


7.

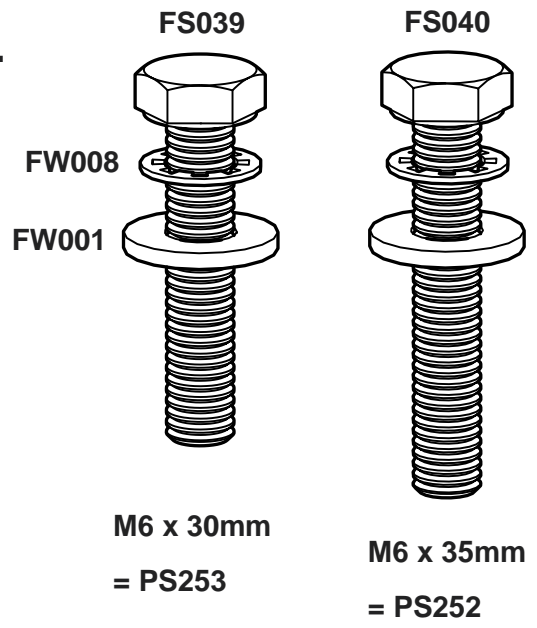


8.

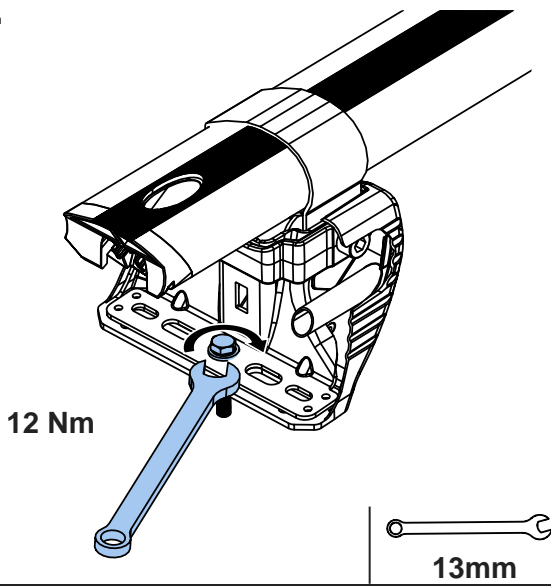


9.

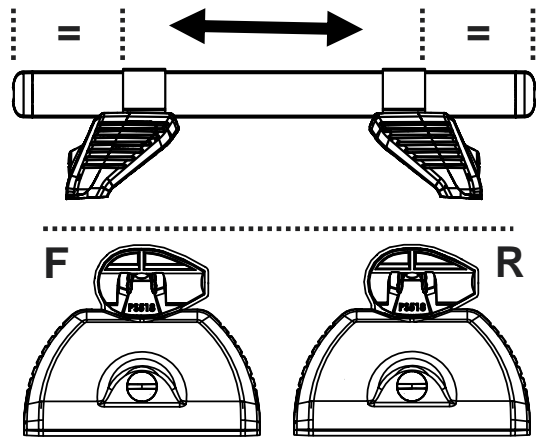



10.

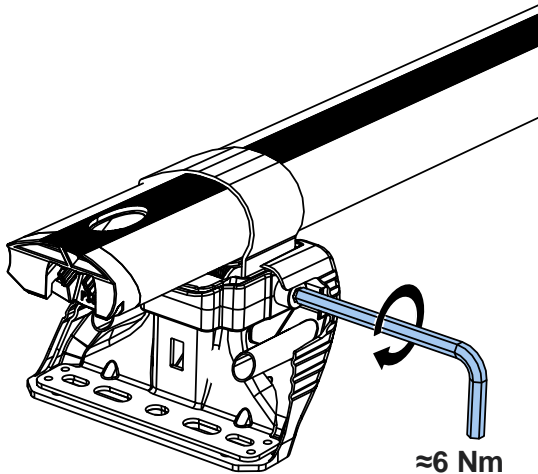


11.

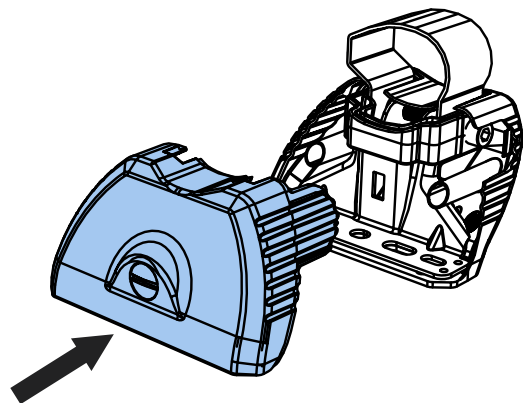


12.

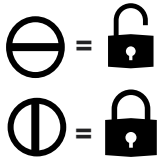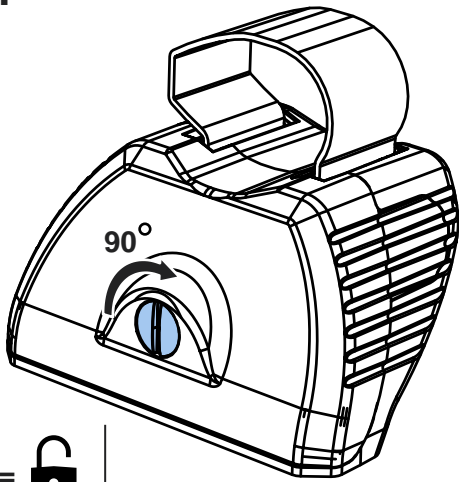


13.

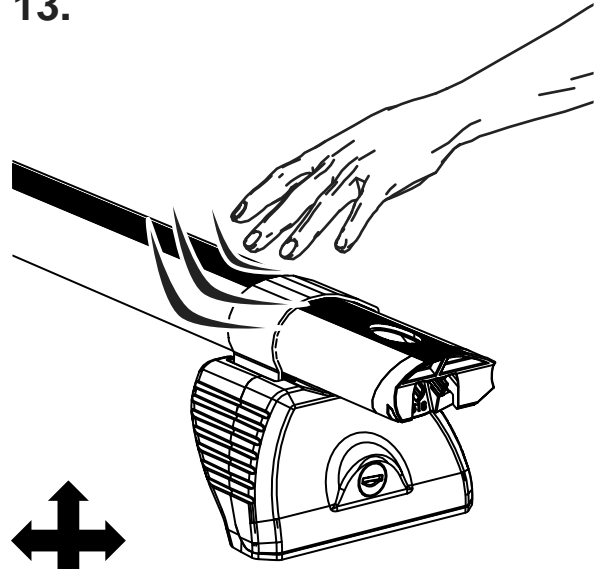


14.

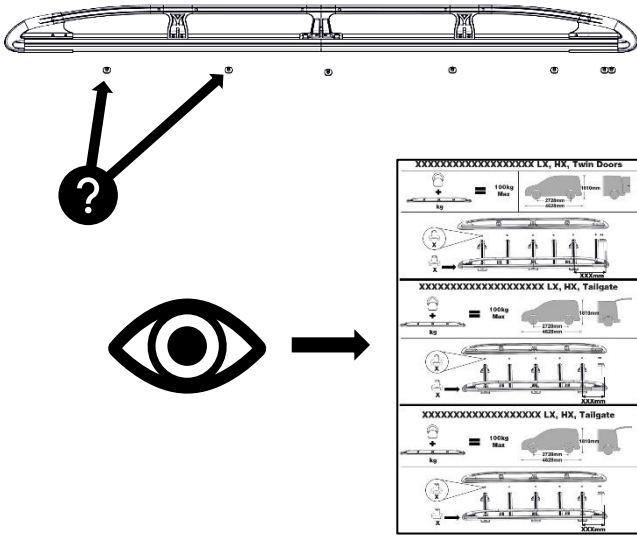


15.

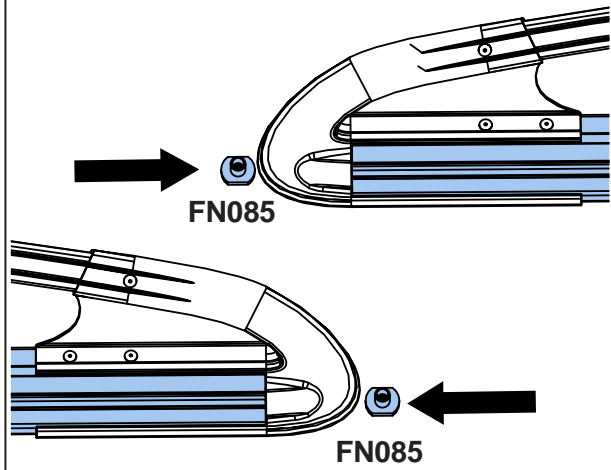


16.

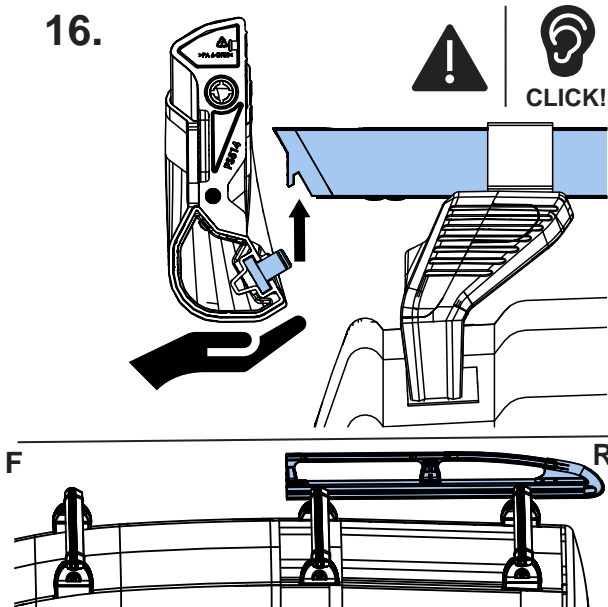


17.

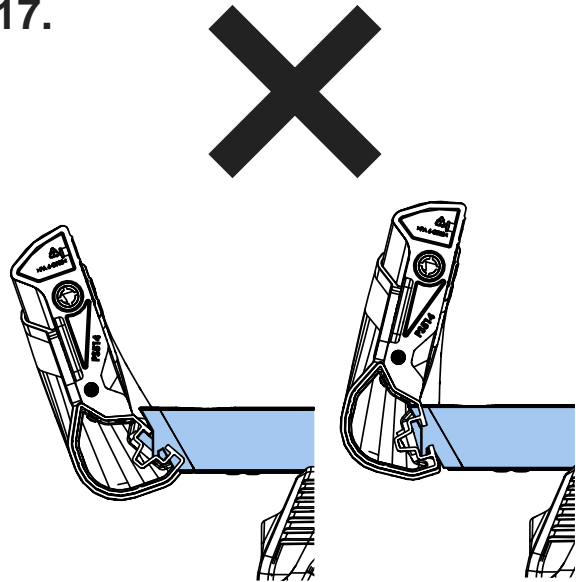


18.

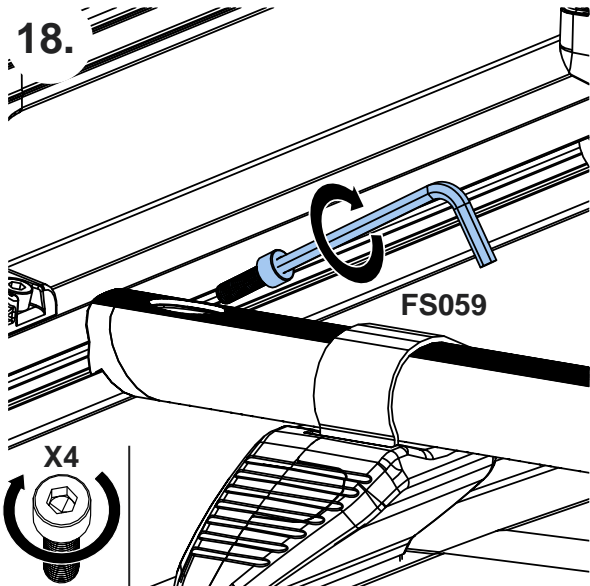


19.

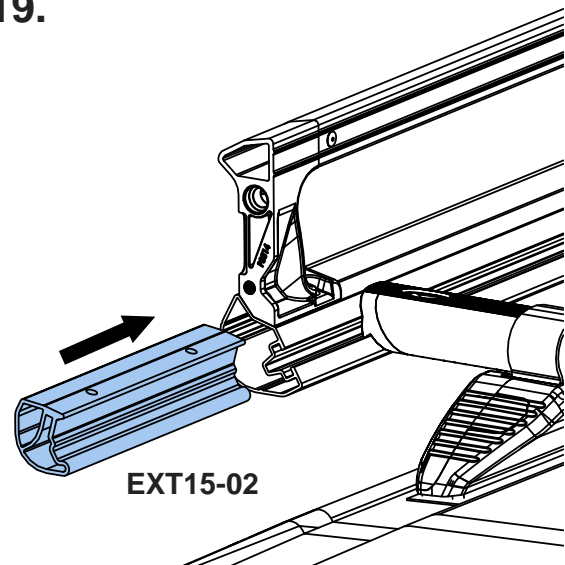


20.

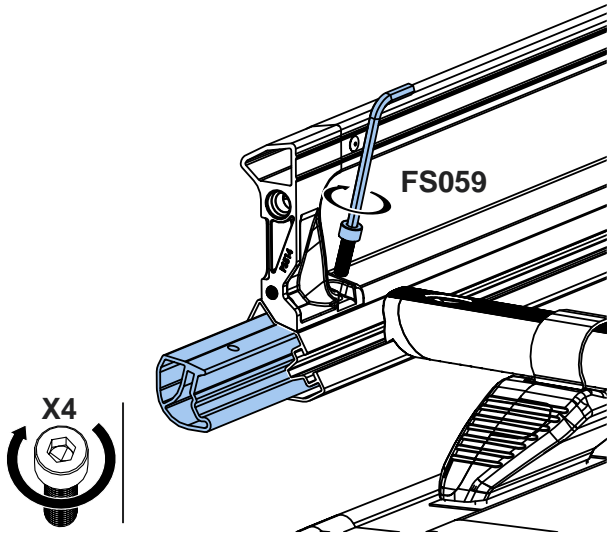


21.

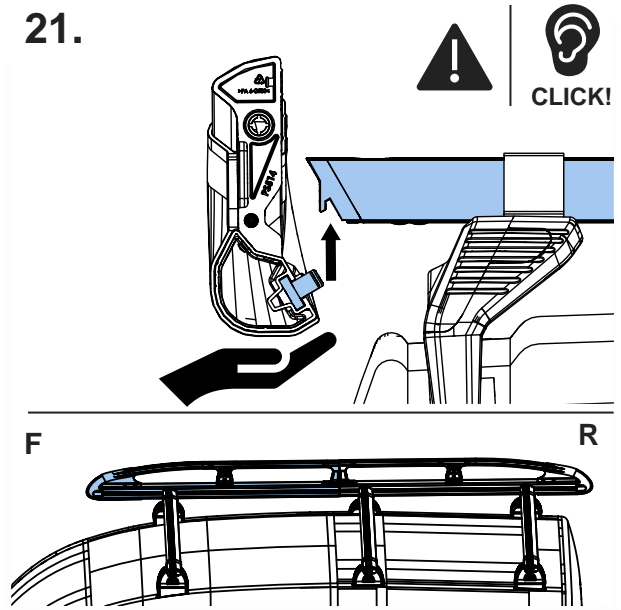


22.

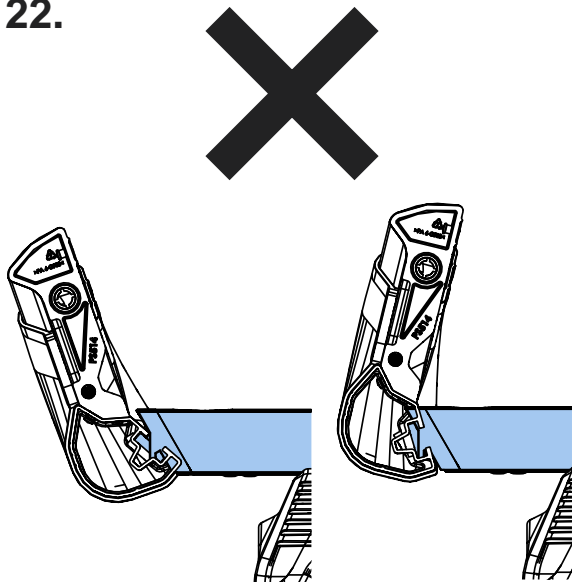


23.

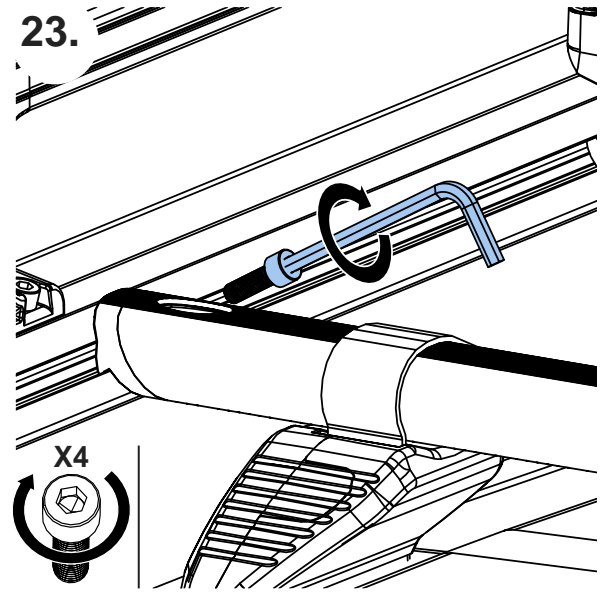


24.

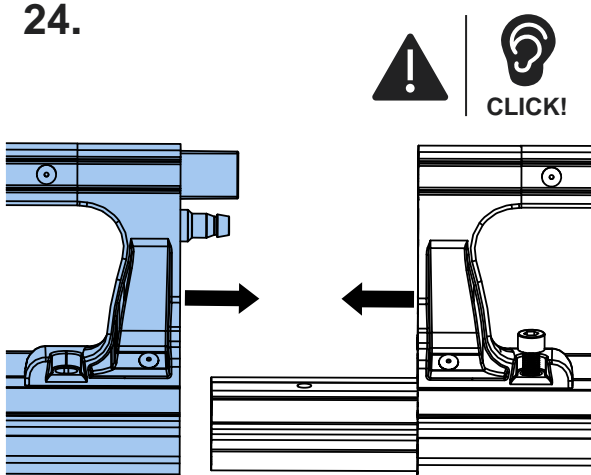


25.

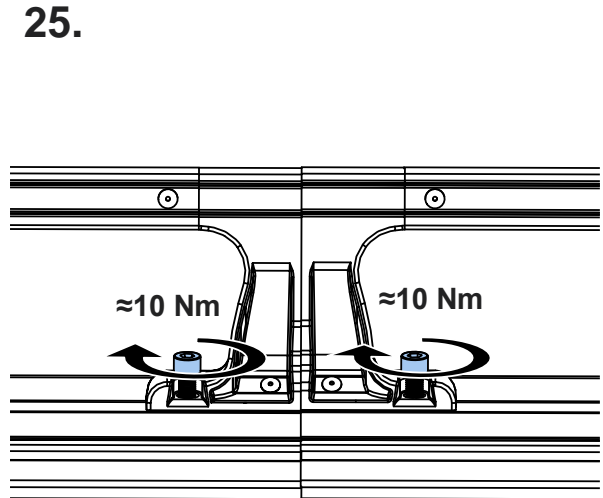


26.

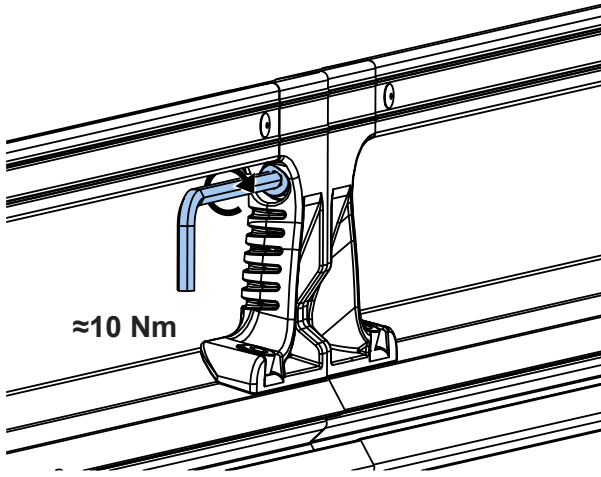



27.

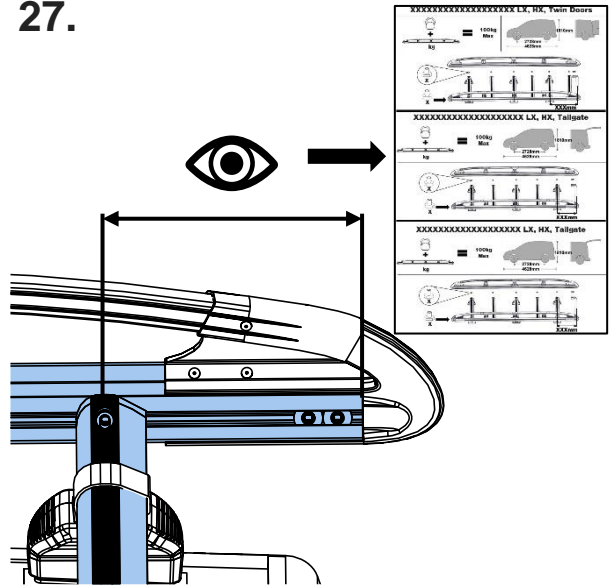


28.

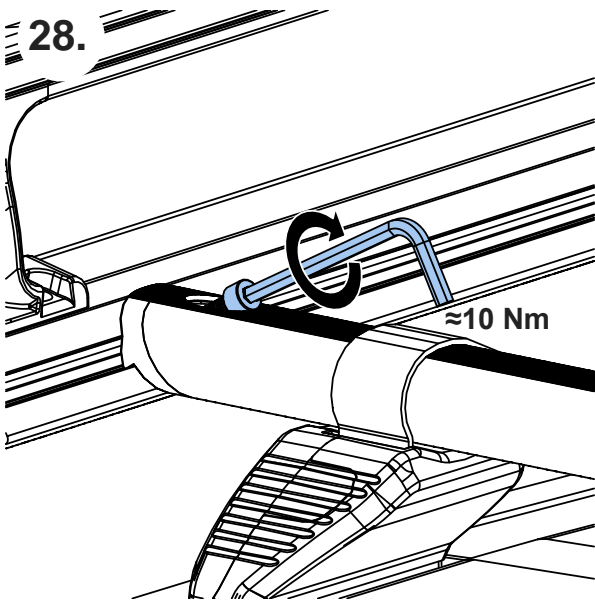


29.

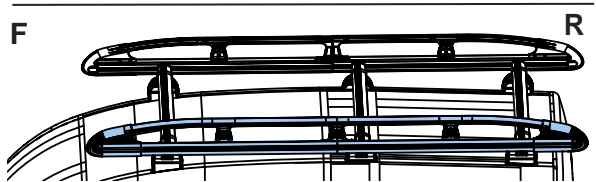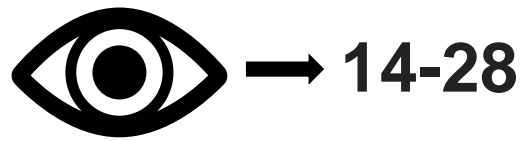


30.

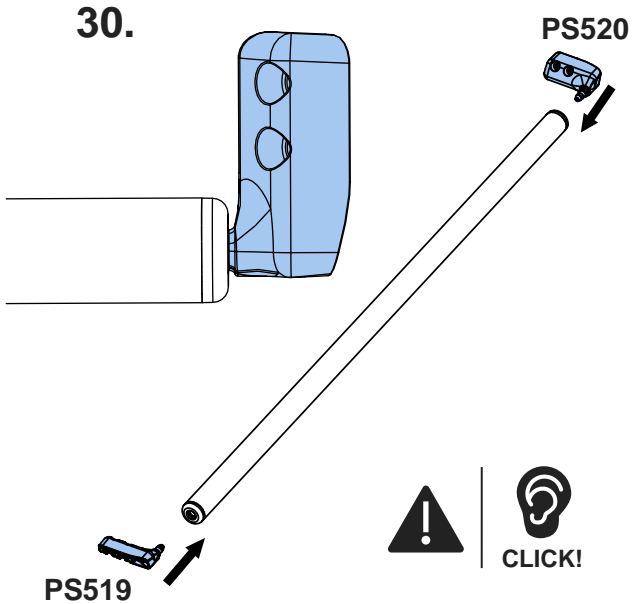


31.

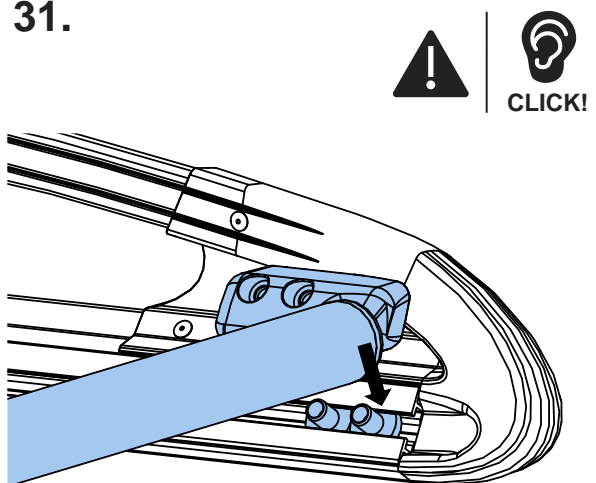


32.

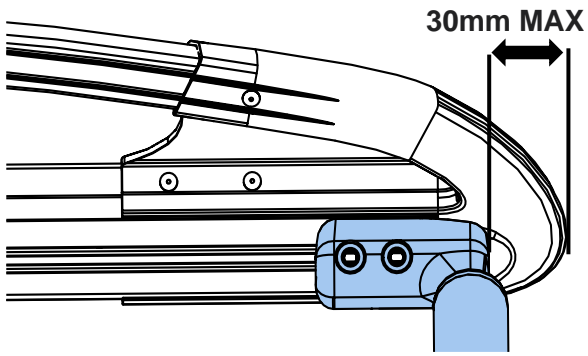


33.

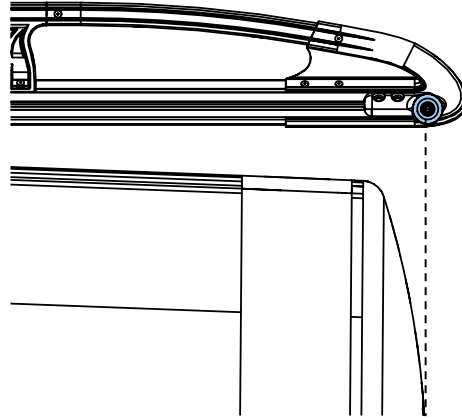


34.

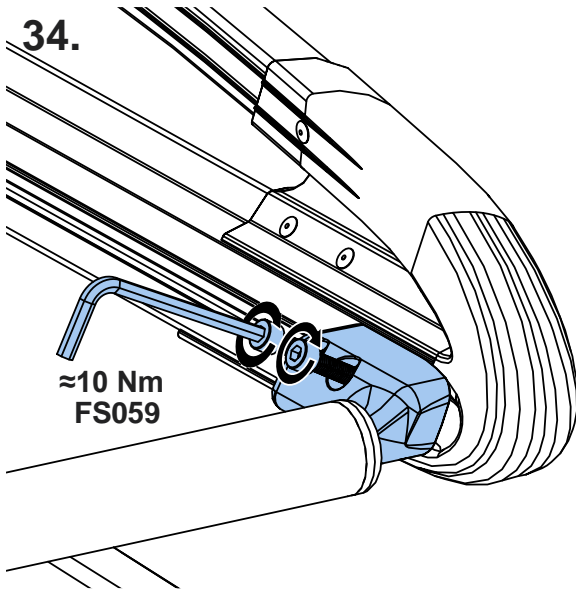


35.

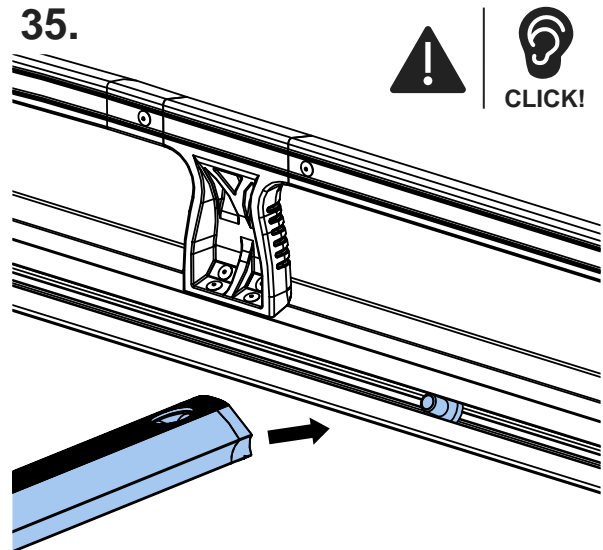


36.

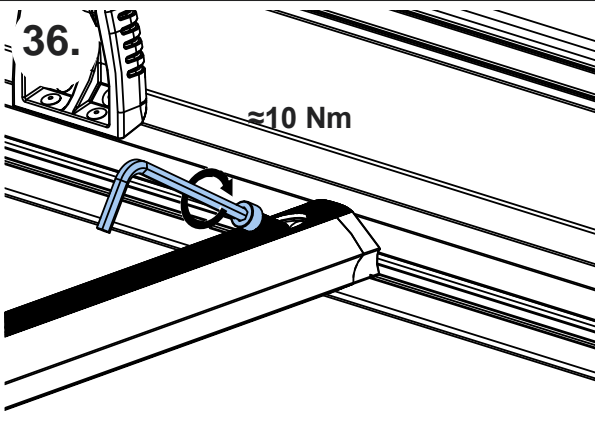

37.

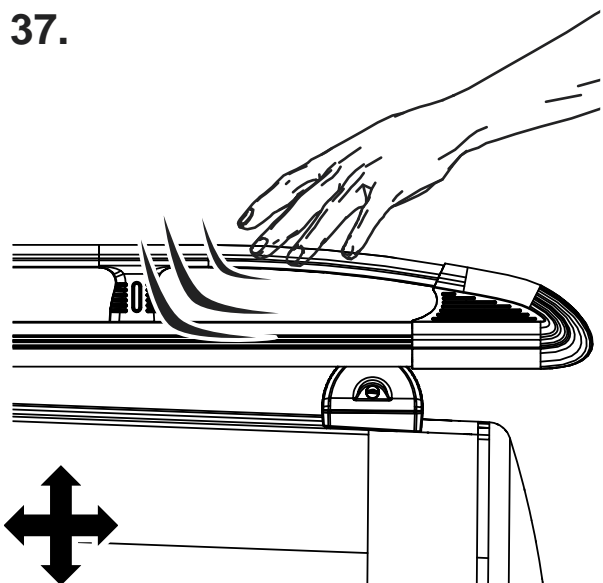

38.

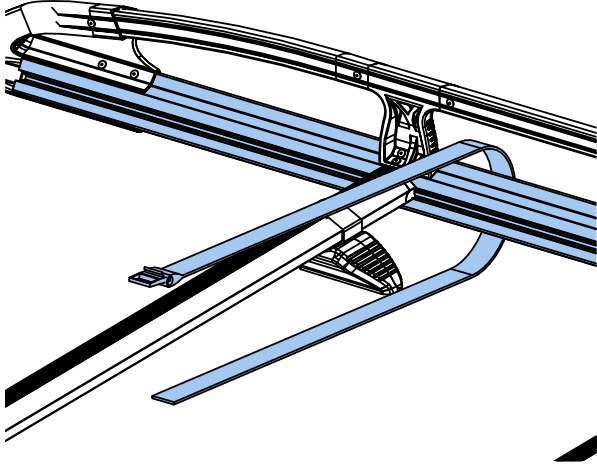

39.

