









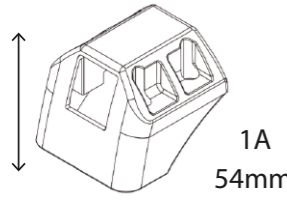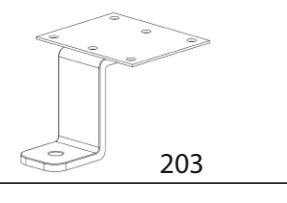


N		Q
1	 1A 54mm	4
2	 203	4
3		4
4		1
5		1


N	BO0060	Q
8	 DIN912 M6x20	16
9	 DIN125	16
N	BO0036	Q
10	 ISO7380 M8x16	4
N	BO0032(x2)	Q
11	 DIN125 Ø8	8
N	BO0033	Q
12	 DIN985 M8	4

- E** Instrucciones de montaje Kit de fijación
- C** Instruccions de muntatge Kit de fixació
- GB** Assembly instructions Fixation Kit
- F** Instruction de montage Kit fixation
- D** Montageanleitung Stützfuß-Kit
- PT** Instruções de montagem Kit fixação
- I** Istruzioni di montaggio Kit di fissaggio
- PL** Instrukcja montażu Element mocujący
- CZ** Montážní návod Fixační kit
- HU** Szerelési Utasítás Rögzítő készlet
- RO** Instrucțiuni de montaj Kit de fixare
- HR** Detaljne upute Kit za montažu
- TU** Öncelikle montaj Montaj kiti

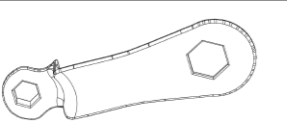

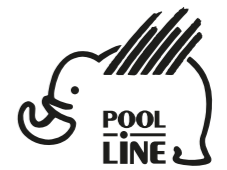POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net


Nº HOMOLOGACIÓN: **E9** 26R-03.1043

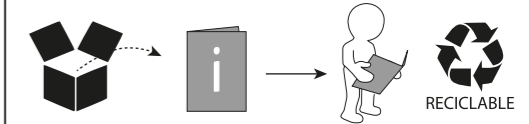


121511

Rv: 10/2024


K Techo completo

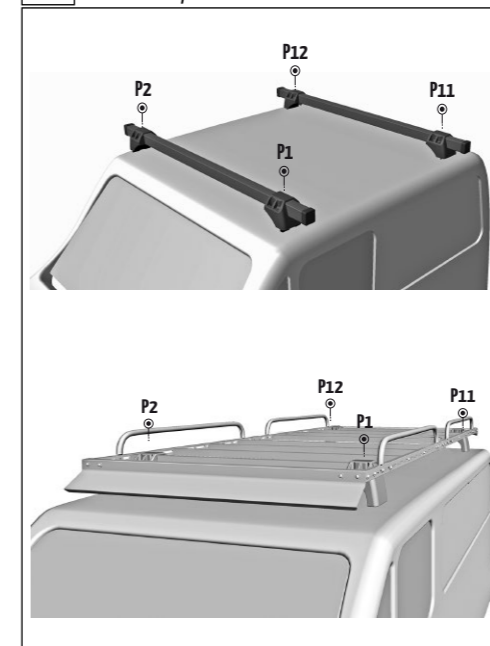


X Trampilla techo

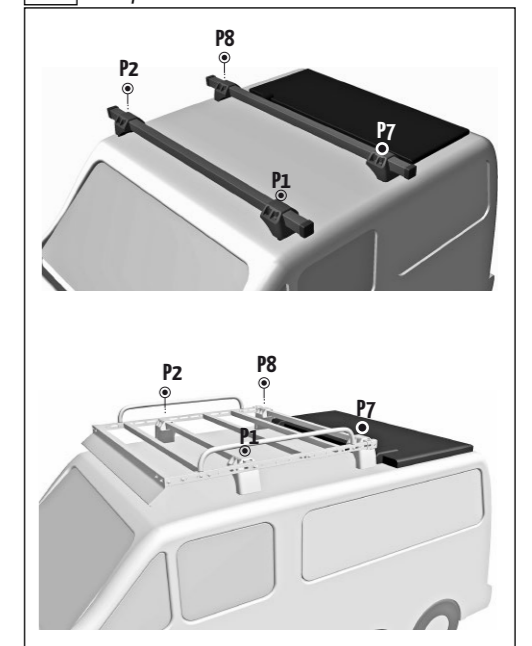



Limpieza pre-instalación
Pre-installation cleaning

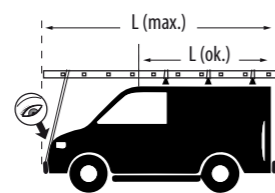

Revisar par de apriete
Check torque

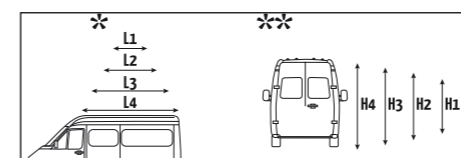

	L*	H**	⌚	10	P1	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12
CITROËN																
C15	L1	H1	84 - 05	BO0036+BO0032+BO0033	203+1A	203+1A									203+1A	203+1A
C15 (con trampilla)	L1	H1	84 - 05	BO0036+BO0032+BO0033	203+1A	203+1A					203+1A	203+1A				

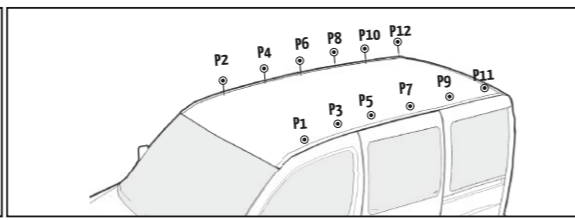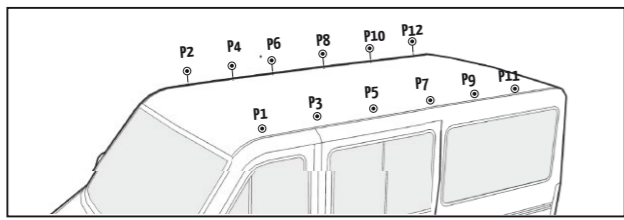

P1	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx
xxx	xxx			xxx	xxx					xxx	xxx

Pag. 1

←	10	P1	P
0X	B0000XX		
0X	B0000XX		
	B0000X		

Pag. 1

6 Nm

5 Nm