


- E** Instrucciones de montaje Kit de fijación
- C** Instruccions de muntatge Kit de fixació
- GB** Assembly instructions Fixation Kit
- F** Instruction de montage Kit fixation
- D** Montageanleitung Stützfuß-Kit
- PT** Instruções de montagem Kit fixação
- I** Istruzioni di montaggio Kit di fissaggio
- PL** Instrukcja montażu Element mocujący
- CZ** Montážní návod Fixační kit
- HU** Szerelési Utasítás Rögzítő készlet
- RO** Instrucțiuni de montaj Kit de fixare
- HR** Detaljne upute Kit za montažu
- TU** Öncelikle montaj Montaj kiti

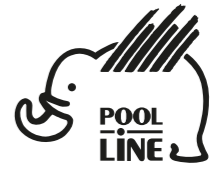











POOL-LINE ACCESORIOS, S.L.  
 C. Esqueis, 19. P. I. Can Barri  
 08415- Bigues i Riells. Barcelona (España)  
 www.pool-line.net


Nº HOMOLOGACIÓN: **E9** 26R-03.1043

**121011**  
 Rv: 03/2024

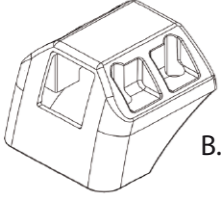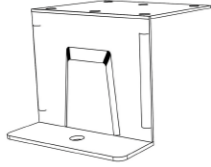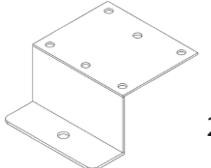


- **CITROËN JUMPY III** L2 H1 (2016->)
- **OPEL VIVARO C** L2 H1 (2019->)
- **PEUGEOT EXPERT III** L2 H1 (2016->)
- **TOYOTA PROACE II** L2 H1 (2016->)


N		Q
1	 B.I.TAP66	6
2	 220	4
3	 224	2
4		6
5		6
6		1
<b>BO00061</b>		
10	 DIN912 M6x20	24
11	 DIN125 Ø6	24
<b>BO0005 x3</b>		
12	 DIN912 M6x20	6
13	 DIN9021 Ø6	6




**A**

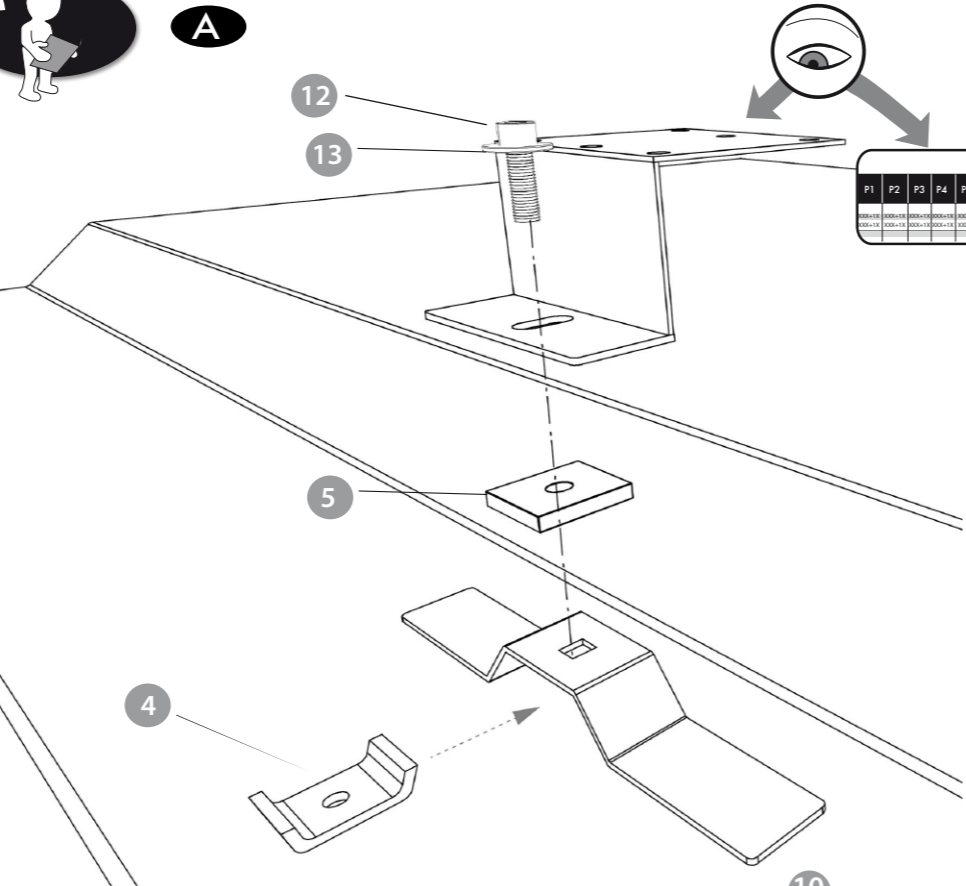


**B**

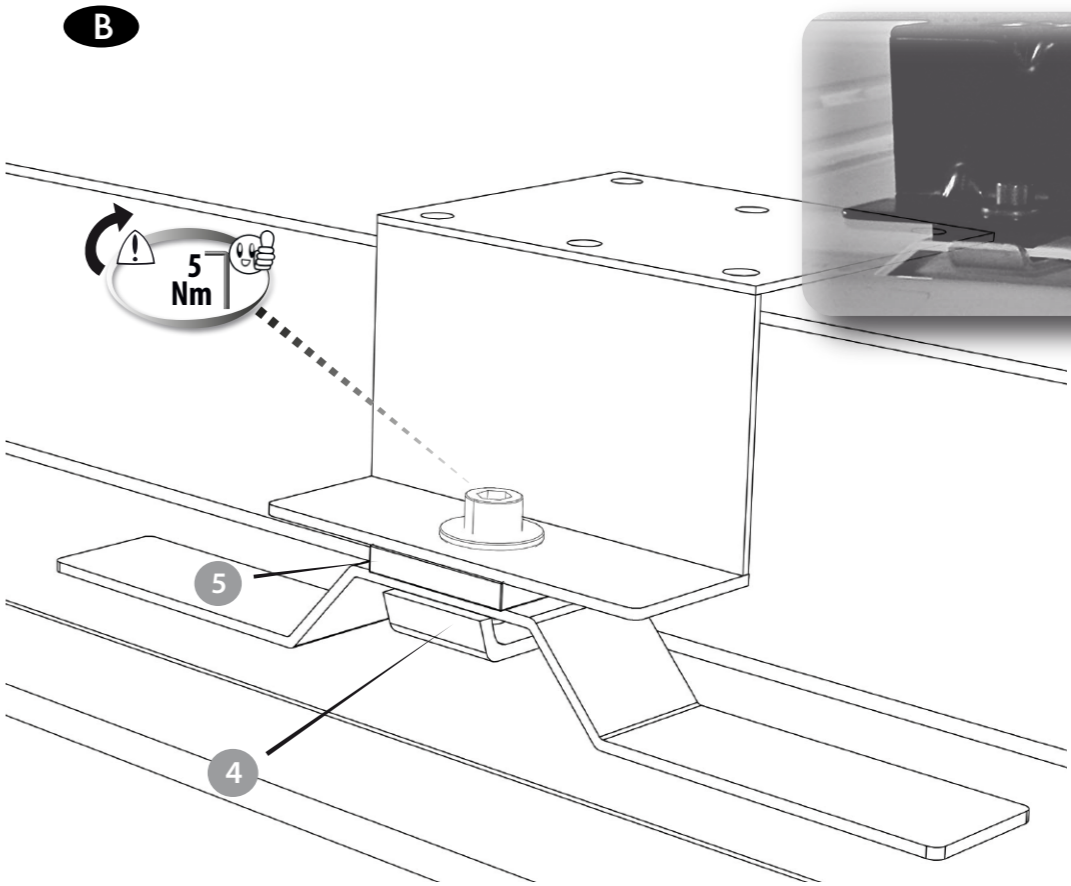

**C1**

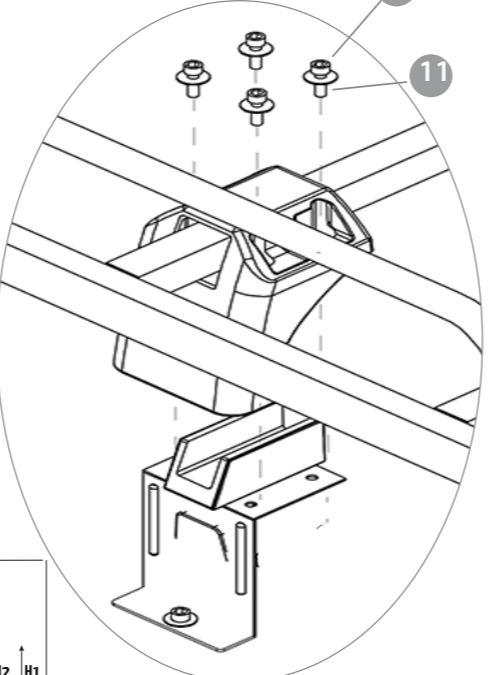


**C2**

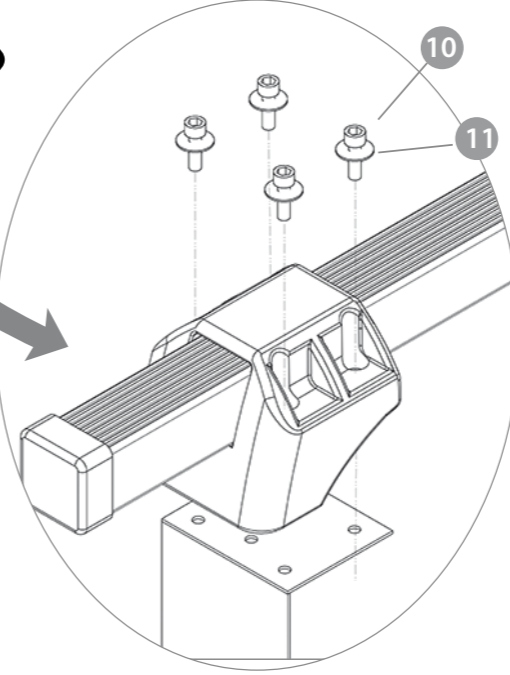




**PAG. 3**

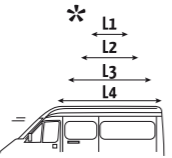\* L1  
L2  
L3  
L4



\*\* H4  
H3  
H2  
H1



	L*	H**			P1	P2	P3	P4	P5	P6	P7	P8	P9	P10
<b>CITROËN</b>														
Jumpy III (M)	L2	H1	2016->	B00005	220	220			224	224			220	220
<b>OPEL</b>														
Vivaro C (M)	L2	H1	2019->	B00005	220	220			224	224			220	220
<b>PEUGEOT</b>														
Expert III (M)	L2	H1	2016->	B00005	220	220			224	224			220	220
<b>TOYOTA</b>														
Proace II (M)	L2	H1	2016->	B00005	220	220			224	224			220	220

