


- | | | |
|-----------|--------------------------|------------------|
| E | Instrucciones de montaje | Kit de fijación |
| C | Instruccions de muntatge | Kit de fixació |
| GB | Assembly instructions | Fixation Kit |
| F | Instruction de montage | Kit fixation |
| D | Montageanleitung | Stützfuß-Kit |
| PT | Instruções de montagem | Kit fixação |
| I | Istruzioni di montaggio | Kit di fissaggio |
| PL | Instrukcja montażu | Element mocujacy |
| CZ | Montážní návod | Fixační kit |
| HU | Szerelési Utasítás | Rögzítő készlet |
| RO | Instructiuni de montaj | Kit de fixare |
| HR | Detaljne upute | Kit za montažu |
| TU | Öncelikle montaj | Montaj kiti |

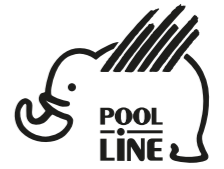


POOL-LINE ACCESORIOS, S.L.
 C. Esqueis, 19. P. I. Can Barri
 08415- Bigues i Riells. Barcelona (España)
 www.pool-line.net















Nº HOMOLOGACIÓN: **E9** 26R-03.1042

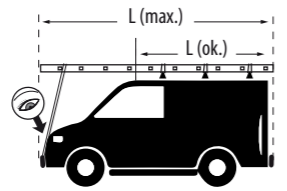
121932

Rv: 9/2016

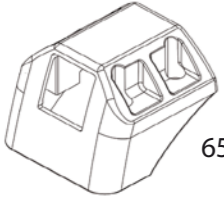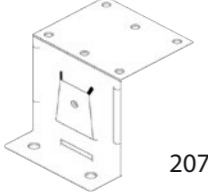

- NISSAN NV400 L3 H2 (2010->)
- OPEL MOVANO B L3 H2 (2010->)
- RENAULT MASTER III L3 H2 (2010->)

N	Q	
1		10
2		10
3		10
4		10
5		20
6		1
BO00054		
9	 DIN6923 M6	16
10	 DIN912 M6x20	16
11	 DIN125 Ø6	16
BO00055		
9	 DIN6923 M6	24
10	 DIN912 M6x20	24
11	 DIN125 Ø6	24
BO0014 x10		
12	 DIN912 M6x30	20
13	 DIN9021 Ø6	20

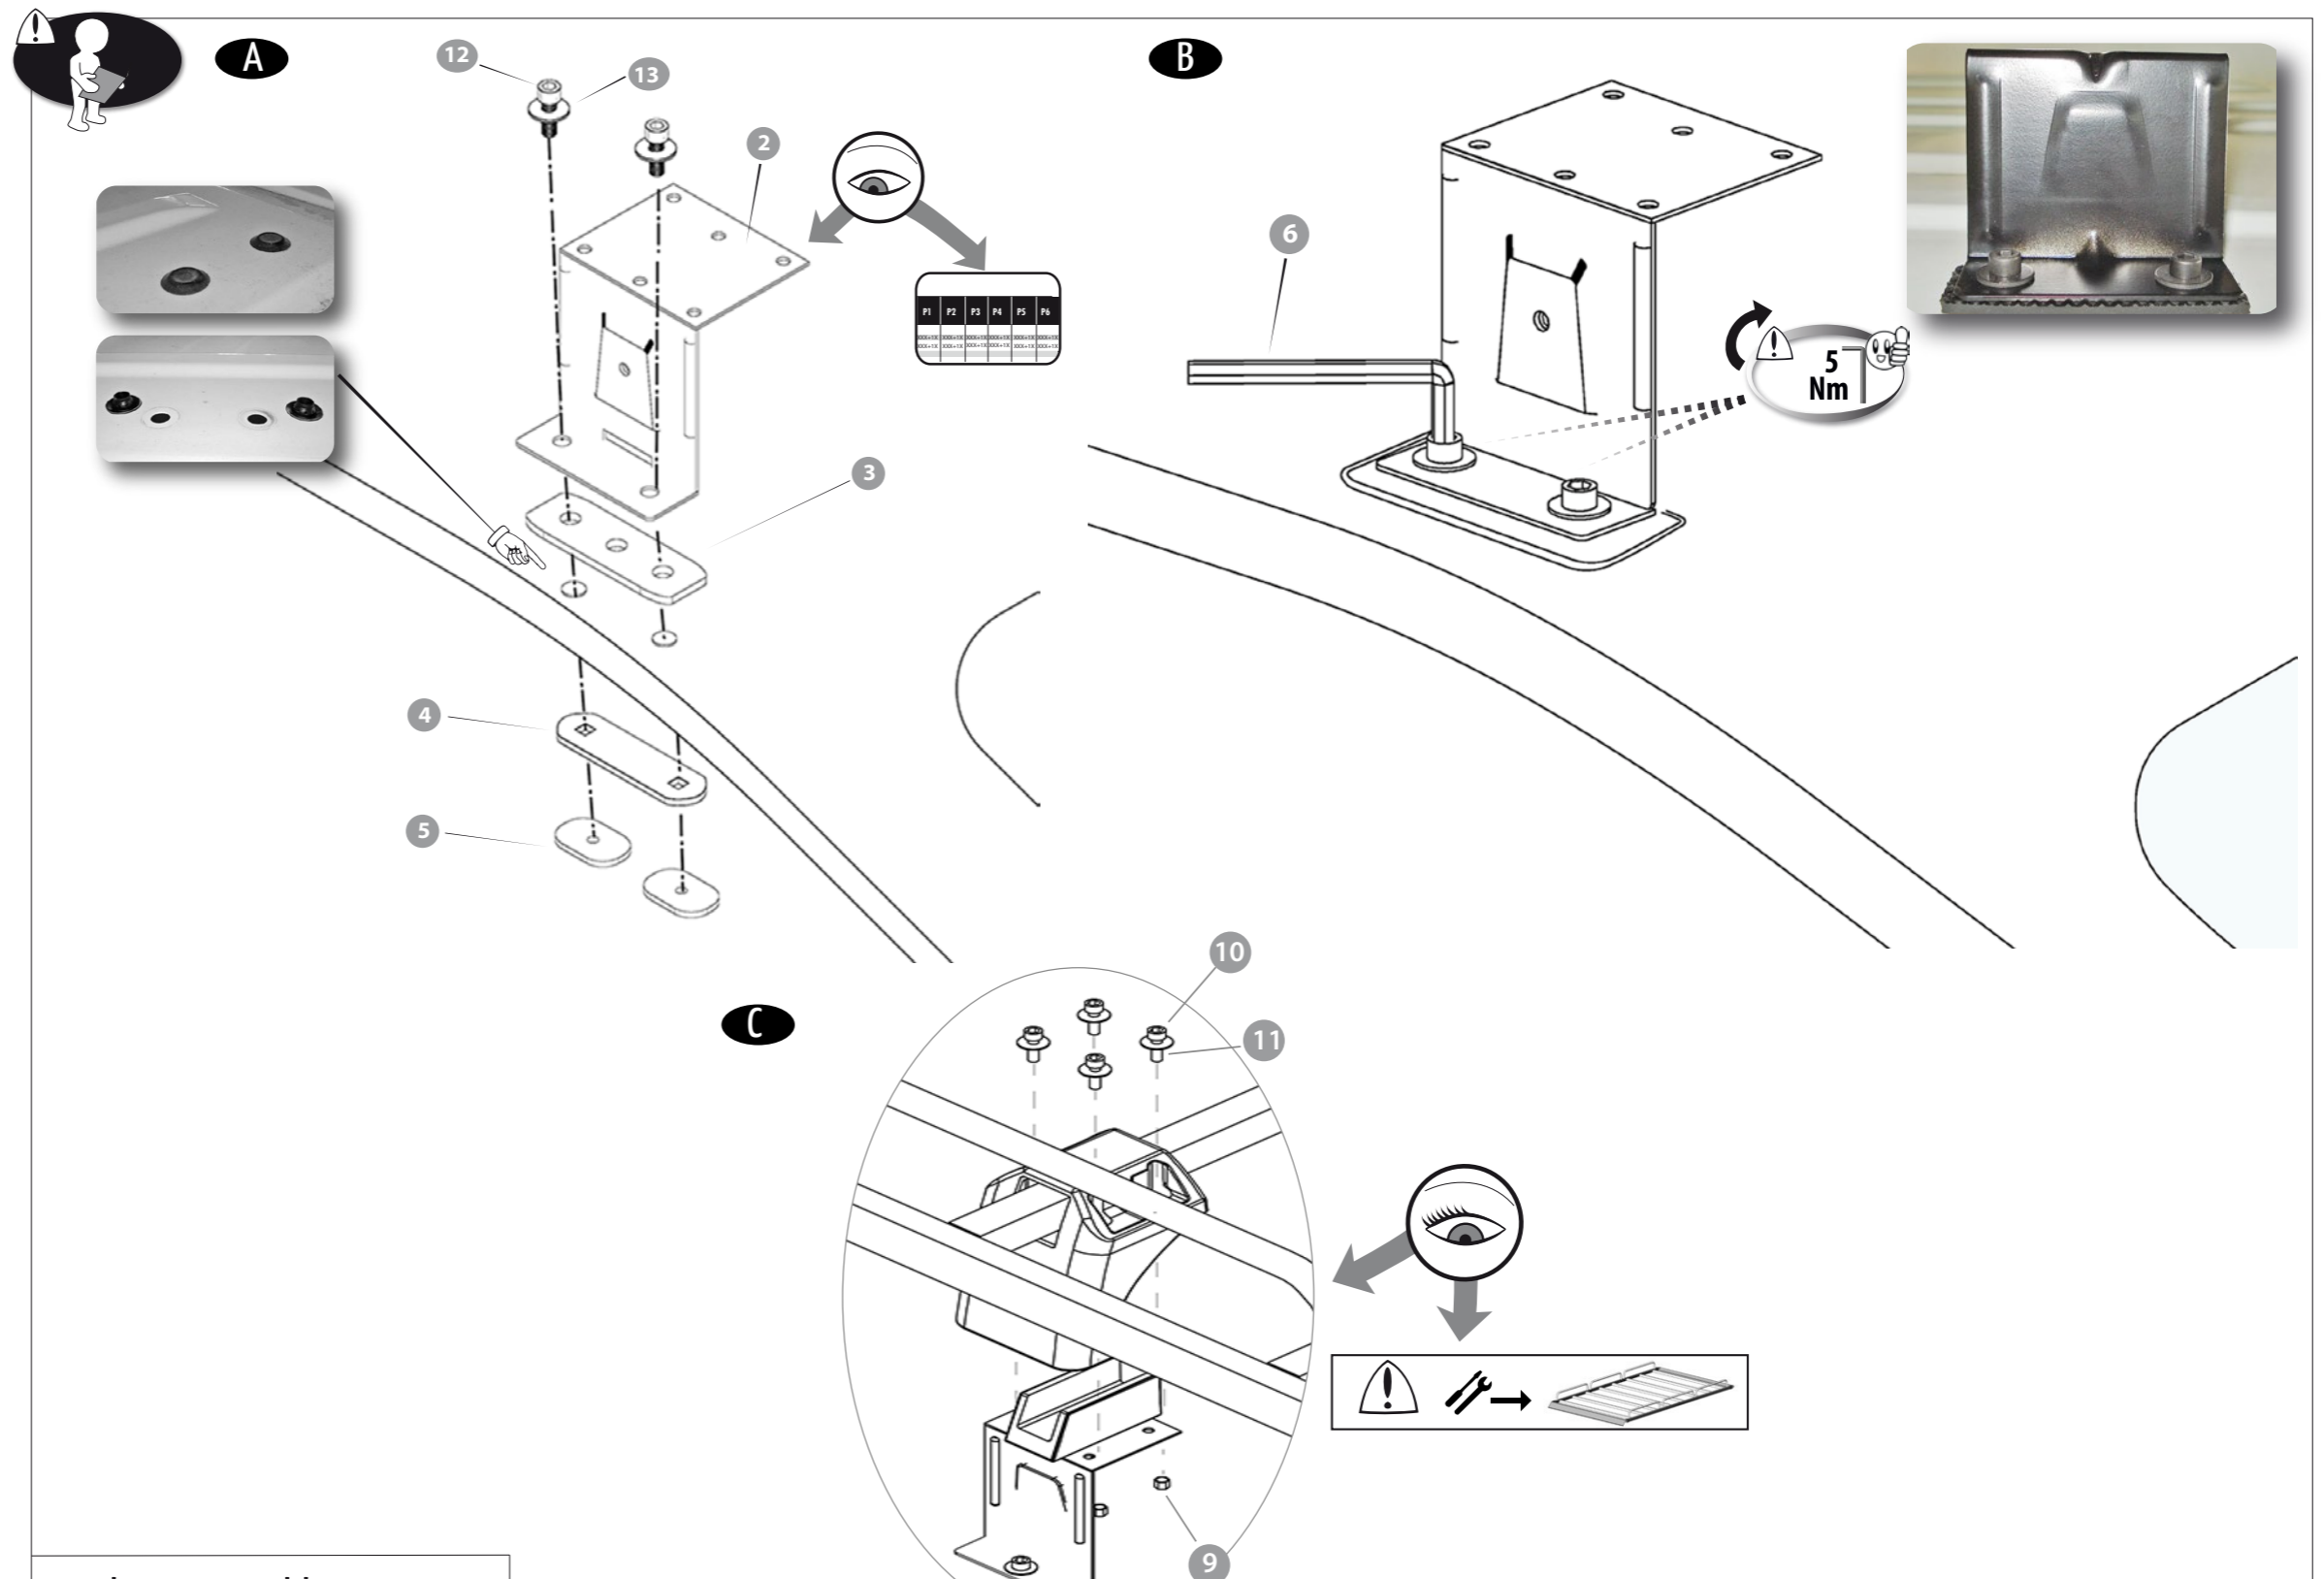

A

B

C

5 Nm

P1 P2 P3 P4 P5 P6

DIN6923 M6

DIN912 M6x20

DIN125 Ø6

DIN6923 M6

DIN912 M6x20

DIN125 Ø6

BO0014 x10

DIN912 M6x30

DIN9021 Ø6

NISSAN
Nv400

OPEL
Movano B

RENAULT
Master III

L* H**

L1 L2 L3 L4

H4 H3 H2 H1

P10 P8 P6 P4 P2 P9 P7 P5 P3 P1

	L*	H**	↻	↻	P1	P2	P3	P4	P5	P6	P7	P8	P9	P10
NISSAN Nv400	L3	H2	2010->	BO0014	207	207	207	207	207	207	207	207	207	207
OPEL Movano B	L3	H2	2010->	BO0014	207	207	207	207	207	207	207	207	207	207
RENAULT Master III	L3	H2	2010->	BO0014	207	207	207	207	207	207	207	207	207	207