


- E** Instrucciones de montaje Kit de fijación
- C** Instruccions de muntatge Kit de fixació
- GB** Assembly instructions Fixation Kit
- F** Instruction de montage Kit fixation
- D** Montageanleitung Stützfuß-Kit
- PT** Instruções de montagem Kit fixação
- I** Istruzioni di montaggio Kit di fissaggio
- PL** Instrukcja montażu Element mocujący
- CZ** Montážní návod Fixační kit
- HU** Szerelési Utasítás Rögzítő készlet
- RO** Instrucțiuni de montaj Kit de fixare
- HR** Detaljne upute Kit za montažu
- TU** Öncelikle montaj Montaj kiti

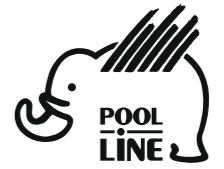

POOL-LINE ACCESORIOS, S.L.  
 C. Esqueis, 19. P. I. Can Barri  
 08415- Bigues i Riells. Barcelona (España)  
 www.pool-line.net


Nº HOMOLOGACIÓN: **E9** 26R-03.1042











RECYCLABLE



**121933**  
 Rv: 11/2023



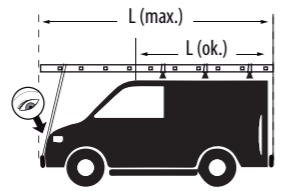

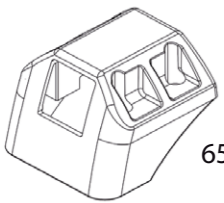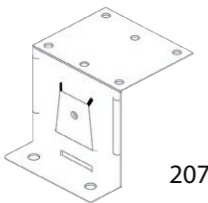- NISSAN NV400 L4 - H2 (2010->)
- OPEL MOVANO B L4 - H2 (2010->)
- RENAULT MASTER III L4 - H2 (2010->)

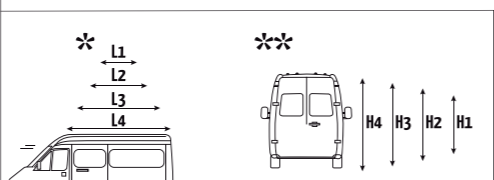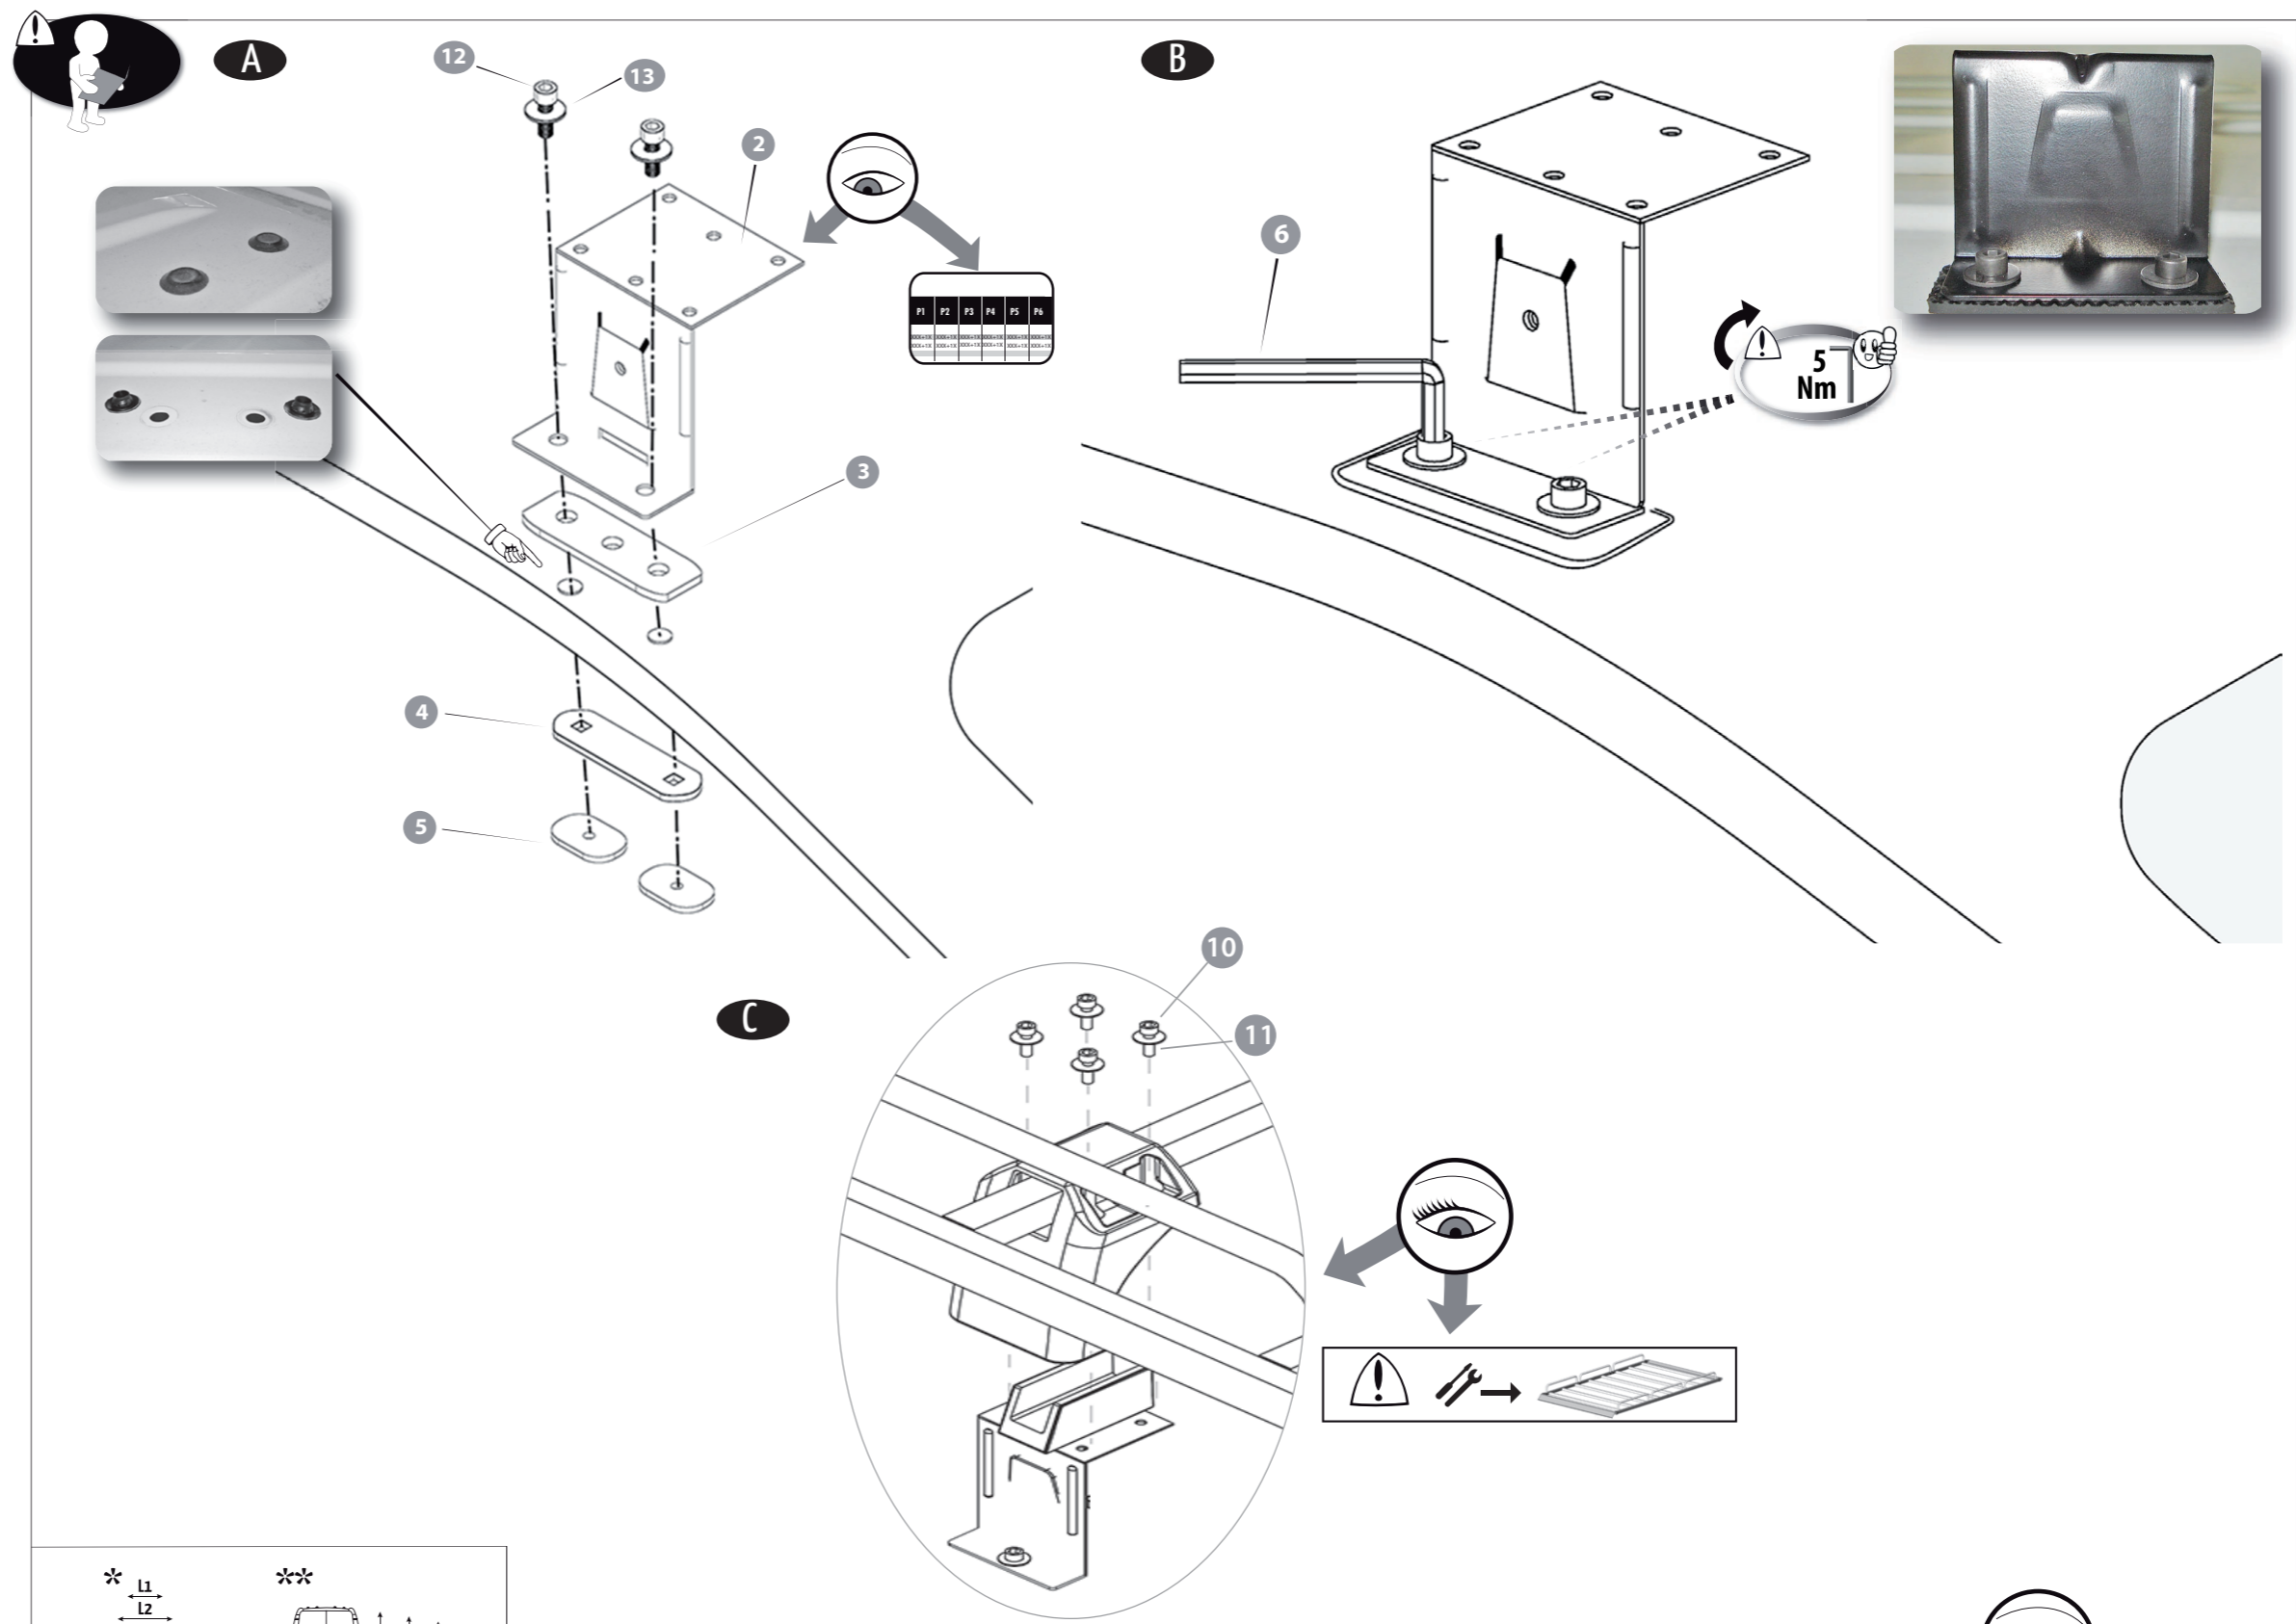

N		Q
1	 65	12
2	 207	12
3		12
4		12
5		24
6		1
	<b>BO0061 (x2)</b>	
10	 DIN912 M6x20	48
11	 DIN125 Ø6	48
	<b>BO0014 (x12)</b>	
12	 DIN912 M6x30	24
13	 DIN9021 Ø6	24



	L*	H**			P1	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12
<b>NISSAN</b>																
Nv400	L4	H2	2010->	B00014	207	207	207	207	207	207	207	207	207	207	207	207
<b>OPEL</b>																
Movano B	L4	H2	2010->	B00014	207	207	207	207	207	207	207	207	207	207	207	207
<b>RENAULT</b>																
Master III	L4	H2	2010->	B00014	207	207	207	207	207	207	207	207	207	207	207	207

