




N	Q
1	6
2	6
3	6
4	2
5	1
6	1

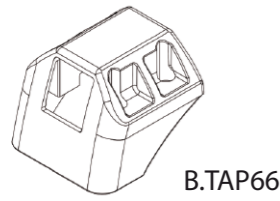


B.TAP66

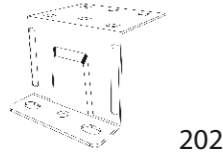

202




VENT11
110mm

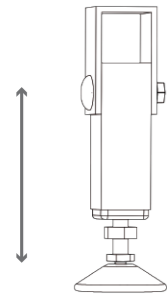

N	BO0061	Q
8	DIN912 M6x20	24
9	DIN125 Ø6	24


N	BO0008 x3	Q
10	ISO 7380 M8X16	6
11	DIN 125 Ø8	6

- E** Instrucciones de montaje Kit de fijación
- C** Instruccions de muntatge Kit de fixació
- GB** Assembly instructions Fixation Kit
- F** Instruction de montage Kit fixation
- D** Montageanleitung Stützfuß-Kit
- PT** Instruções de montagem Kit fixação
- I** Istruzioni di montaggio Kit di fissaggio
- PL** Instrukcja montażu Element mocujący
- CZ** Montážní návod Fixační kit
- HU** Szerelési Utasítás Rögzítő készlet
- RO** Instrucțiuni de montaj Kit de fixare
- HR** Detaljne upute Kit za montažu
- TU** Öncelikle montaj Montaj kiti

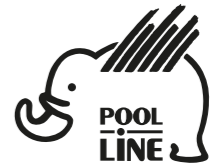



POOL-LINE ACCESORIOS, S.L.
C. Esqueis, 19. P. I. Can Barri
08415- Bigues i Riells. Barcelona (España)
www.pool-line.net

Nº HOMOLOGACIÓN: **E9** 26R-03.1042

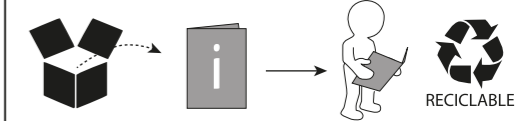

121131


Rv: 10/2024

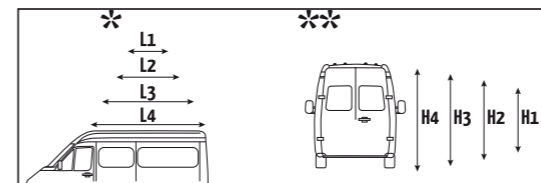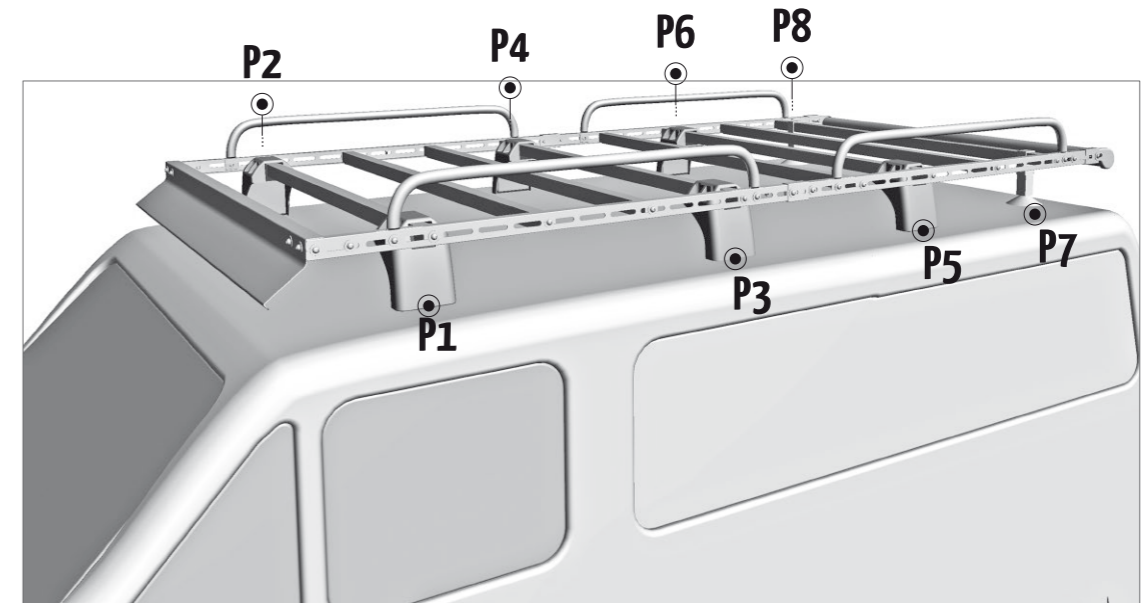

	L*	H***	↻	10	P1	P2	P3	P4	P5	P6	P7	P8
VOLKSWAGEN Caddy III	L2	H1	07 - 11	BO0008	202	202	202	202	202	202	VENT11	VENT11



Limpeza pre-instalación
Pre-installation cleaning

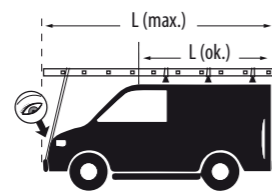

Revisar par de apriete
Check torque

