



TB3PR/FL KammBar Instructions

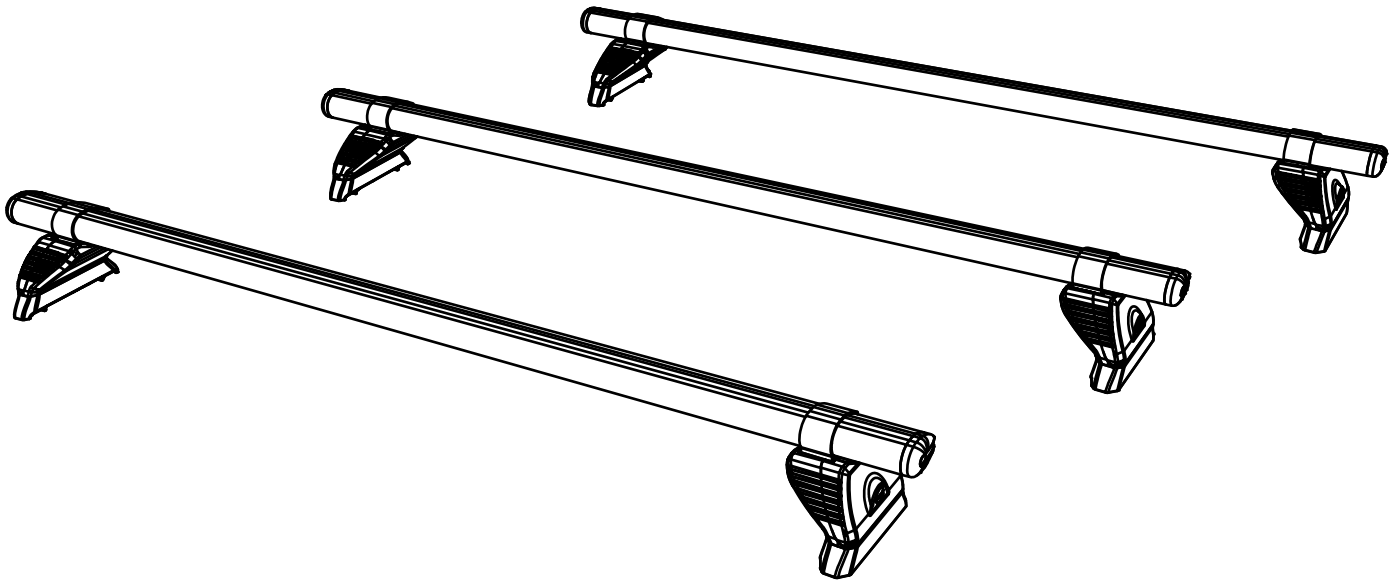


CITY CRASH (✓)




According to ISO/ PAS 11154:2006

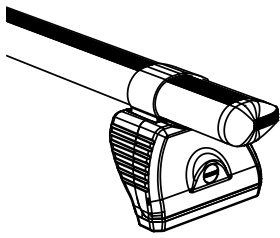


KammBar Pro & Black x 1
2.2kg/4.9lbs
Max
75kg/165lbs

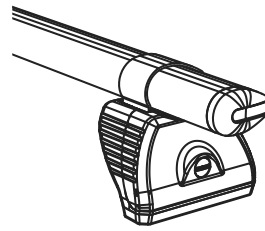


KammBar Fleet x 1
2.5kg/5.5lbs
Max
50kg/110lbs

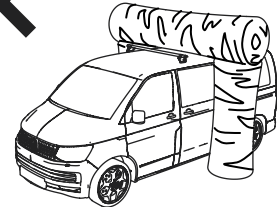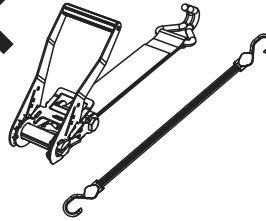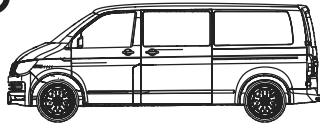

KammBar Pro & Black

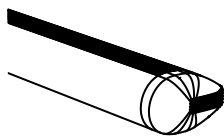

**SA513/
SA538 x 3**

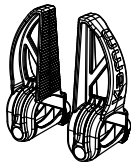

KLS2 x 1




SA397 x 3




SA398 x 3


KammBar Fleet

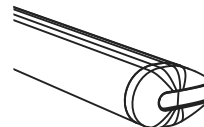


SA512 x 3



C04 x 3
optional upgrade

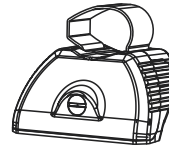


SA397 x 3

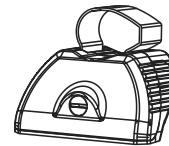


SA398 x 3

Fitting Kit




PS178 x 4




**FS062
(M8 x 25) x 4**




PS492 x 6




**PS491
(3mm)
x 6**

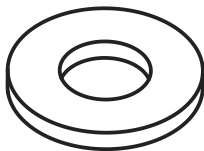


FW002 (M8) x 12

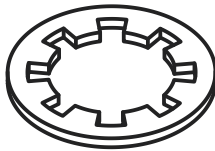

FW009 (M8) x 12



**FS061
(M8 x 35) x 8**




**PS615
(8mm)
x 8**




FT01 x 1




1.

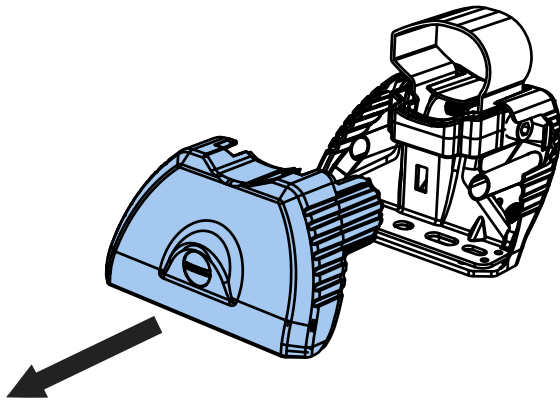


2.

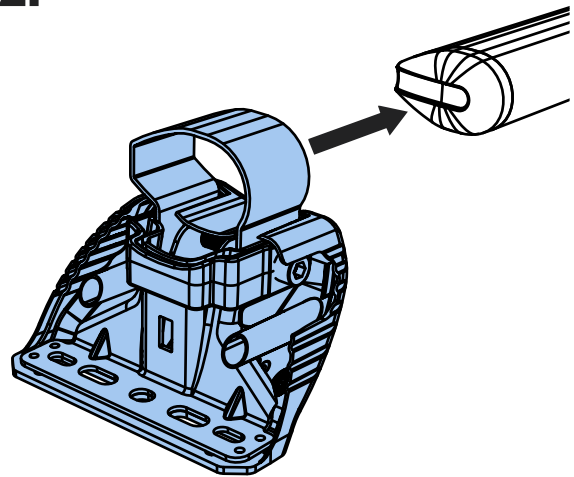


3.

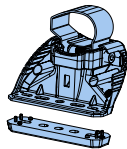


SA397
PS178

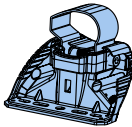


SA397

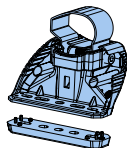


SA397
PS178

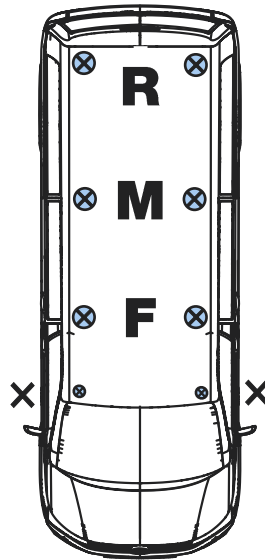


SA398
PS178

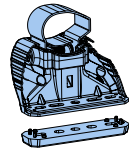


SA398

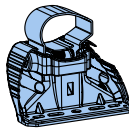

SA398
PS178

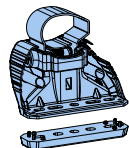

4a.

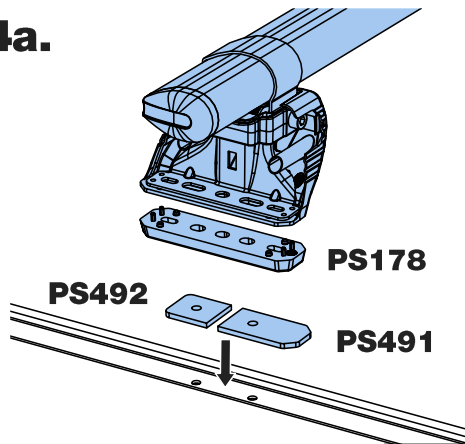


PS178

PS492

PS491

4b.

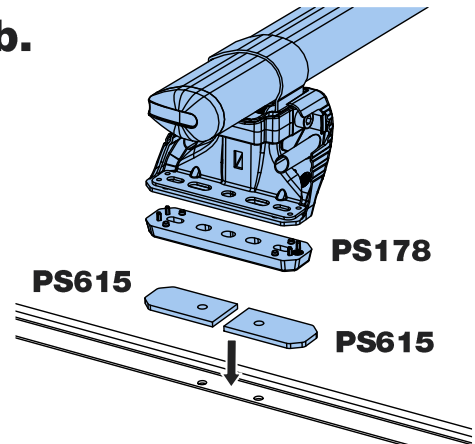


PS178

PS615

PS615


! FORD TRANSIT
CUSTOM 2012-2023

R

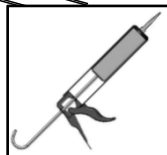


! FORD TRANSIT
CUSTOM 2023-

R

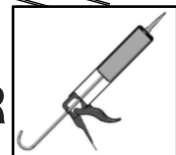


5a.

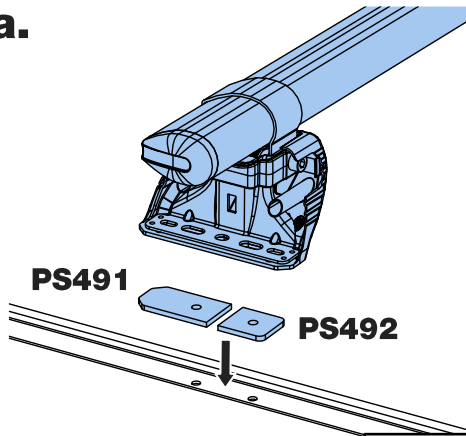


! FORD TRANSIT
CUSTOM 2012-2023

M

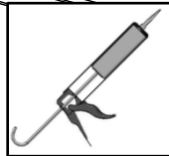

5b.

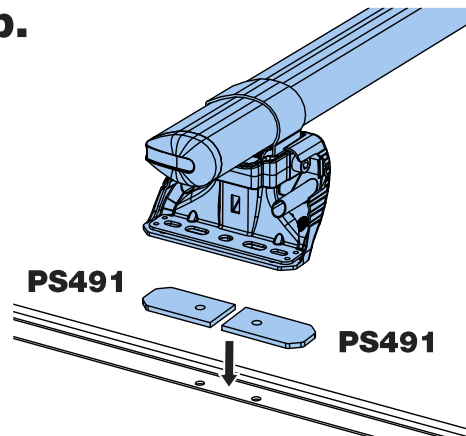


! FORD TRANSIT
CUSTOM 2023-

M




6a.

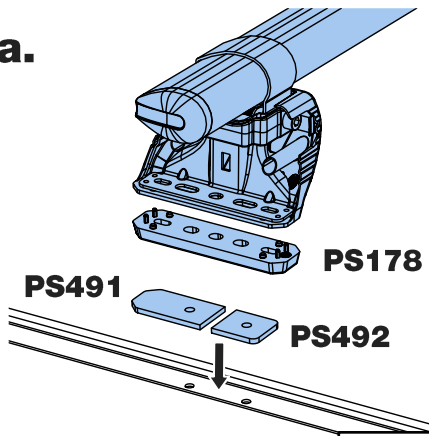


! FORD TRANSIT
CUSTOM 2012-2023

F

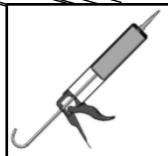


6b.

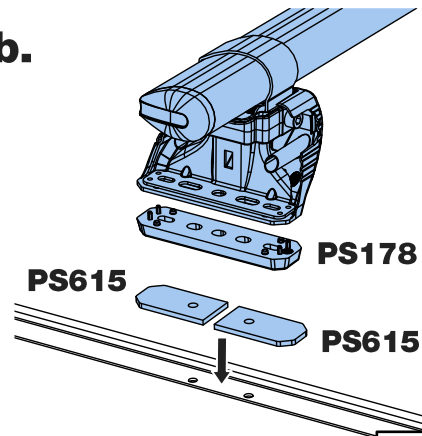


! FORD TRANSIT
CUSTOM 2023-


F

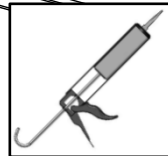

7.

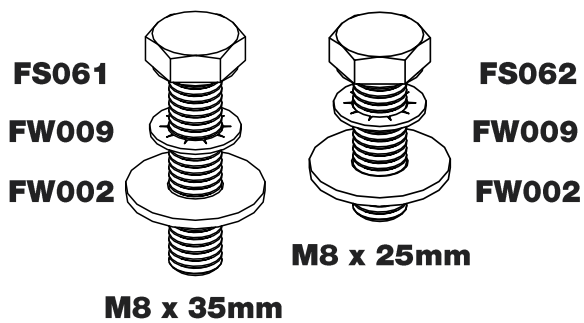

8.

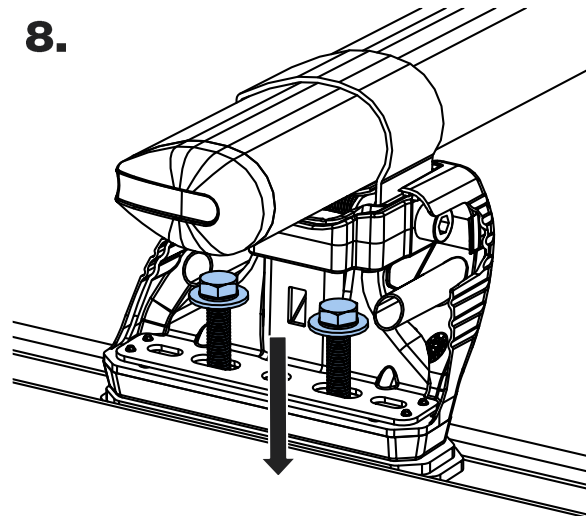

F/R - PS178 + M8 x 35mm
M - M8 x 25mm

